

For use with Security+ 2.0® Garage Door Openers which have a yellow LEARN button and yellow antenna wire, and are manufactured after 2010. The code between the remote control and the receiver changes with each use, randomly accessing over a billion new codes. Refer to your product manual for the location of the LEARN button.

NOTE: Your product may look different than the products illustrated in this manual.



WARNING: This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

! WARNING

To prevent possible serious injury or death from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

PROGRAM USING THE GARAGE DOOR OPENER

- 1 Locate the LEARN button.
- 2 Press and immediately release the LEARN button. The LEARN LED will glow steadily for 30 seconds. Within 30 seconds...
- 3 Press and hold the button on the remote control.

“click”
“click”

Release the button when the garage door opener lights blink or two clicks are heard.

PROGRAM USING THE DOOR CONTROL

- 1 Press the LEARN button on the door control to enter Programming Mode. The command LED will flash once.
- 2 Press the LEARN button again, the LED will flash once. The command LED will flash once again.
- 3 Press and hold the button on the remote control.

“click”
“click”

Release the button when the garage door opener lights blink or two clicks are heard.

TO ERASE ALL CODES FROM MEMORY


When deactivating any unwanted remote control codes, all previous codes will be erased. All additional accessories will also be erased. Refer to your product manual for more information.

- 1 Press and hold the LEARN button on garage door opener or other product until the LEARN LED goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote control you wish to use.


THE REMOTE CONTROL BATTERY

The lithium battery should produce power for up to 5 years. If the battery is low, the remote control's LED will not flash when the button is pressed. To replace battery:


1 Pry open the case first in the middle (1), then at each side (2 and 3) with the visor clip.

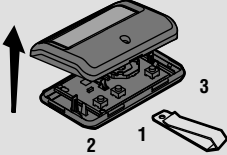


2 Remove the old battery. Dispose of old batteries properly.

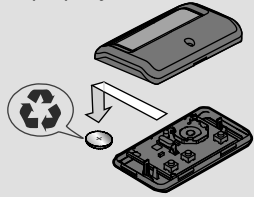

3 Insert the replacement battery positive side up. Replace the battery with only 3V CR2032 coin cell batteries.

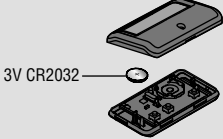


4 Replace the cover.

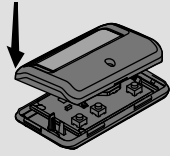

HOW TO USE THE REMOTE CONTROL

 Press and hold the button down until the door or gate starts to move. The remote control will operate from up to 3 car lengths away on typical installations. Installations and conditions vary, contact an installing dealer for more information.

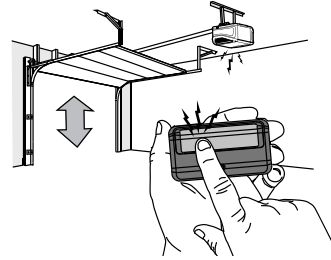

REPLACEMENT PARTS

3V CR2032 Lithium battery	10A20
Visor Clip	29B137

ONE YEAR LIMITED WARRANTY

The Chamberlain Group, Inc. warrants to the first consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.

! WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with 3V CR2032 coin batteries.
- **DO NOT** recharge, disassemble, heat above 212° F (100° C) or incinerate.

NOTICE: This device complies with Part 15 of the FCC rules and Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules and Industry Canada ICES standard. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.