 




INSTRUCTION MANUAL

Standing Fan

Model: SF-1467

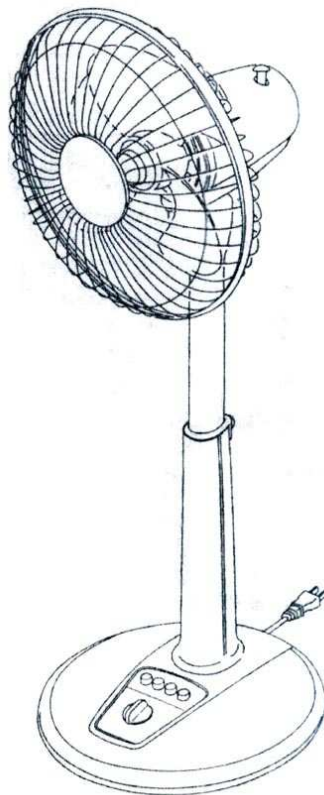

Thank you very much for your purchasing the SUNPENTOWN Stand Fan.
Please read the instructions carefully and keep for future reference.

 
IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this product. Save these instructions for easy reference. When using electrical appliances, basic precautions should always be followed to reduce breakage, risk of fire, electric shock and injury to persons including the following:

- Do not use the fan outdoors.
- Never use the fan unless it is fully assembled.
- Do not use the fan under the following conditions: 1) High temperature of over 104F. 2) High humidity. 3) Steam filled room.
- Do not push finger or any object through the grilles and do not touch the fan blade during use. Be extra cautious when children and infants are around during use.
- Take care that curtains or other objects are not sucked into the fan during operation.
- Do not spray the fan with insecticide, which will damage the housing.
- **WARNING:** The fan has a polarized plug (one blade is wider than the other). To reduce risk of shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. Do not attempt to defeat this safety feature.
- **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- Unplug from wall outlet before servicing.
- To avoid fire or shock hazard, the Stand Fan should **ONLY** be plugged into a polarized 120 Volt AC outlet.

 
 
READ AND SAVE THESE INSTRUCTIONS

PARTS IDENTIFICATION

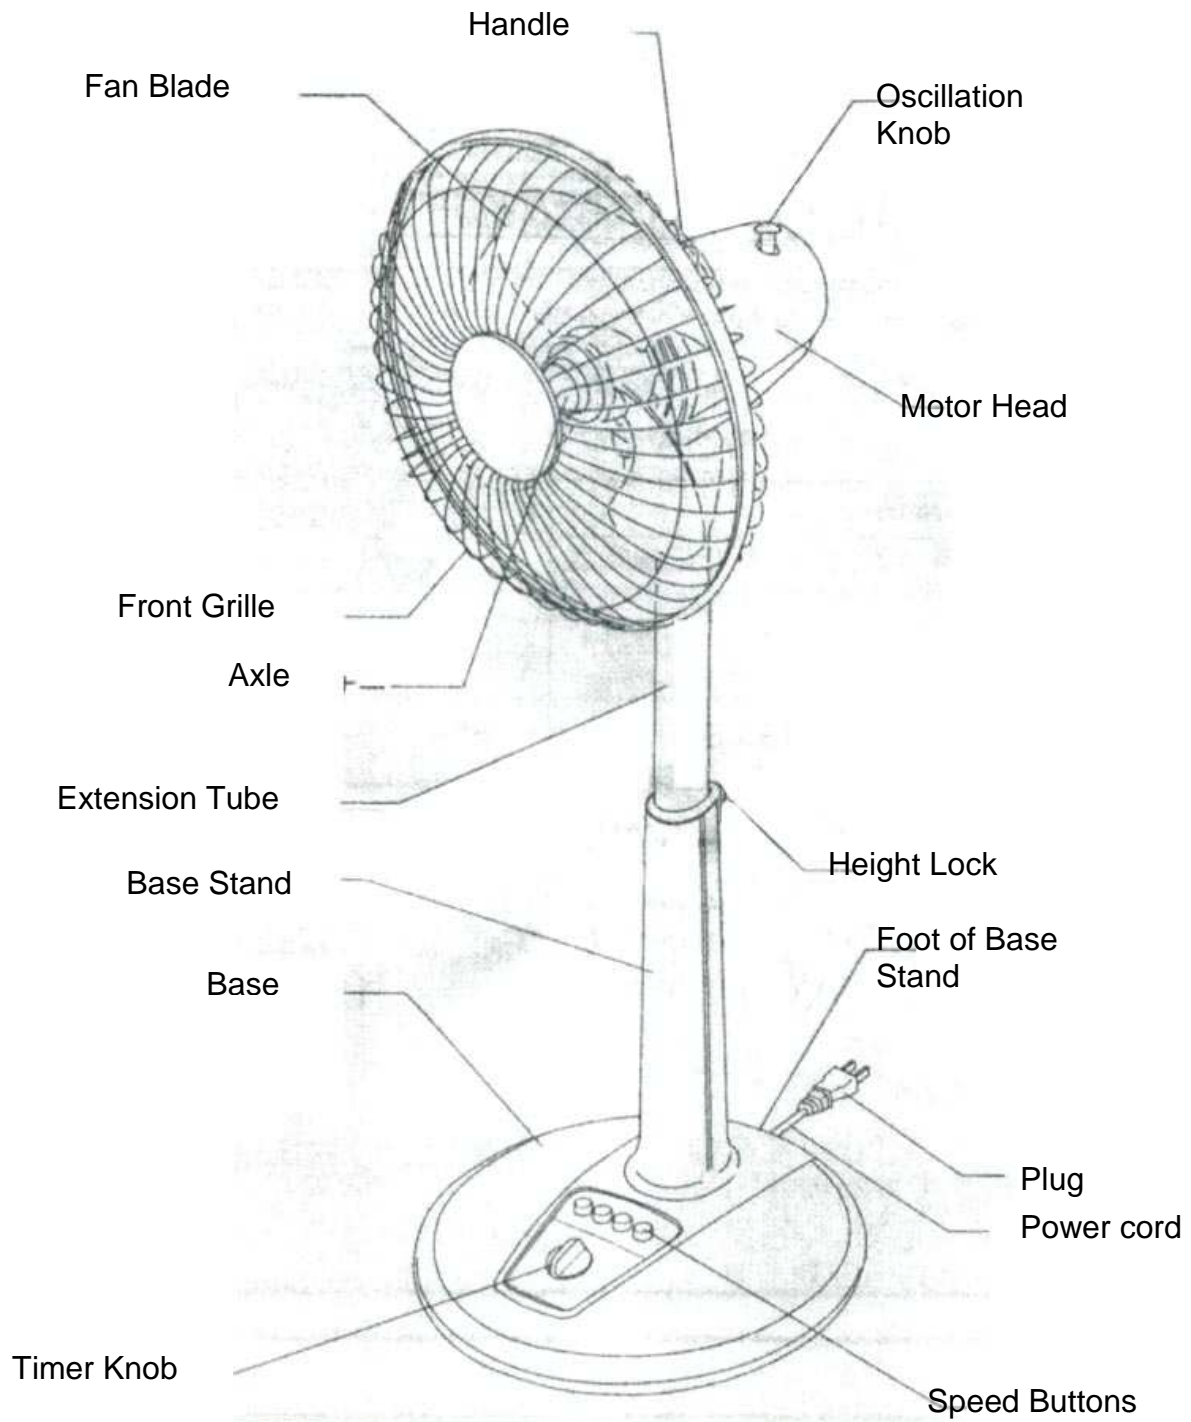

ASSEMBLY INSTRUCTION

A. Base Assembly
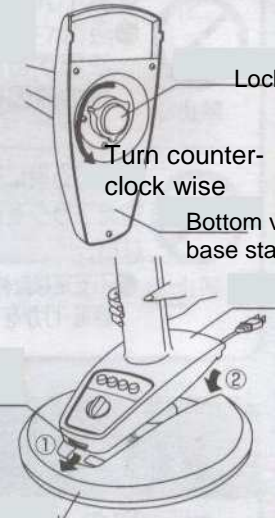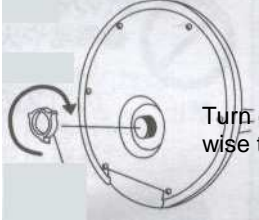
<ol style="list-style-type: none">1. Place Base on flat and sturdy ground.2. Turn the Foot of Base Stand over and remove the Lock Nut by turning counter-clock wise.3. Insert Foot into base by ① aim the clip on the Foot to the groove on the base and ② press down firmly. <p>WARNING During installation, take caution to not damage the insulation of power cord.</p>	 <p>Lock Nut Turn counter-clock wise Bottom view of base stand</p> <p>① ②</p>
<ol style="list-style-type: none">4. Replace Lock Nut and turn clock-wise until tightened.	 <p>Turn clock wise to lock</p>
<p>NOTE: To disassemble:</p> <ol style="list-style-type: none">1. Remove Lock Nut by turning counter-clock wise.2. Lift the rear of the Foot up and pull backwards.3. Replace the Lock Nut back onto the Foot.	

WARNING!

Do not stand immediately above the unit when adjusting height, may cause collision to body.

 
 
 



WARNING!





 
Do not plug in power source before the unit is fully assembled. May cause electric shock.

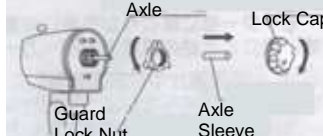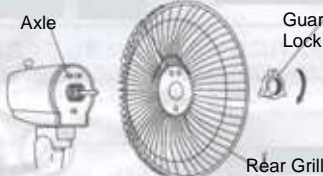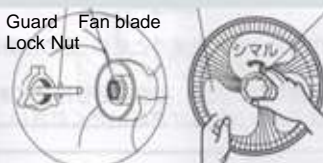

B. Blade Assembly

<p>1. First, remove the following parts from the axle on the motor head. Please remove before installing grilles: Guard Lock Nut, Axle Sleeve and Lock Cap.</p>	
<p>2. Place the Rear Grille on the axle. 3. Place the Guard Lock Nut and tighten by turning clockwise.</p>	
<p>4. Place the Axle Sleeve on the Axle. 5. Insert the Fan Blade on the Axle 6. Place the Lock Cap and tighten by turning clockwise.</p>	
<p>7. Install the Front Grille.</p> <ul style="list-style-type: none"> Align the clip on the top of the front grill and clip it to the rear grille. Press down firmly at the six points as indicated. Snap close the bottom clip 	

OPERATING INSTRUCTIONS
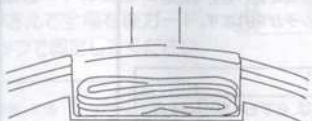
<p>Fan Head Oscillation: Press down the Oscillation knob.</p>	
<p>Fixed Direction: Pull the Oscillation knob up.</p>	
<p>The vertical and horizontal angles of the fan head can be manually adjusted</p>	
<p>To Adjust the height of the stand: Press down on the Height Lock and adjust height. Release when desired height is reached.</p>	
<p>The base includes a section to store the power cord, when unit is not in use.</p>	
<p>To operate timer-off, turn Timer Dial accordingly. To operate continuously, turn Timer Dial to ON position.</p>	
<p>Fan Speed selection: 0 = OFF L = Low Fan Speed M = Medium Fan Speed H = High Fan Speed</p>	

MAINTENANCE

1. This product should be cleaned and checked on a regular basis.
2. Make sure the fan blade is clean at all times, to prevent color fading and damage.
3. For storage, clean and replace unit back in original packaging. Store in a cool, dry place.
4. To clean housing, wipe with clean damp cloth.
5. Never spray water directly onto the unit or immerse the unit/cord in water.
6. Do not use harsh chemicals such as acid, alcohol and the such on any part of the fan.

SPECIFICATION

Power Input: 120V / 60Hz

Power Consumption: High = 49W / Med = 40W / Low = 33W

R.P.M.: High = 1250 / Med = 1030 / Low = 850

Noise Level: 66 Db

Package Dimension: 16" x 10.7" x 4.25"



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

Sunpentown Int'l Inc.
14625 Clark Avenue, City of Industry, CA 91745
Tel:626-336-2299 Fax: 626-336-7116
service@sunpentown.com
www.sunpentown.com