



Air Fryer Oven Product Guide (MAF105BKD0)

Introduction

This air fryer is used for cooking food, such as meat, fish, side dishes, and vegetables. This appliance is intended for normal household use only. It is not intended for use in commercial or retail environments. Furthermore, the air fryer may not be used outdoors, or in tropical climates. This air fryer meets all relevant standards in relation to CE conformity. In the event of any modification to the air fryer not approved by the manufacturer, compliance with these standards is no longer guaranteed. The manufacturer does not accept any liability for any resulting damage or faults in such cases.

Please observe the regulations and laws in the country of use.



Before using your air fryer, please read this manual carefully. Incorrect operation can result in serious damage or injury.

Need to Contact Us?

WEBSITE:	www.newair.com
SUPPORT EMAIL ADDRESS:	support@newair.com
TELEPHONE NUMBER:	1-855-963-9247

Manufactured For:
MC Appliance Corp.
940 N. Central Ave.,
Wood Dale, IL 60191 USA

Magic Chef is a registered trademark of
CNA International, Inc. d/b/a
MC Appliance Corporation.
All rights reserved.

NewAir, LLC
6600 Katella Ave, Cypress, CA 90630
Comments/Questions:
Support@newair.com

Contents

Register Your Product Online.....	4
Important Safety Precautions	5
Getting to Know Your Magic Chef® Air Fryer.....	8
Cooking with the Magic Chef® Air Fryer	12
Caring for Your Air Fryer	13
Troubleshooting & Common Questions	14
Limited Manufacturer’s Warranty	16

Product Specifications

MODEL:	MAF105BKD0
POWER SUPPLY:	120V/60Hz
POWER CONSUMPTION:	1700W
TEMPERATURE RANGE:	150° F - 400° F
TIMER FUNCTION:	60 minutes
OVEN CAPACITY:	10.5 Quarts
PRODUCT DIMENSIONS:	14.00”D x 12.50”W x 15.50”H

Register Your Product Online

Register Your Magic Chef® Product Online Today!

Take advantage of all the benefits product registration has to offer:



Service and Support

Diagnose troubleshooting and service issues faster and more accurately



Recall Notifications

Stay up to date for safety, system updates and recall notifications



Special Promotions

Opt-in for Magic Chef® promotions and offers

Registering your product information online is safe & secure and takes less than 2 minutes to complete:

newair.com/register

Alternatively, we recommend you attach a copy of your sales receipt below and record the following information, which is located on the manufacturer's nameplate on the rear of the unit. You will need this information if it becomes necessary to contact the manufacturer for a service inquiry.

Date of Purchase: _____

Serial Number: _____

Model Number: _____

Important Safety Precautions

Before using your air fryer for the first time, read the following instructions and pay attention to all warnings, even if you are familiar with handling electronic devices. Store these operating instructions in a safe place for future reference. If you decide to sell the air fryer, or pass it on, always include these instructions. They are an integral part of the product.

WARNING

- NEVER SUBMERGE the unit in water, as it contains electrical components and heating elements. Do not rinse the unit under the tap.
- TO AVOID ELECTRICAL SHOCK, DO NOT put liquid of any kind into the unit, especially the parts containing the electrical components.
- If the plug does not fully fit into the outlet, reverse the plug and try again. If it still does not fit, contact customer service at support@newair.com, as there may be an issue with your power cord.
- DO NOT ATTEMPT to modify the plug in any way.
- MAKE SURE the appliance is plugged into a wall socket. Always make sure that the plug is inserted into the wall socket properly.
- To prevent food contact with the interior upper screen and heat element, DO NOT OVERFILL the inside of the unit when cooking.
- DO NOT COVER the intake or exhaust air vents while the air fryer is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.
- NEVER POUR oil into the inside of the air fryer, or any accessories. Fire and personal injury could result.
- While cooking, the internal temperature of the unit reaches several hundred degrees. TO AVOID PERSONAL INJURY, never place hands inside the unit unless it is thoroughly cooled down.
- This appliance is NOT INTENDED FOR USE by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are UNDER THE SUPERVISION of a responsible individual or have been given proper instructions on using the appliance. This appliance is NOT INTENDED FOR USE by children.
- When cooking, DO NOT PLACE the appliance against a wall or against other appliances. Leave at least 5" (inches) of free space on the back and sides and above the appliance.
- DO NOT place anything on top of the appliance.
- DO NOT USE this unit if the plug, the power cord, or the appliance itself is damaged in any way. If it is, contact customer service immediately at support@newair.com.
- DO NOT PLACE the unit on stovetop surfaces.
- If the power cord is damaged, YOU MUST HAVE IT REPLACED by the manufacturer. Please contact customer service immediately at support@newair.com.
- Keep the appliance and its power cord OUT OF REACH of children when it is in operation or in cooldown mode.

- KEEP THE POWER CORD AWAY from hot surfaces. DO NOT PLUG in the power cord or operate the unit controls with wet hands.
- NEVER CONNECT this appliance to an external timer switch or separate remote controlled power system (such as a dimmer switch).
- NEVER USE this appliance with an extension cord of any kind.
- DO NOT OPERATE this appliance on or near combustible materials such as tablecloths or curtains.
- NEVER use the air fryer oven door as a place to rest hot food or accessories, as they will likely damage the door.
- DO NOT USE the air fryer for any purpose other than described in this manual.
- NEVER OPERATE the appliance unattended.
- When in operation, the air is released through the exhaust vent. KEEP YOUR HANDS AND FACE at a safe distance from the exhaust vent. Avoid the exhaust outlet even when inserting or removing food and/or accessories. Never cover the vents for any reason.
- The unit's outer surfaces may become hot during use. Any accessories (such as the rotating mesh basket) WILL BE HOT. Wear oven mitts, or use the "grabber" tool when handling hot components.
- Should the unit ever emit black smoke, UNPLUG IMMEDIATELY and wait for smoking to stop before opening the door or removing air fryer contents.
- When the time has run out, cooking will stop but the fan WILL CONTINUE RUNNING for 20 more seconds in cooldown mode.
- Always operate the appliance on a horizontal surface that is level, stable, and noncombustible.
- This appliance is intended for normal household use only. It is not intended for use in commercial or retail environments.
- If this air fryer is used improperly or for professional or semi-professional purposes, or if it is not used according to the instructions in the user manual, the warranty becomes invalid, and we will not be held liable for damage.
- Always unplug the air fryer after use.
- When you are finished cooking, always let the air fryer cool down for approximately 30 minutes before handling, cleaning, or storing.
- Make sure the ingredients prepared in this unit come out cooked to a golden-yellow color rather than dark or brown. It is not recommended that you eat any burnt food.



CAUTION: FIRE HAZARD. Never use the air fryer in the vicinity of flammable materials, such as curtains, drapes, etc.

Overheating Protection

Should the inner temperature control system fail, causing the unit to overheat, the overheating protection system will be activated, and the unit will shut off. Should this happen, unplug the power cord. Allow time for the air fryer to cool completely before restarting or storing. If this issue persists, contact customer service at support@newair.com.

Automatic Shut-off

The appliance has a built-in “shut-off” device that will automatically shut down the unit when the timer reaches zero. You can manually end the cooking process by pressing the power button while the unit is running. Note that the fan will continue running for another 20 seconds in cooldown mode.

Electric Power

If the electrical circuit is overloaded with other appliances, your air fryer may not operate properly. The air fryer should be operated on a dedicated electrical circuit.


Electromagnetic fields (EMF)

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance will be safe to use based on the scientific evidence available today.

SAVE THESE INSTRUCTIONS - FOR HOUSEHOLD USE ONLY

Getting to Know Your Magic Chef® Air Fryer

Air Fryer Parts & Accessories

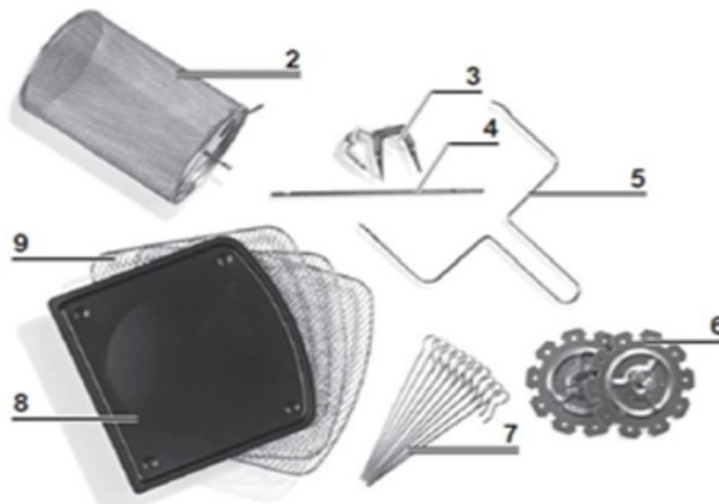

- | | | | |
|----|---------------------------------------|----|------------------------------|
| 2. | Rotating basket (sold separately) | 6. | Skewer racks x2 (sold sep.) |
| 3. | Rotisserie chicken fork (sold sep.) | 7. | Skewers x10 (sold sep.) |
| 4. | Rotisserie shaft (sold sep.) | 8. | Oil drip tray |
| 5. | Rotisserie "grabber" tool (sold sep.) | 9. | Cooking/dehydrating racks x3 |

2. Rotating Basket (sold separately)

The rotating basket is great for fries and roasted nuts, as it helps cook the food evenly without having to flip or turn it manually. Use the rotisserie "grabber" tool to remove the rotating basket safely.

3 & 4. Rotisserie Chicken Fork & Rotisserie Shaft (sold separately)


Use the rotisserie fork and shaft for roasts and whole chickens. Force the shaft lengthwise through the center of the meat. Slide the forks onto the shaft from either end into the meat, then lock them in place with the set screws. There are indentations on the shaft for the set screws to screw into. You can adjust the screws closer to the middle of the shaft if needed, but never outward towards the ends of the shaft. NOTE: Make sure the roast or chicken is not too large to rotate freely within the air fryer. The maximum size roast will be roughly 4.5 to 5 pounds.

5. Rotisserie "Grabber" Tool (sold separately)

Use the rotisserie "grabber" to remove cooked roasts and chickens that have been prepared using the rotisserie shaft and/or chicken forks, or anything else that you cannot remove by hand with an oven mitt. Place the ends of the "grabber" under the rotisserie shaft, then lift the left side, then the right side, slowly removing the shaft from the rotisserie slot and pulling your food out of the oven.

6 & 7. Skewer Racks & Skewers (sold separately)

The skewers are great for making kabobs of any kind. To assemble, attach the skewer racks to the rotisserie shaft using the set screws on the racks. There are indentations on the shaft for the set screws to screw into. You can adjust the screws closer to the middle of the shaft if needed, but never outward towards the ends of the shaft. Insert the skewers through each of the skewer rack openings, making sure that the skewer is parallel to the rotisserie shaft.

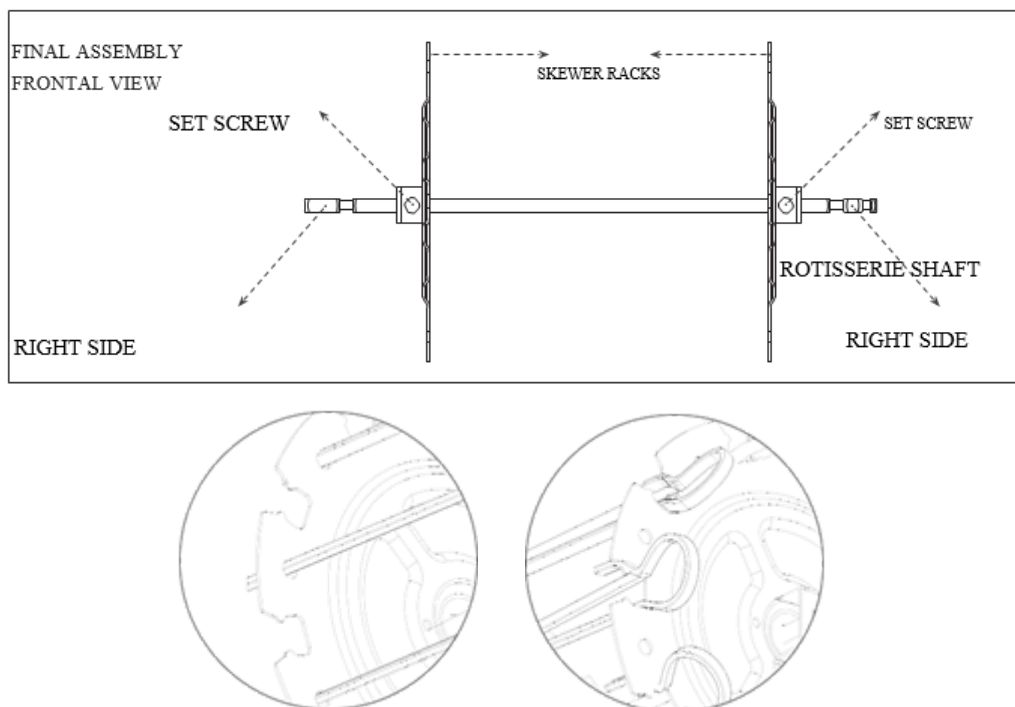

8. Oil Drip Tray

The oil drip tray will catch any oil or scraps that fall from the cooking food. Once completely cool, the drip tray can be removed from the air fryer and cleaned. As long as the drip tray is inside the unit during cooking, it will be much easier to keep the inside of your air fryer clean!

9. Cooking/Dehydrating Racks

These racks serve as your primary cooking trays, but can be used for dehydrating as well. (See below for dehydrating instructions). These racks allow you to cook multiple trays of food at the same time, and they help circulate the air well.

Please make sure that your air fryer has been shipped with the necessary components. Any accessory marked “sold separately” must be purchased separately from the manufacturer. Contact customer service if you have any questions about purchasing accessories.


IMPORTANT

Check all included parts and accessories carefully before use. If any part is missing or damaged, do not use the product, but contact customer service immediately at support@newair.com.

WARNING:

Forks, skewers, and other metal parts within this unit are sharp and will get extremely hot during use. Great care should be taken to avoid personal injury. Wear oven mitts or gloves.

Control Panel

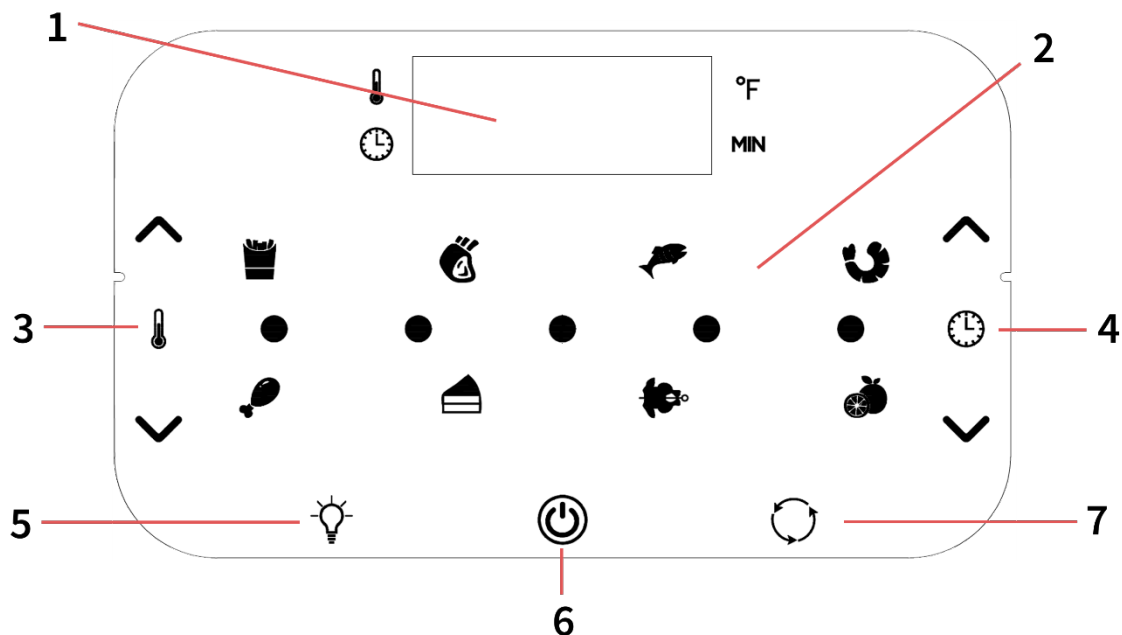

1. LED Digital Display

The digital display shows both the time and temperature settings. During cooking, the display will switch between set temperature and time remaining. Otherwise, it will display your timer or temperature options while setting them.

2. Cooking Presets

Selecting any of these will set the time and temperature automatically to a default setting for that particular food. You may override these presets with the time and temperature settings (3 & 4). It is important to note that the dehydrating preset will operate differently. In dehydrating mode, the temperature range is limited between 85 and 175 degrees.

3. Temperature Control

These buttons enable you to raise or lower the cooking temperature in 5 degree increments, from 140 to 400 degrees. You can adjust the temperature setting while the unit is actively cooking. In dehydrating mode, the temperature range is limited between 85 and 175 degrees.

4. Timer Control

These buttons enable you to raise or lower the cooking time in one minute increments, up to 60 minutes. You can adjust the timer setting while the unit is actively cooking. In dehydrating mode, the timer can be set between 2 and 24 hours, changed in 30 minute increments.

5. Internal Light

Press this button to turn on the light inside of the unit. While the unit is running, the light should help you check on the progress of your food. Note: If the door is opened, the light will illuminate either way. Note also that opening the door pauses the cooking process.

6. Power/Start-Stop Button

Once the unit is plugged in, the power button will light up. Pressing the power button once will light up the whole panel, allowing you to start cooking and change your settings. Pressing the power button a second time (without changing any settings) will start the cooking process at the default temperature of 370 degrees and default time of 15 minutes. Pressing the power button at any time during the cooking process will turn off the display and put the unit in cooldown mode for 20 seconds.

7. Rotisserie Function

Pressing this button will begin rotisserie rotation. Press it again to turn the rotisserie off again.

Cooking with the Air Fryer Oven

Before First Use

1. Read all materials, warning stickers and labels.
2. Remove all packing materials, labels, and stickers.
3. Wash all parts and accessories used in the cooking process with warm soapy water.
NOTE: Only the accessories are dishwasher safe. The air fryer oven and oven door are not dishwasher safe.
4. Place the air fryer oven on a stable, level surface.

Cooking Tips

1. Flip your food half way through the cooking time for more consistent results. You can set the timer to half the intended time so you know exactly when to flip the food, or simply open the air fryer door half way through the total cooking time, and rotate the food before resuming the cooking process.
2. Add 3 minutes to the cooking time if the unit is cold, to allow for the target temperature to be reached before the food starts cooking.
3. Note that foods that are smaller in size usually require a slightly shorter cooking time than large ones. Large quantities of food only require a slightly longer cooking time than smaller quantities.
4. Spraying a bit of oil on your food is suggested for an even crispier end result. Add oil just before beginning the cooking process.
5. You can treat the air fryer oven just like your air fryer, so your favorite air fryer recipes should work just as well in this unit!
6. Use pre-made dough to prepare foods with fillings quickly and easily. Pre-made dough also requires a shorter cooking time than homemade dough.
7. Use a baking tin or air fryer dish when baking a cake or quiche. These are also recommended for any fragile foods, or foods with fillings.
8. You can use this air fryer oven to reheat foods. We recommend setting the temperature to 300 degrees and checking the food until it's heated to your liking.

IMPORTANT

During the cooking process, all parts and accessories will become very hot. When removing cooked or hot food, use oven mitts or the rotisserie “grabber” (sold separately) to avoid burns. Do not set hot parts directly onto a countertop, only on a stovetop or trivet.

Caring for Your Air Fryer

Cleaning

Clean your air fryer after each use. All internal parts and accessories (some sold separately) are made of stainless steel or teflon coated metal, and are all dishwasher safe—but never use abrasive cleaning materials or utensils on these surfaces. If too much food is stuck to any accessories, soak overnight to make cleaning with normal soap and water easier.

1. Remove the power cord from the wall socket and be certain the appliance is thoroughly cooled before cleaning.
2. Wipe the outside of the appliance with a warm moist cloth and mild detergent. Do not soak or submerge the unit in water or wash in the dishwasher.
3. Clean the inside of the appliance with hot water, a mild detergent, and a non-abrasive sponge.
4. If necessary, remove unwanted food residue from the upper screen (below the heating coil and fan) with a cleaning brush.
5. Be sure the unit is completely dry before plugging in and using again.

Storage

1. Unplug the appliance and let it cool down thoroughly.
2. Make sure all components are clean and dry.
3. Place the appliance in a clean, dry place when not in use. Cover to prevent dust buildup.

Environmental and Disposal Information



When this symbol appears on a product, this indicates that the product should not be treated as normal waste. All electrical and electronic devices must be disposed of separately from household waste at designated disposal points. Disposal of electronic waste in this manner will prevent harm to the environment and human health hazards. For further information regarding disposal of electronic waste in accordance with local laws, contact your local authorities, e-waste disposal office, or the company you bought the appliance from.

Dispose of the packaging in an environmentally compatible manner. Cardboard can be recycled both in municipal trash and local recycling centers. Films and plastic used for packaging the device can also be recycled.

Troubleshooting & Common Questions

PROBLEM	POSSIBLE CAUSE	SOLUTION
The air fryer does not work	<ul style="list-style-type: none"> • The unit is not plugged in • The unit is on, but you have not started the cooking process yet 	<ul style="list-style-type: none"> • Plug power cord into a wall socket • With basket in place, set the temperature and time, or choose a preset. Check that the door is closed, then press the Start-Stop button
My food is not cooked	<ul style="list-style-type: none"> • The trays or other accessories are overloaded • The temperature is set too low 	<ul style="list-style-type: none"> • Use smaller batches for more even frying • Raise temperature and continue cooking
My food is not cooked evenly	<ul style="list-style-type: none"> • The food wasn't turned half way through the cooking process 	<ul style="list-style-type: none"> • Turn or stir your food half way through the cooking process
There is white smoke coming from the air fryer	<ul style="list-style-type: none"> • There is oil on the food that is burning off • Accessories have excess grease residue from previous cooking 	<ul style="list-style-type: none"> • Use a paper towel to collect excess grease from food or accessories. • Clean accessories after each use
French fries are not fried evenly	<ul style="list-style-type: none"> • The wrong type of potato is being used • Potatoes were not rinsed properly during preparation 	<ul style="list-style-type: none"> • Use only fresh, firm potatoes • Cut potatoes into sticks and pat dry to remove excess starch

1. Can I prepare foods other than fried dishes with my air fryer?

You can prepare a variety of dishes, including steaks, pork chops, burgers, and baked goods.

2. Is the air fryer good for making or reheating soups and sauces?

No, liquids should never be prepared in the air fryer.

3. Does the unit need time to heat up?

Pre-heating is needed when you are cooking from a “cold start.” Add 3 minutes to the cooking time to compensate.

4. Is it possible to shut off the unit at any time?

Yes, just press the Power Button once or open the door.

5. Can I check the food during the cooking process?

Yes, you can press the Start-Stop button at any time to pause the cooking process, or just open the door.

6. Is the air fryer dishwasher safe?

Only the accessories are dishwasher safe. The unit itself containing the heating coil and electronics should never be submerged in liquid of any kind or cleaned with anything more than a hot, moist cloth or nonabrasive sponge with a small amount of mild detergent.

7. What happens if the unit still does not work after I have tried all the troubleshooting suggestions?

Never attempt a home repair, as it will void your warranty, and could cause injury. Contact customer service at support@newair.com if any issues arise.

Limited Manufacturer's Warranty

This appliance is covered by a limited manufacturer's warranty. For one year from the original date of purchase, the manufacturer will repair or replace any parts of this appliance that prove to be defective in materials and workmanship, provided the appliance has been used under normal operating conditions as intended by the manufacturer.

Warranty Terms

During the first year, any components of this appliance found to be defective due to materials or workmanship will be repaired or replaced at the manufacturer's discretion, and at no charge to the original purchaser. The purchaser will be responsible for any removal or transportation costs.

Exclusions

The warranty will **not** apply if the damage is caused by any of the following:

- Power failure
- Damage in transit or when moving the appliance
- Improper power supply, such as low voltage, defective household wiring, or inadequate fuses
- Accident, alteration, misuse, or abuse of the appliance, such as using non-approved accessories, inadequate air circulation in the room or abnormal operating conditions (extreme temperatures)
- Use in commercial or industrial applications
- Fire, water, damage, theft, war, riot, hostility, or acts of God, such as hurricanes, floods, etc.
- Use of force or damage caused by external influences
- Partially or completely dismantled appliances

Obtaining Service

When making a warranty claim, please have the original bill of purchase with purchase date available. The purchaser will be responsible for any removal or transportation costs. Replacement parts and/or units will be new, remanufactured, or refurbished and are subject to the manufacturer's discretion. Do not use an unauthorized person to replace or fix a damaged main cord.

For technical support and warranty service, please email support@newair.com