

SKU # 1001 777 445 Model # TY448-1611

## **USE AND CARE GUIDE**

## 36in Lighted LED Acrylic Santa with "HOHOHO"



#### THANK YOU

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 36in Lighted LED Acrylic Santa with "HOHOHO". We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

#### Guarantee

#### What is Covered

The product is intended for residential seasonal use for approximately 90 days per year. This product is covered by a 90 day limited guarantee due to defects in material and workmanship. Return the product with purchase receipt to the location of purchase for refund within 90 days of purchase.

#### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday


1-877-527-0313 HOMEACCENTSHOLIDAY.COM

## **Pre-Assembly**

### PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return to place of purchase with proof of purchase receipt. Assembly of this product may require more than one person.

### **PACKAGE CONTENTS**

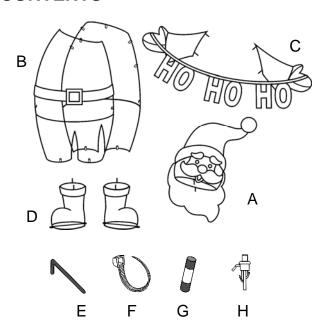


| Package Contents/Parts List |             |          |
|-----------------------------|-------------|----------|
| Part                        | Description | Quantity |
| Α                           | Head        | 1        |
|                             | Halves of   | 2        |
| В                           | Body        | 2        |
| С                           | Arms        | 2        |
| D                           | Feet        | 2        |

| Package Contents/Parts List |               |          |  |
|-----------------------------|---------------|----------|--|
| Part                        | Description   | Quantity |  |
| Е                           | Ground Stakes | 4        |  |
| F                           | Plastic Tie   | 10       |  |
| G                           | Spare Fuse    | 1        |  |
| Н                           | Spare Bulb    | 2        |  |



## **Assembly**


## **Assembling the Acrylic Santa**

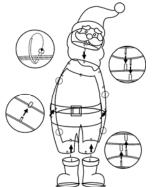

Step1. Align the two Halves of Body (B) with each other and Insert the rods on one half into the matching hole in the other half then fasten with Plastic Ties (F). Insert the rods of the Feet (D) into the matching holes on the bottom of the Body (B) then fasten them together with Plastic Ties. (FIG.1)

FIG.1

Step 2. Stand the Body section in an upright position. Insert the metal rods of the Head (A) into the matching holes on the top of the Body (B) and fasten them together with Plastic Ties. (FIG.1)

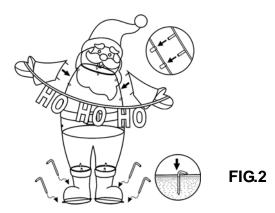

Step 3. Insert the metal rods on each of the Arm (C) into the matching holes on either side of the Body (B) then fasten together with Plastic Ties (F). (FIG.2)

Step 4. Secure the Santa to the ground by using the Ground Stakes (E). (FIG.2)

# **Pre-Operation**

**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

**CAUTION:** The lighting string on this product is rated at 4.8 Watts (0.04 Amps). Do not overload. Do not connect to other lighting strings, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Return to place of purchase or consult a certified Electrician if the product has cuts, damage or frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

# Care and Cleaning

- a. Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product, wire and lighting connections. If the product is placed somewhere other than the ground it should be well secured and stable.
- b. Wipe the product with a damp cloth and allow the product to dry before storing.
- c. Store the product neatly in a cool, dry location protected from sunlight.

## FOR INDOOR AND OUTDOOR USE