 










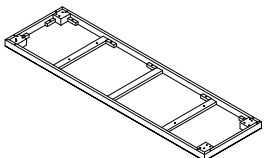
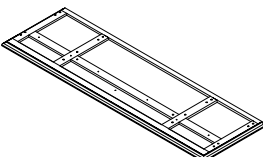

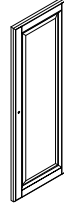
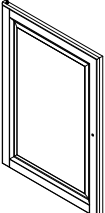
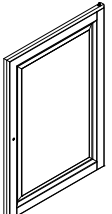
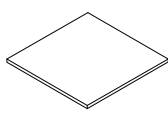
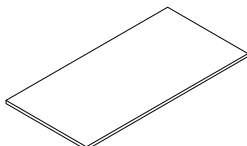
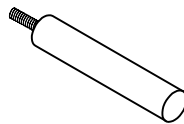
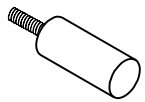
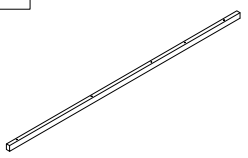


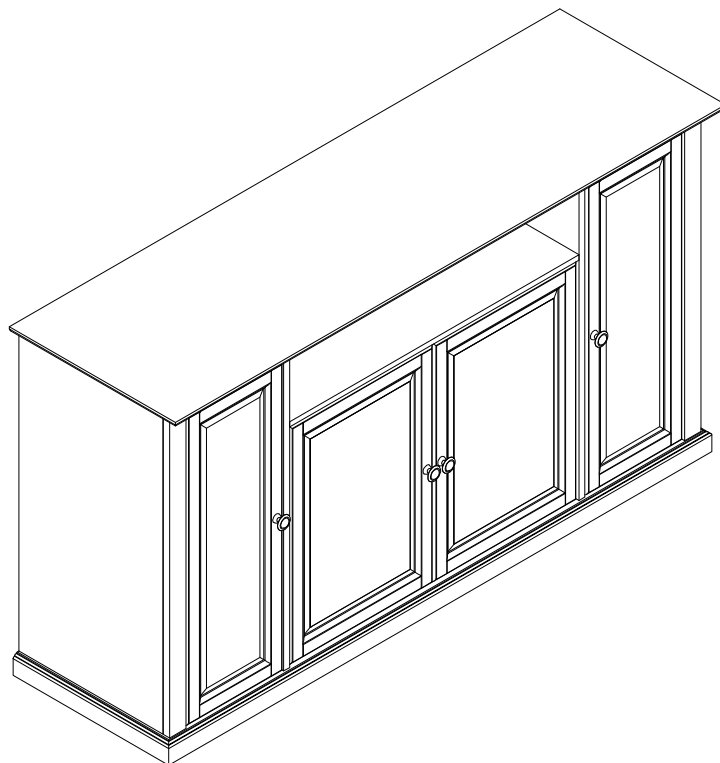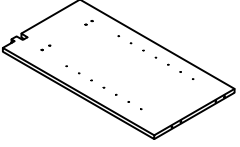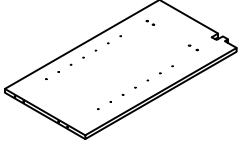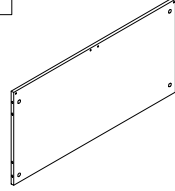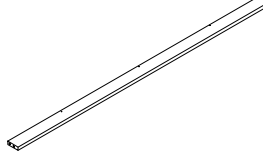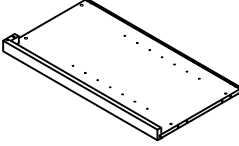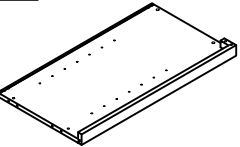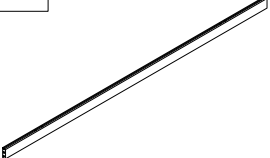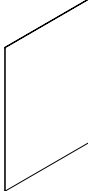

60 " TV Stand
CF100160

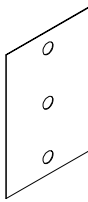

PARTS LIST

 
<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Left Vertical Panel 1 PC</p>	<p>Right Vertical Panel 1 PC</p>	<p>Fixed Shelf 1 PC</p>	<p>Front Top Rail 1 PC</p>	<p>Left Panel 1 PC</p>
<p>F</p> 	<p>G</p> 	<p>H</p> 	<p>I</p> 	<p>J</p> 
<p>Right Panel 1 PC</p>	<p>Back Rail 2 PCS</p>	<p>Back Panel 2 PCS</p>	<p>Middle Back Panel 1 PC</p>	<p>Back Vertical Rail 2 PCS</p>
<p>K</p> 	<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>O</p> 
<p>Bottom Panel 1 PC</p>	<p>Top Panel 1 PC</p>	<p>Left Door Panel 1 PC</p>	<p>Right Door Panel 1 PC</p>	<p>Left Middle Door Panel 1 PC</p>
<p>P</p> 	<p>Q</p> 	<p>R</p> 	<p>S</p> 	<p>T</p>  <p>(Use Only With Bun Feet)</p>
<p>Right Middle Door Panel 1 PC</p>	<p>Adjustable Shelf 4 PCS</p>	<p>Middle Adjustable Shelf 1 PC</p>	<p>Long Support Leg 1 PC</p>	<p>Short Support Leg 1 PC</p>
<p>U</p> 				
<p>Support Rail 1 PC</p>				

HARDWARE LIST

<p>#1</p> 	<p>#2</p> 	<p>#3</p> 	<p>#4</p> 	<p>#5</p> 
<p>Cam Lock 20 PCS (Extra 2)</p>	<p>Cam Bolt 20 PCS</p>	<p>Wood Dowel 42 PCS</p>	<p>Screw 9 PCS (Extra 1)</p>	<p>Hex Socket Head Bolt 8 PCS</p>
<p>#6</p> 	<p>#7</p> 	<p>#8</p> 	<p>#9</p> 	<p>#10</p> 
<p>Barrel Nut 8 PCS</p>	<p>Shelf Holder 20 PCS</p>	<p>Knob 4 PCS</p>	<p>Round Head Bolt 4 PCS</p>	<p>Magnet 2 PCS</p>
<p>#11</p> 	<p>#12</p> 	<p>#13</p> 	<p>#14</p> 	<p>#15</p>  <p>(Spare Part)</p>
<p>Double Magnet 1 PC</p>	<p>Round Head Screw 6 PCS (Extra 1)</p>	<p>Allen Wrench 1 PC</p>	<p>Safety Strap Kit 1 SET</p>	<p>Pin Hinge (Extra 4)</p>

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.

 


Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 
Step 1. Insert cam bolts (part #2) into bottom panel (part K), top panel (part L) and panels (parts A, B, E & F) using phillips head screwdriver.

NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

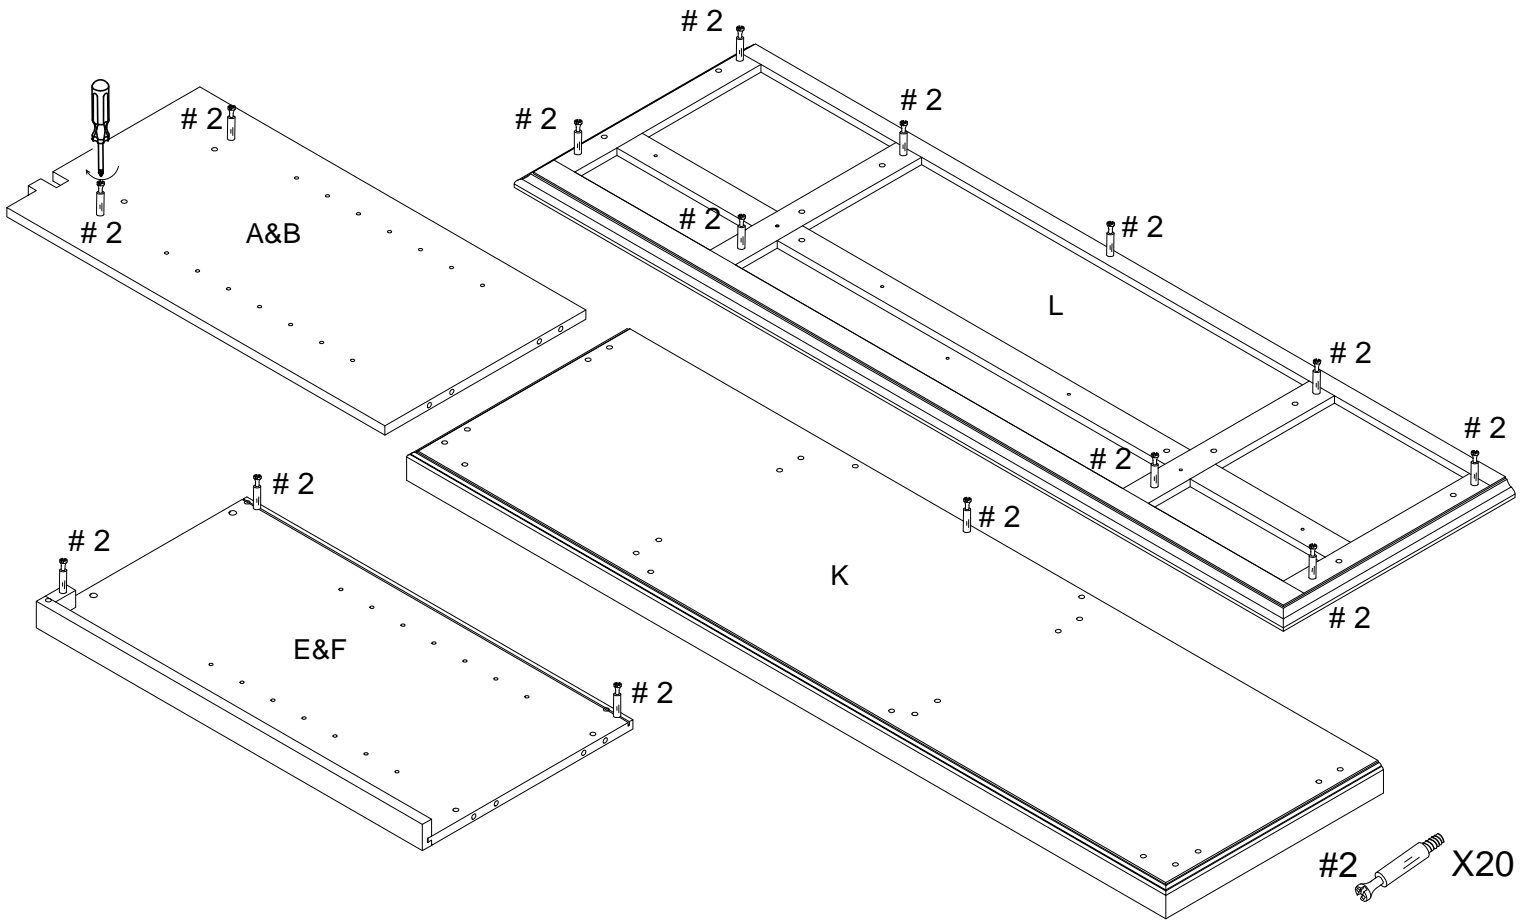 


Step 2. Attach panels (parts A & B) to fixed shelf (part C) using cam locks (part #1) and wood dowels (part #3).

NOTE: Cam locks must rotate a full 180°. See pictured insert.

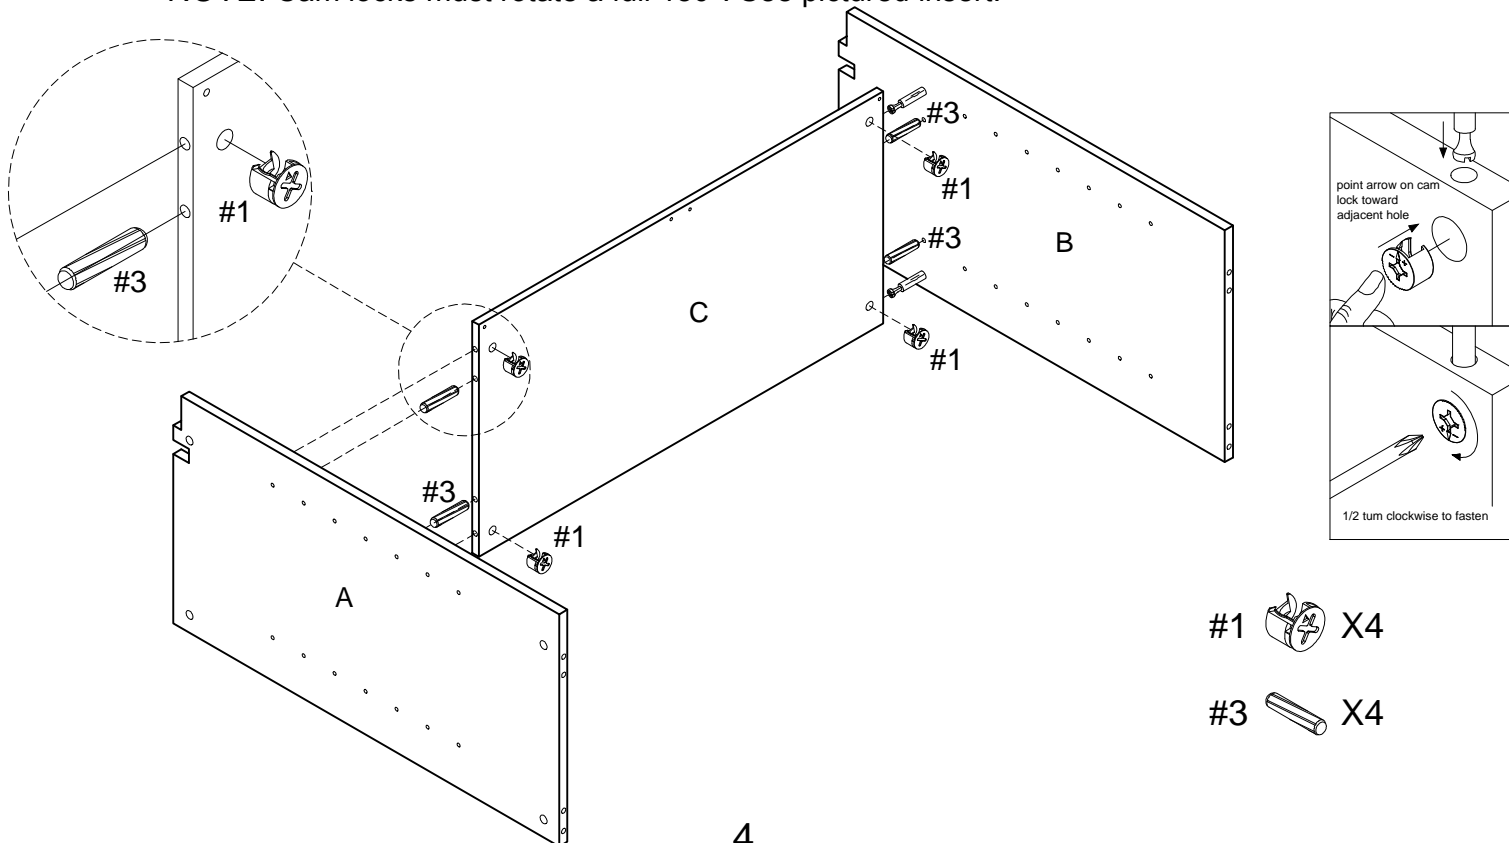

Step 3. Carefully turn unit upright. Attach front top rail (part D) to panels (part A & B) using wood dowels (part #3), screws (part #4) and phillips head screwdriver.

 
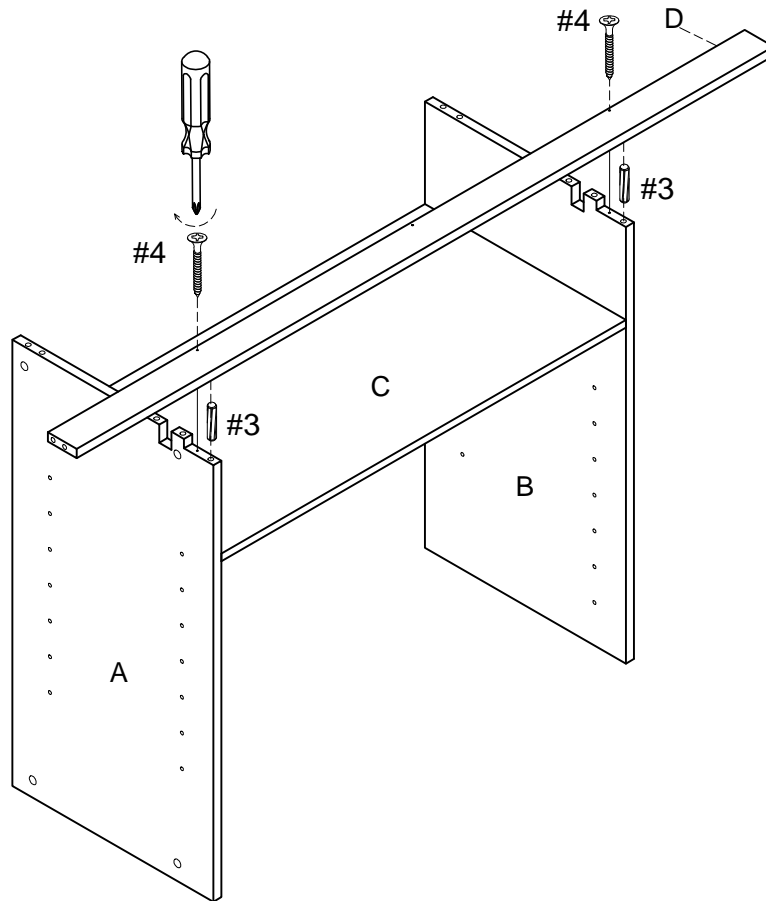 


#3  X2

#4  X2

Step 4. Carefully turn unit upside down on a soft flat surface, such as carpet, as shown below. Attach left panel (part E) to front top rail (part D) using cam lock (part #1) and wood dowel (part #3).

NOTE: Cam locks must rotate a full 180°. See pictured insert.

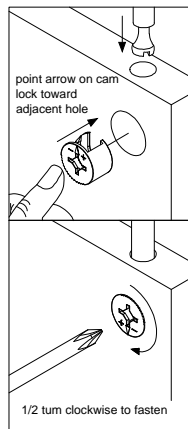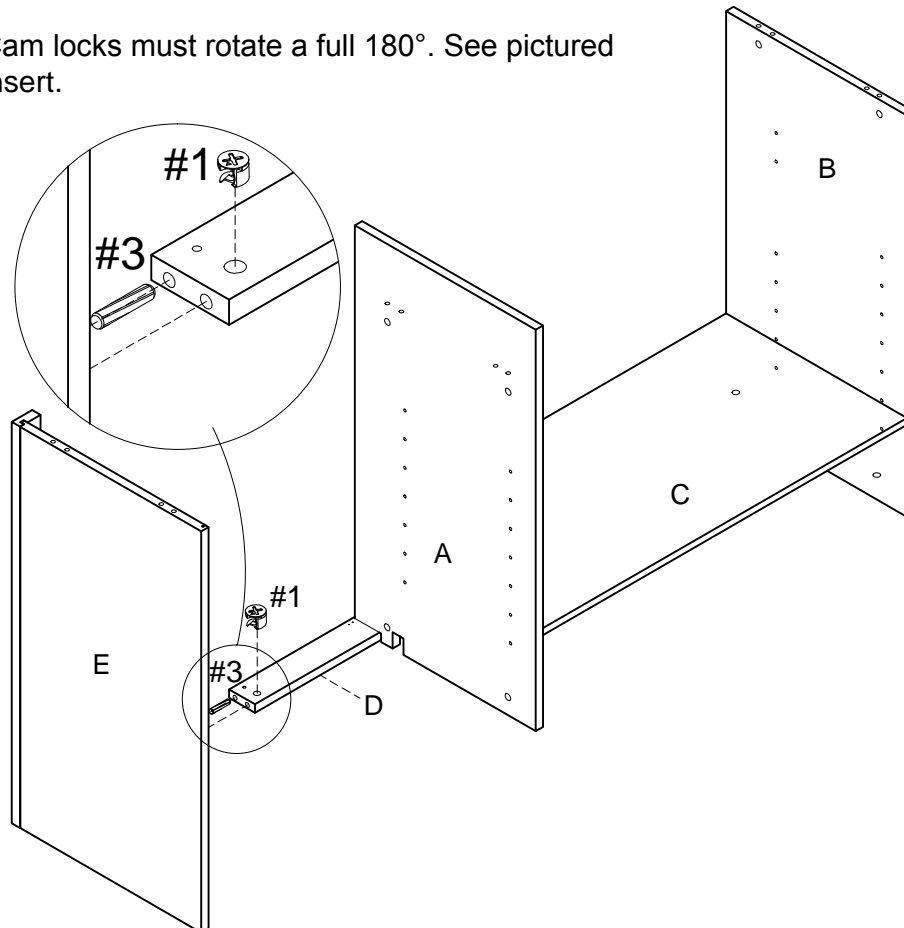 




#1  X1

#3  X1

Step 5. Attach back rail (part G) to left panel (part E) using cam lock (part #1) and wood dowel (part #3).

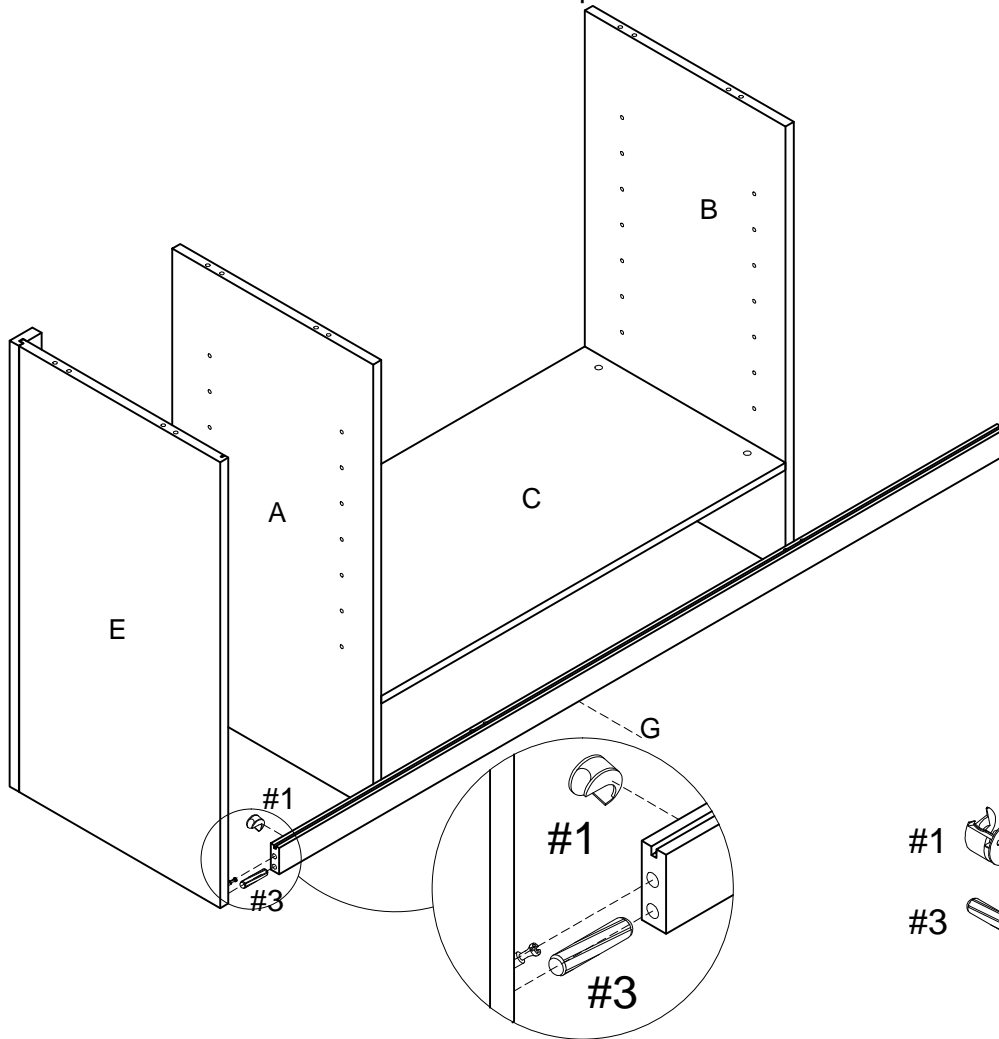 
NOTE: Cam locks must rotate a full 180°. See pictured insert.





- #1  X1
- #3  X1

Step 6. Attach back vertical rails (part J) to back rail (part G) using wood dowels (part #3). Slide back panels (part H) and middle back panel (part I) into grooves of back rail (part G) and back vertical rails (part J). Attach back rail (part G) to assembled unit (parts E, H, I & J) using cam lock (part #1) and wood dowels (part #3).

 
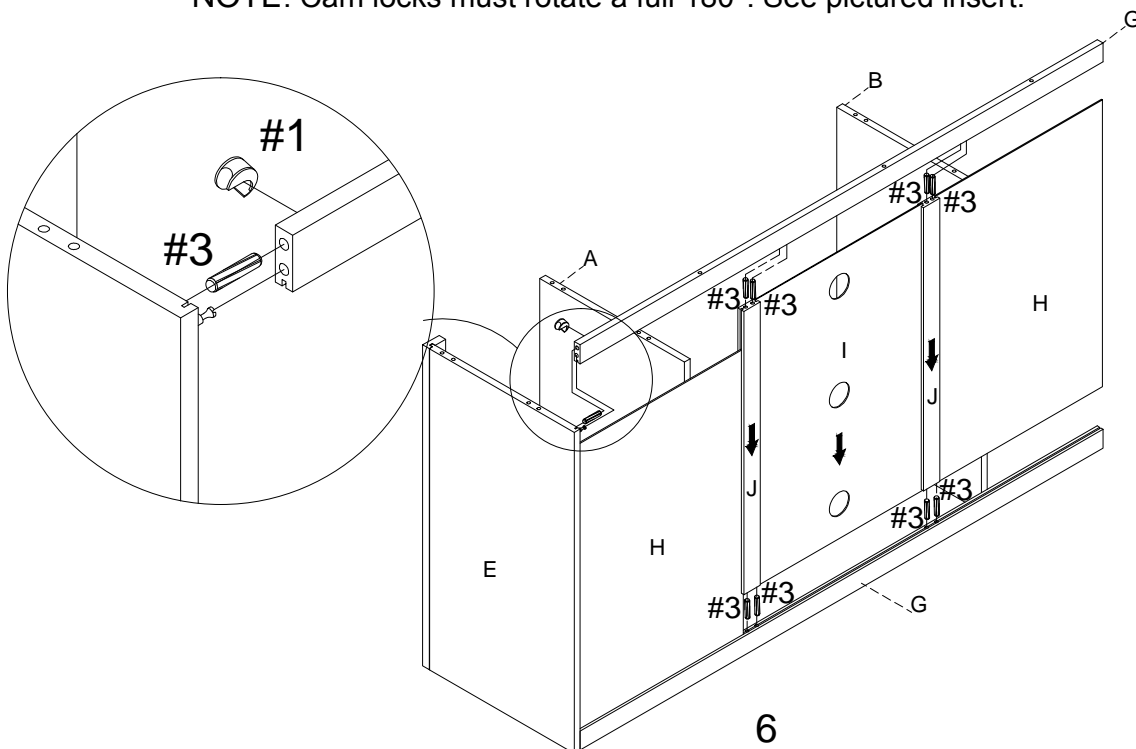 
NOTE: Cam locks must rotate a full 180°. See pictured insert.








- #1  X1
- #3  X9

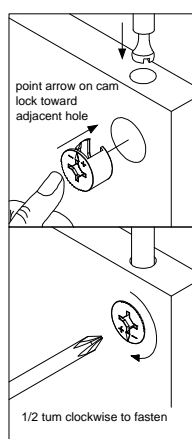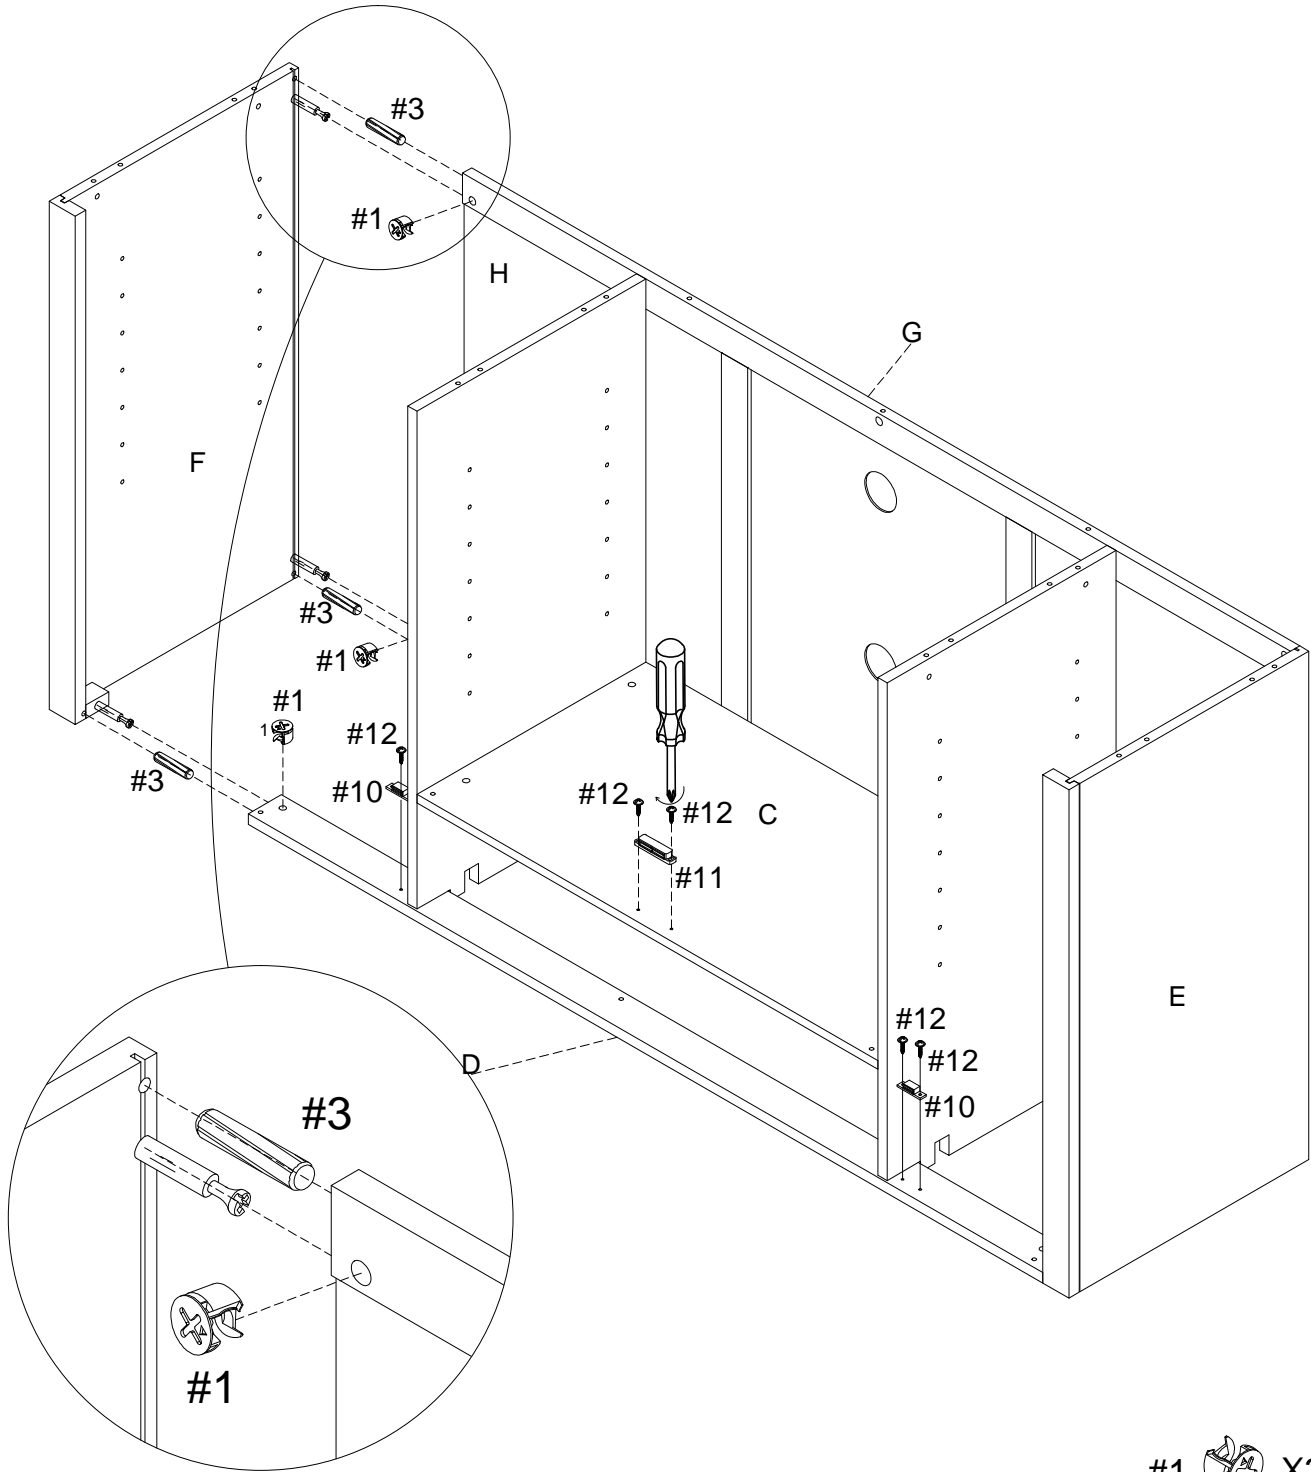Step 7. Attach right panel (part F) to assembled unit (parts D, G & H) using cam locks (part #1) and wood dowels (part #3). Attach magnets (part #10) and double magnet (part #11) to fixed shelf (part C) and front top rail (part D) using round head screws (part #12) and phillips head screwdriver.

 
NOTE: Cam locks must rotate a full 180°. See pictured insert.



 
- #1  X3
- #3  X3
- #10  X2
- #11  X1
- #12  X6

Step 8. Attach bottom panel (part K) to assembled unit (parts A, B, E, F & G) using cam lock (part #1), wood dowels (part #3), hex socket head bolts (part #5), barrel nuts (part #6) and allen wrench (part #13). Attach legs using instruction manual and hardware included inside leg packaging.

NOTE: Cam lock must rotate a full 180°. See pictured insert.

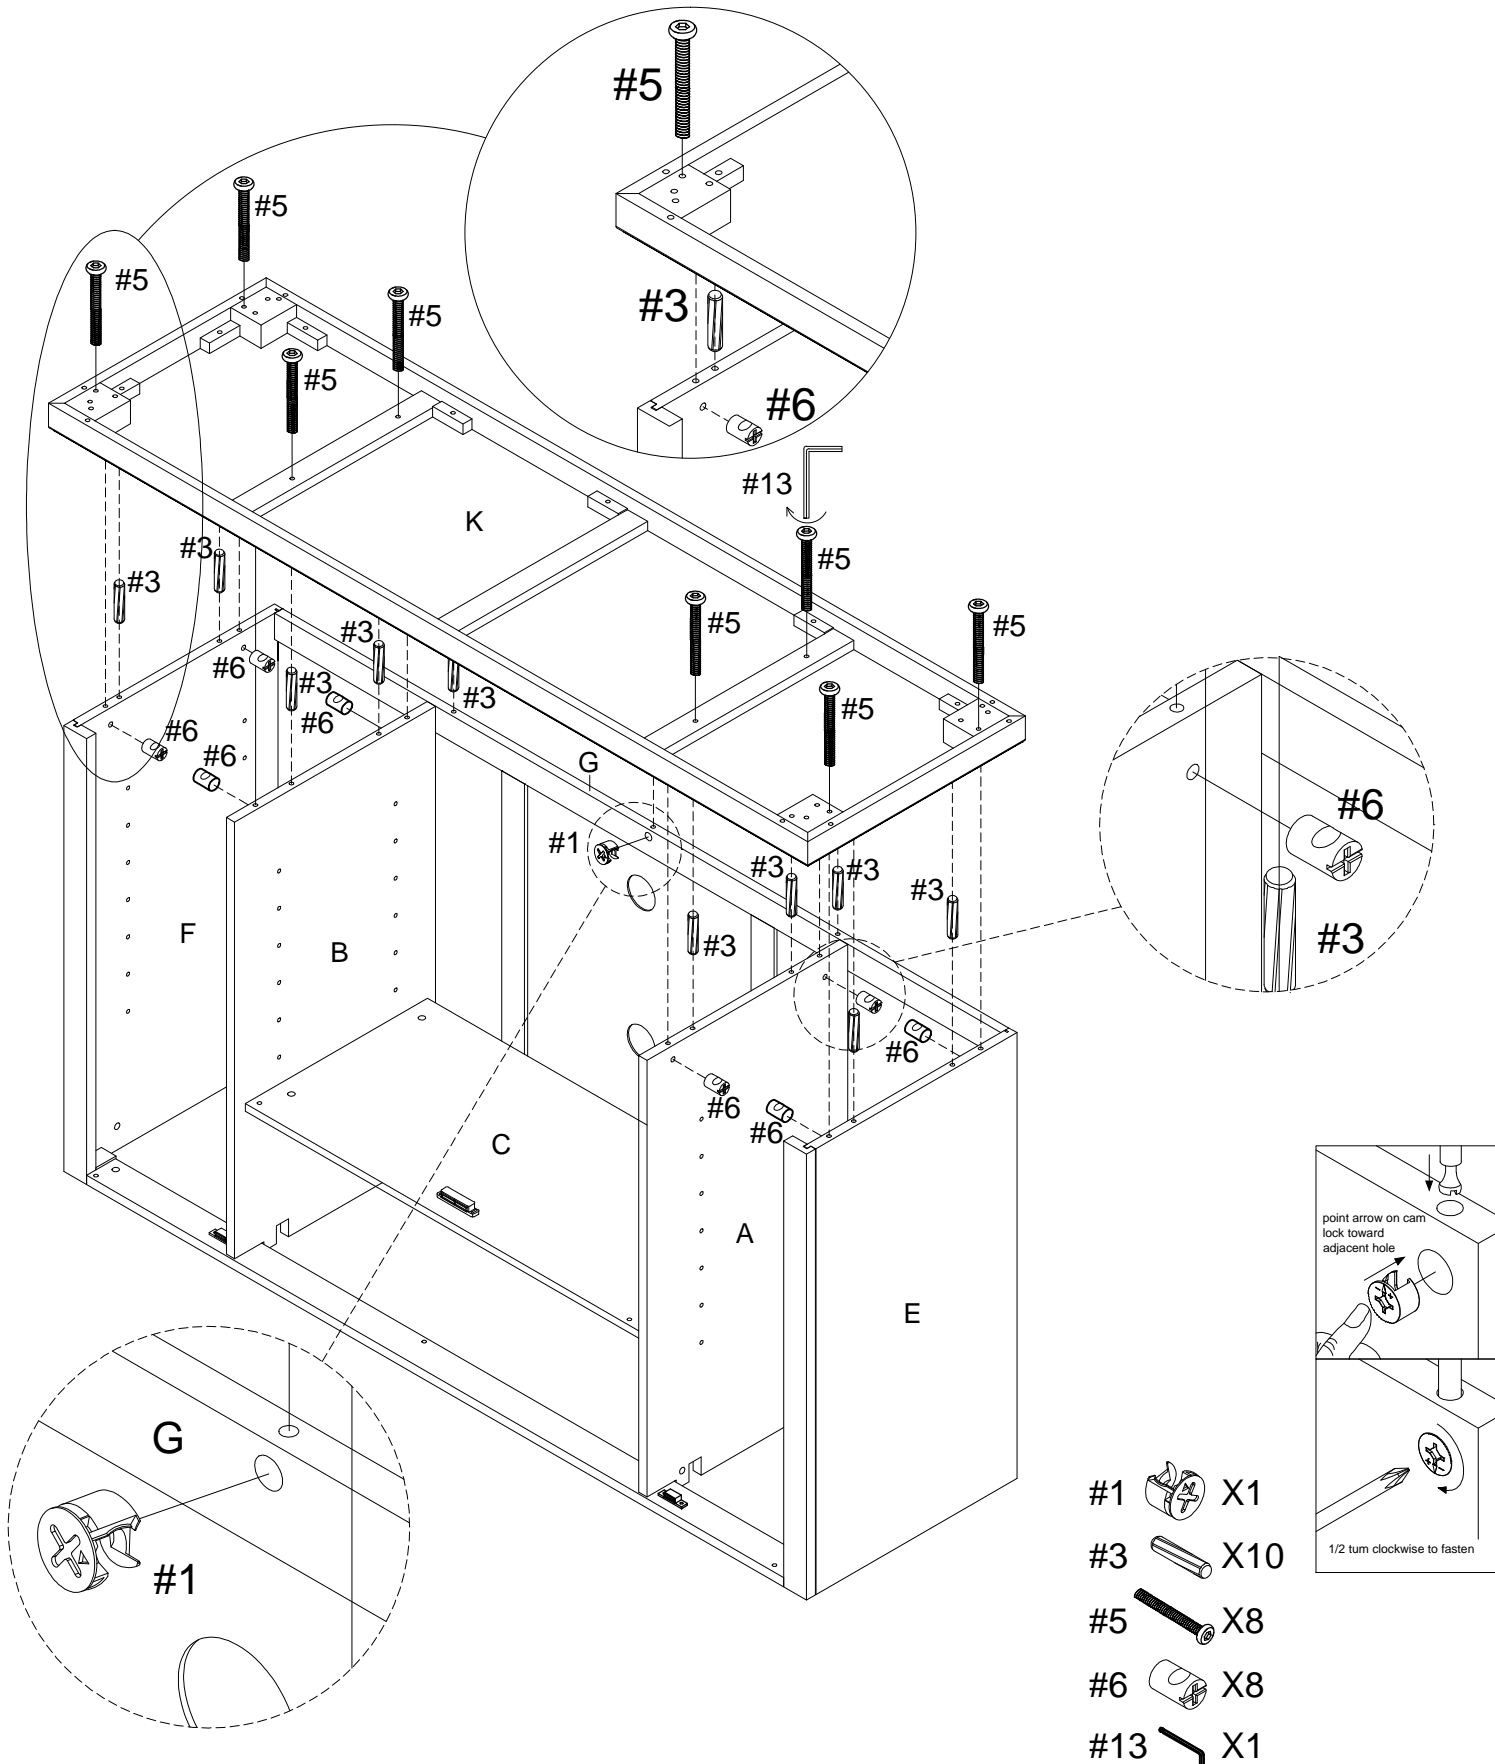 


Step 9. Attach support rail (part U) to top panel (part L) using wood dowels (part #3), screws (part #4) and phillips head screwdriver.

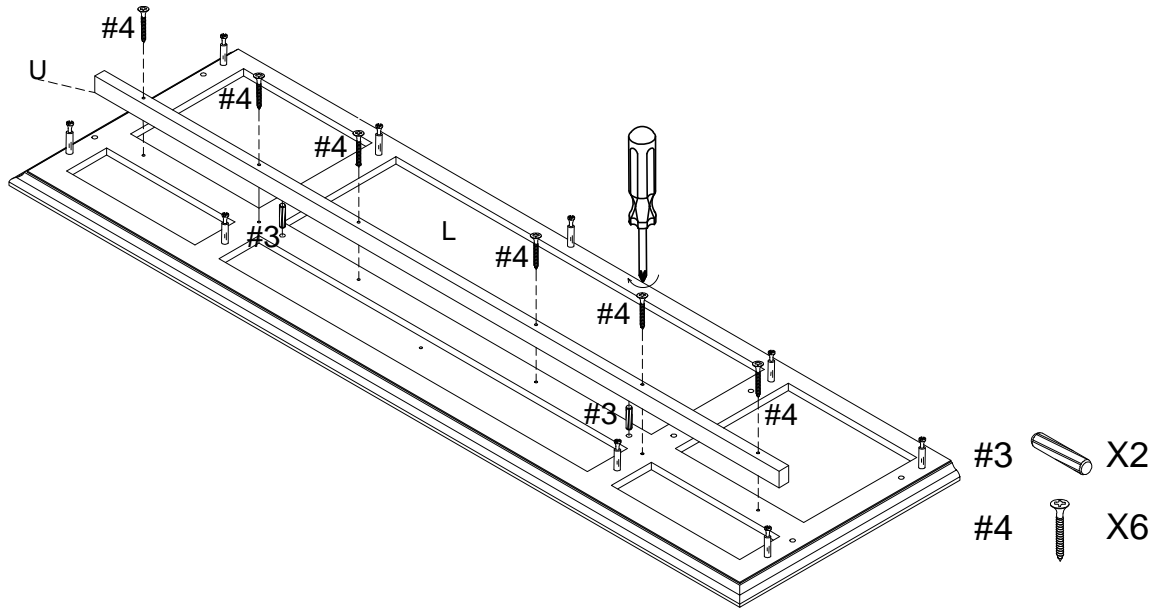

 
 
Step 10. Carefully turn unit upright. Attach top panel (part L) to assembled unit (parts A, B, D, E, F & G) using cam locks (part #1), wood dowels (part #3), screw (part #4) and phillips head screwdriver.

NOTE: Cam locks must rotate a full 180°. See pictured insert.

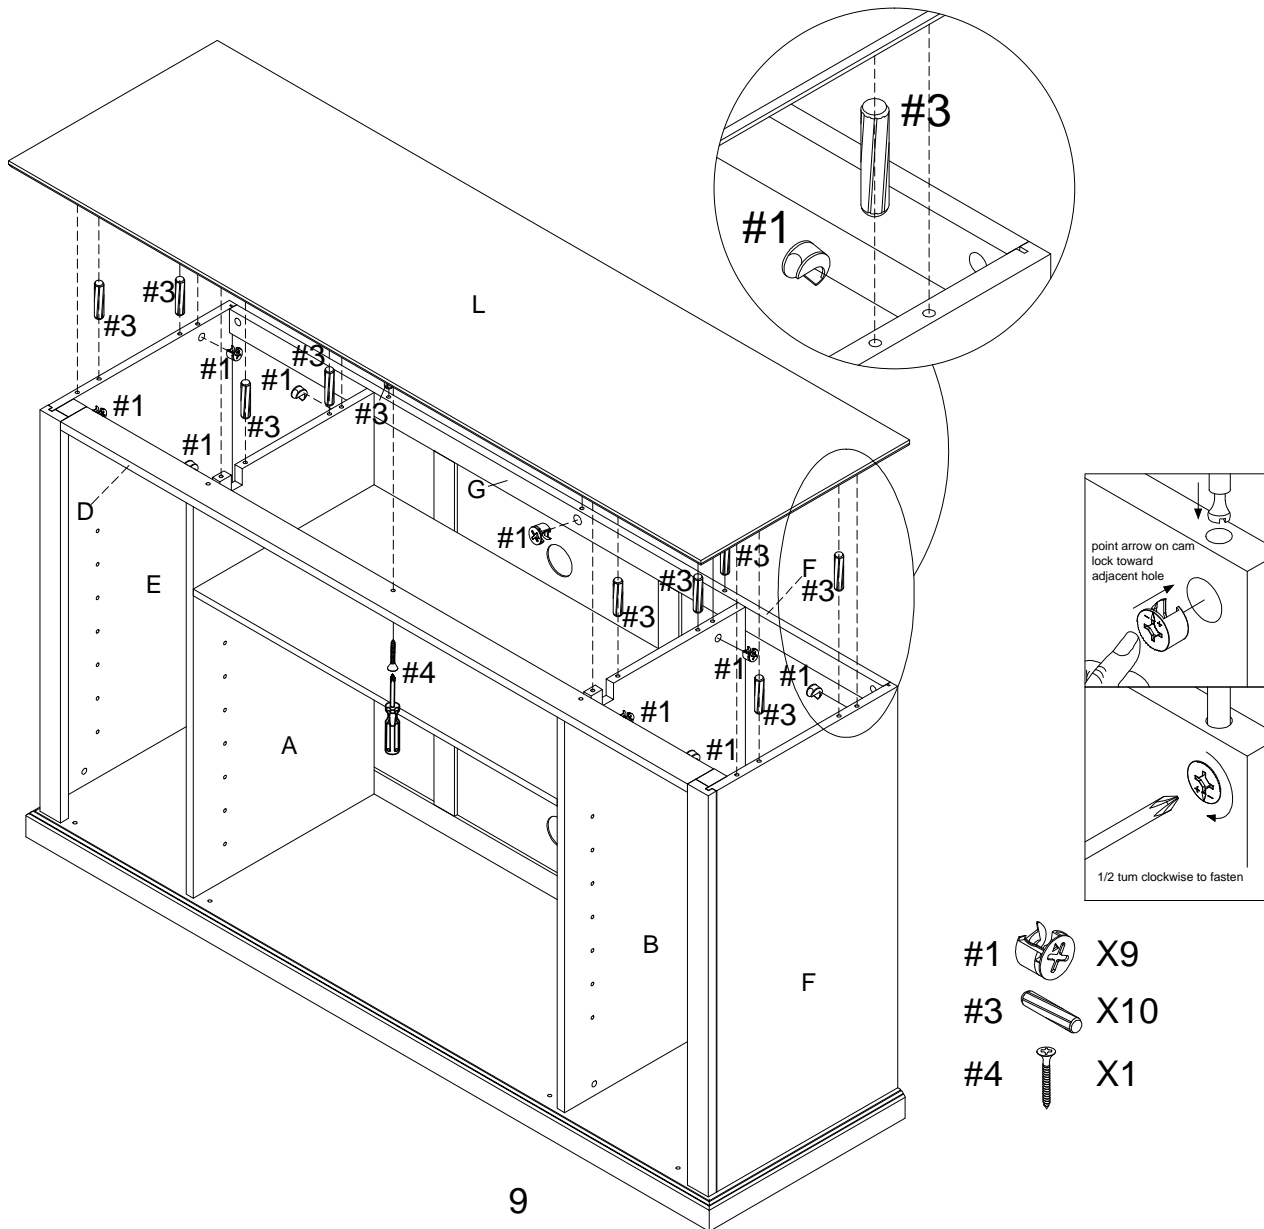 


Step 11. Attach knobs (part #8) to door panels (parts M, N, O & P) using round head bolts (part #9) and phillips head screwdriver. Attach door panels (parts M, N, O & P) by placing bottom pin hinge (pre-installed in door) in the pre-drilled holes of bottom panel (part K). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled holes of fixed shelf (part C) and top panel (part L).

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

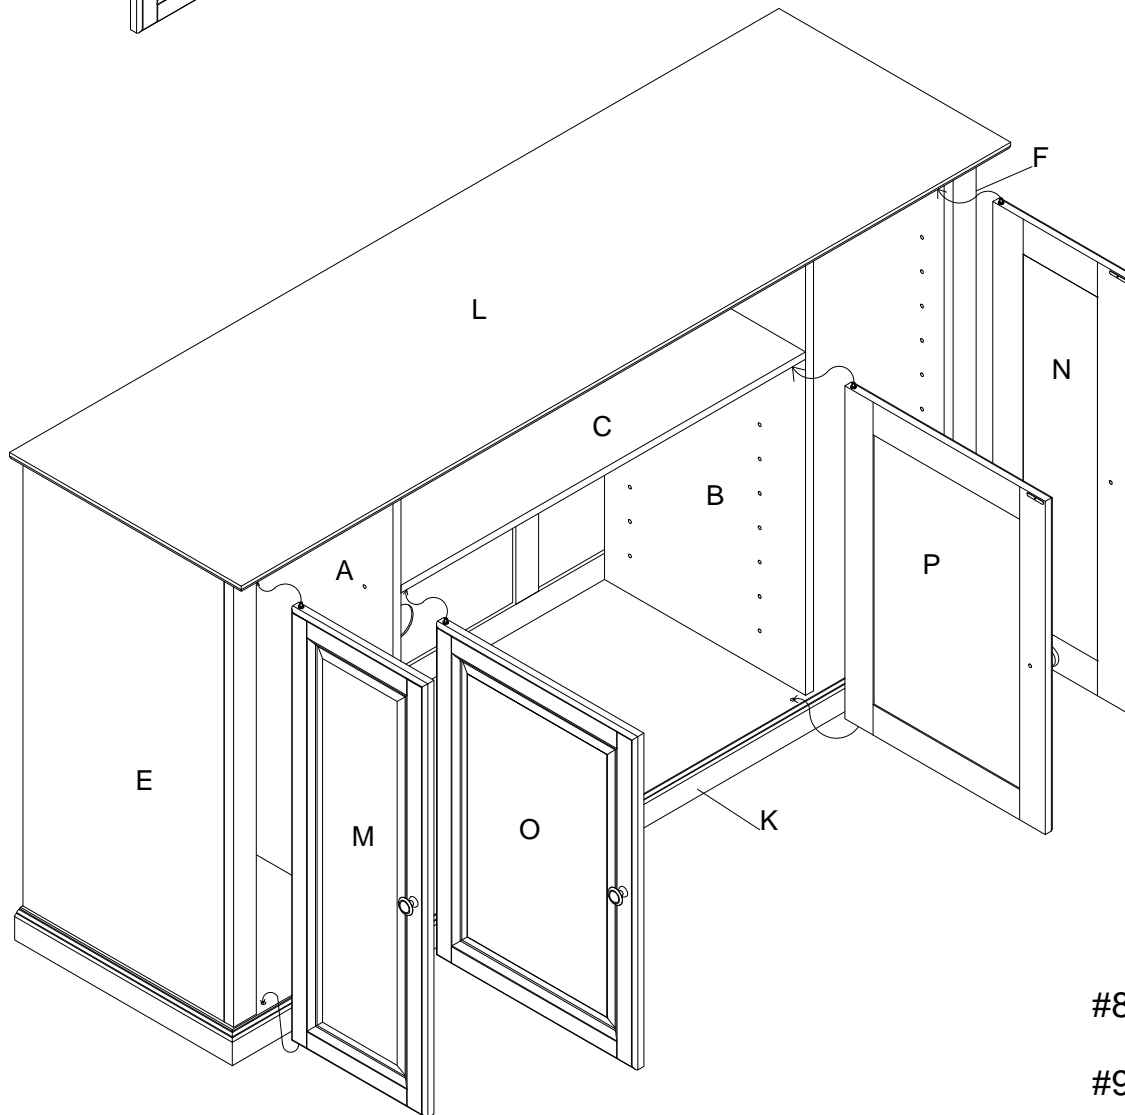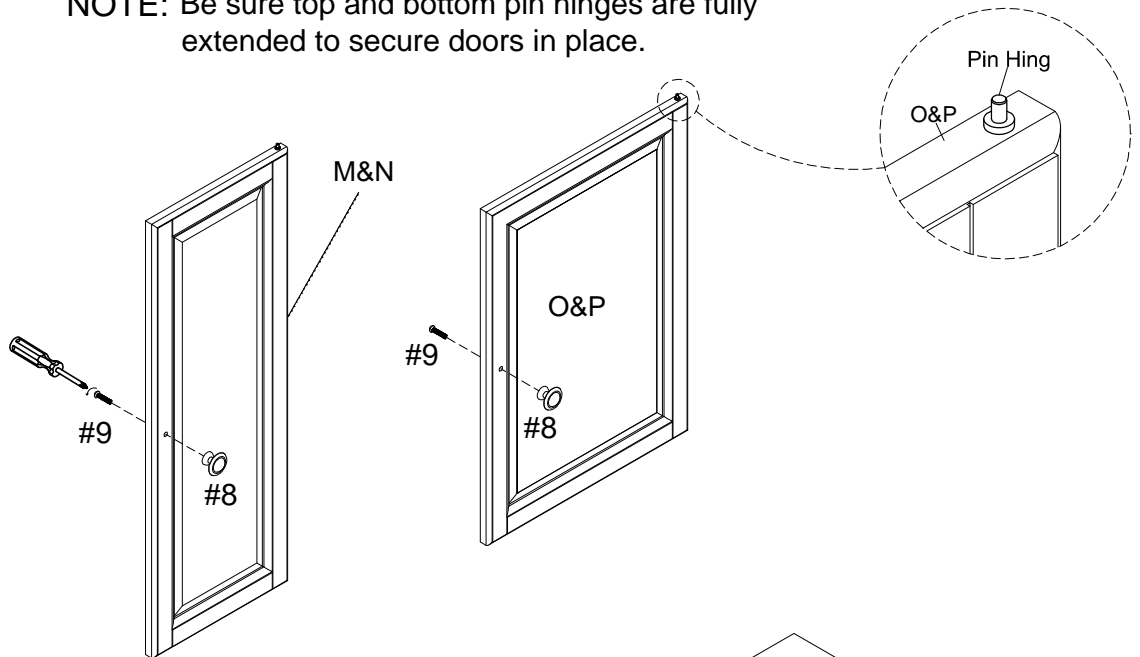 


Step 12. Place shelf holders (part #7) into desired position and then slide adjustable shelves (part Q) and middle adjustable shelf (part R) into place.

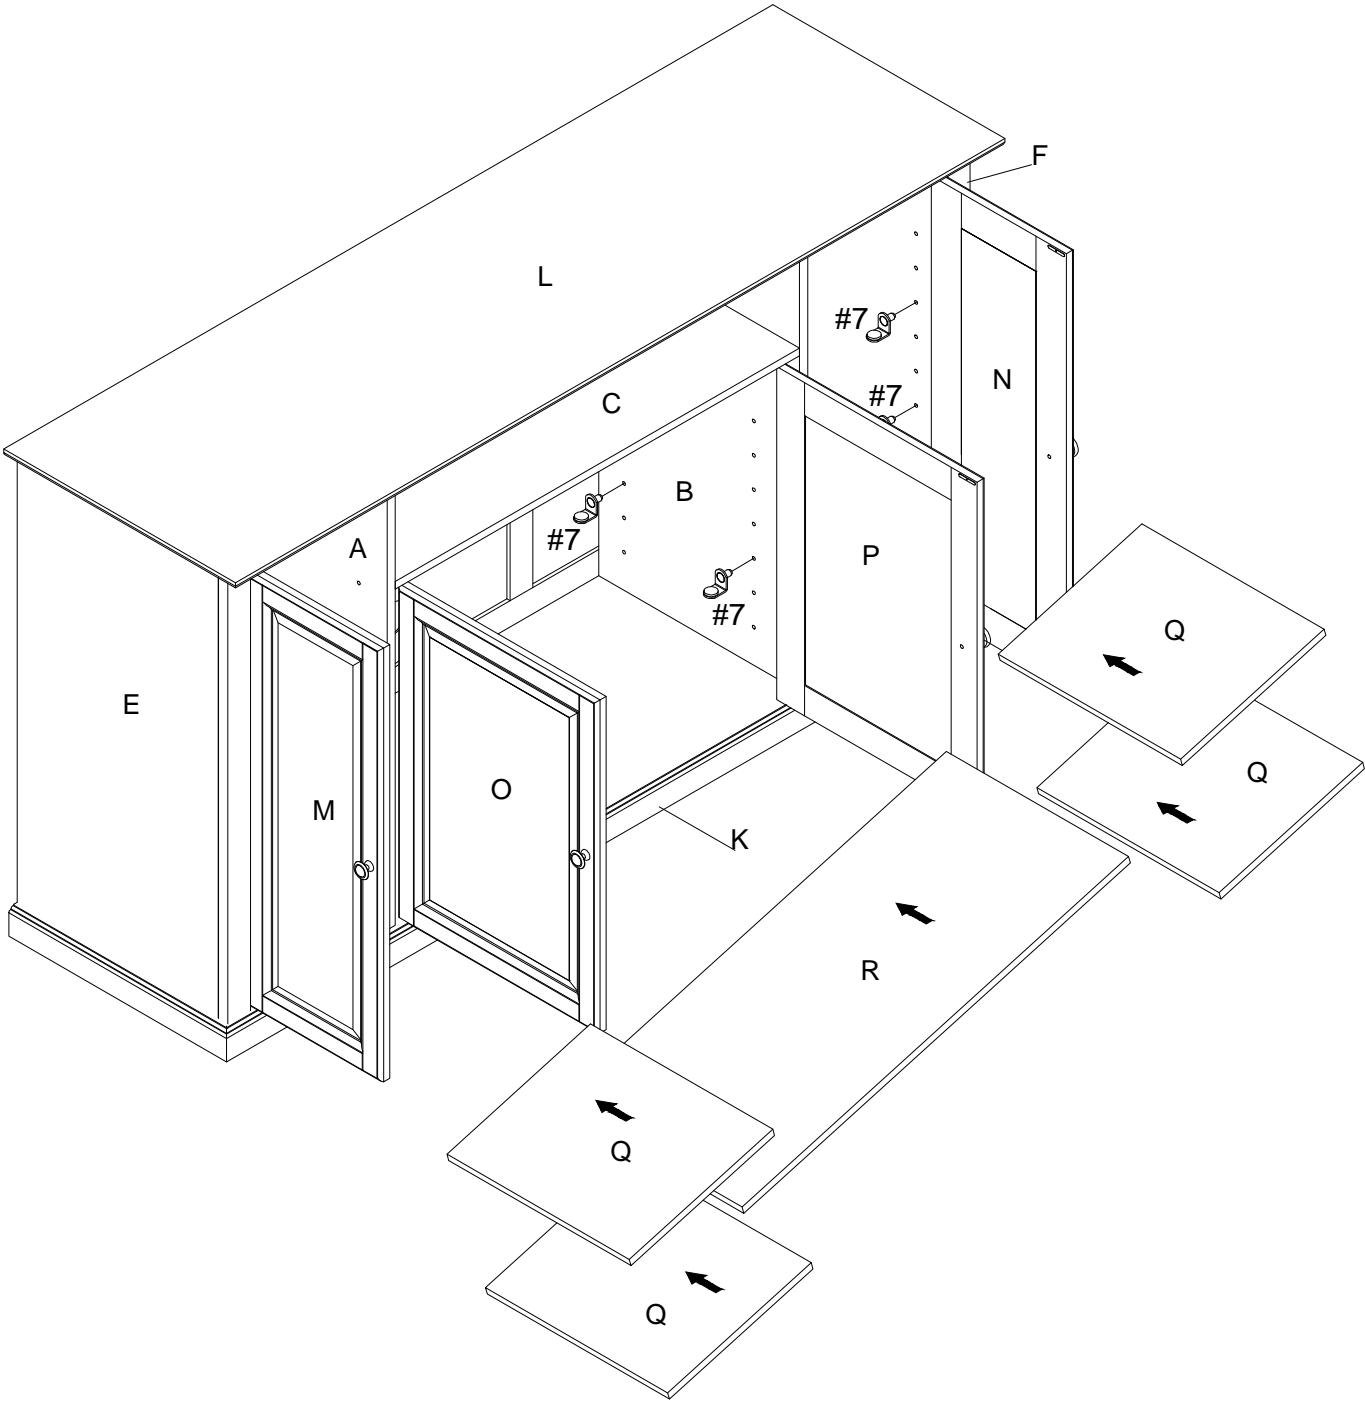

 
#7  X20




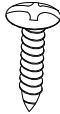
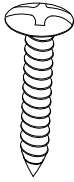
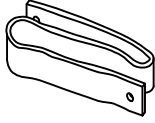
Step 13. Carefully lay unit down. Attach long support leg (part S) or short support leg (part T) to bottom panel (part K) by turning clockwise into the center pre-drilled hole. Short support leg (part T) should only be used with Bun Feet. All other leg styles will use long support leg (part S).

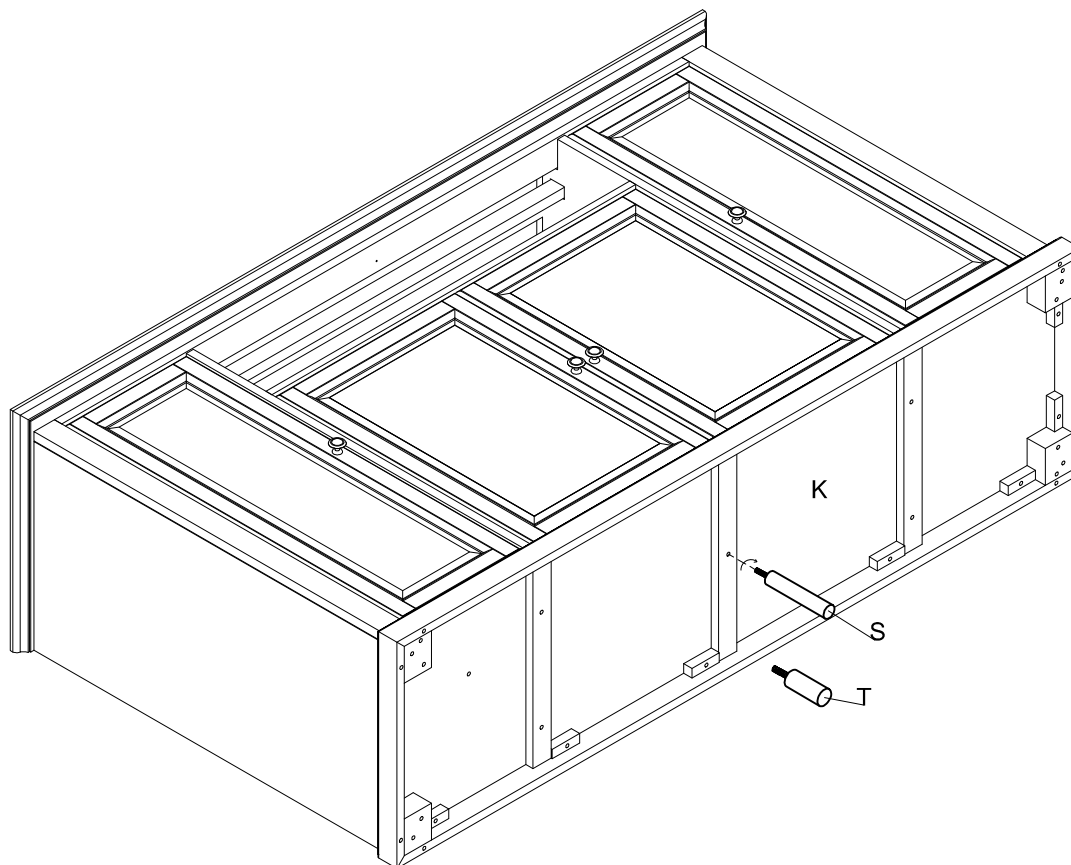

Step 14. Carefully turn unit upright.

NOTE: To support the center of unit it is important to adjust leveler on support leg once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

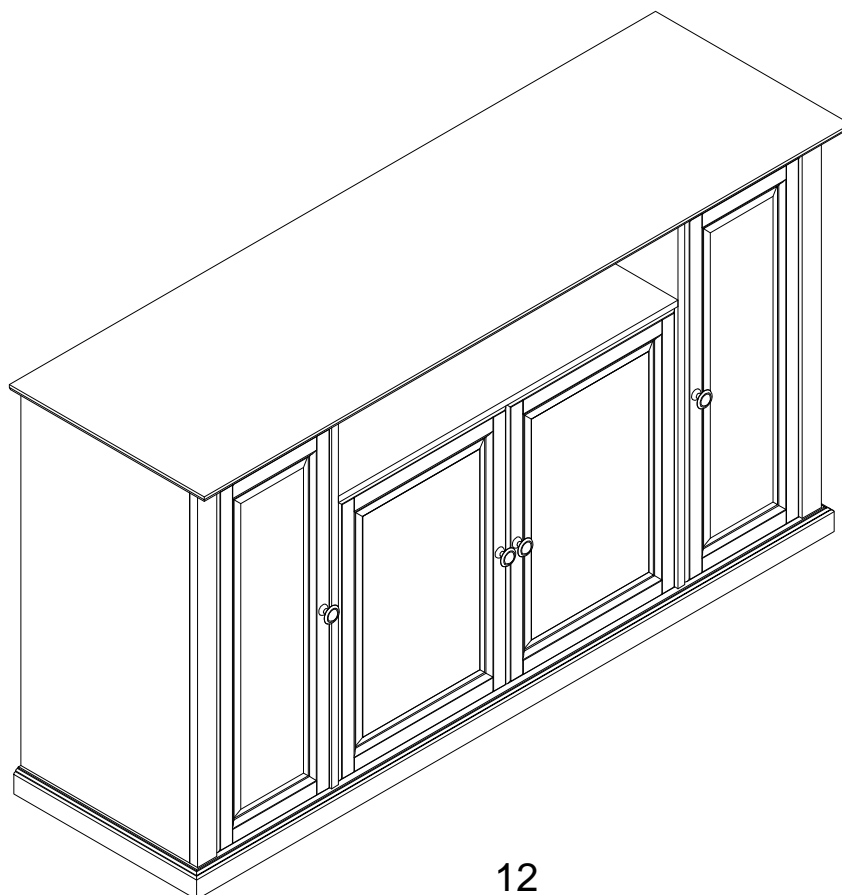
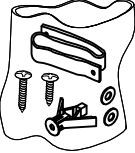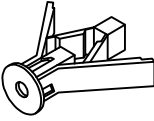
#14	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC D8*3/4"	Long Screw 1 PC D8*1-1/2"	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to back of top panel (part L) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back of top panel (part L) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

