

DOREL ASIA

KITCHEN CART

Model No:

DA6545N (Natural)

DA6545W (White)



UPC CODE:

0-65857-18228-6 (Natural)

0-65857-18229-3 (White)

NOTE:

THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ AND
KEEP FOR FUTURE REFERENCE.

Lot number:
(TAKEN FROM CARTON)

Date of purchase:

____ / ____ / ____

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part FREE of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!

 **CALL 1-800-295-1980**

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada H1G 3L1
E-MAIL: das@dorel.com**

NOTE

- * Ensure that all parts and components are located before beginning assembly.
- * Assemble on a soft surface to prevent damage to the product finish.
- * **DO NOT** use the unit if it is damaged or broken.
- * **DO NOT** use power tools.
- * Caution: Adult assembly required.
- * Assembly will require 2 people.
- * Estimated assembly time: 30 minutes.
- * Phillips head screwdriver (not provided) is required for assembly.



WARNING

- * **DO NOT** use the kitchen cart as a seating surface.
- * **DO NOT** place any type of electrical appliance on the unit.
- * **DO NOT** place any pots or pans containing hot liquids on the unit.
- * **DO NOT** place any item on the top panel weighing more than 30 lbs.
- * **DO NOT** place any item on the kitchen cart with dimensions exceeding those of the top panel.
- * Before moving the kitchen cart remove all products off the top panel and make sure the caster wheels are in the unlocked position.
- * To prevent damage to the caster wheels, gently lift the kitchen cart when sliding it over raised edges on the floor.
- * After placing the kitchen cart in the desired location, lock the caster wheels to prevent movement.

CARE AND CLEANING

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.


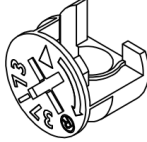 
 
 
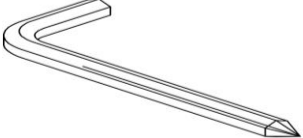 

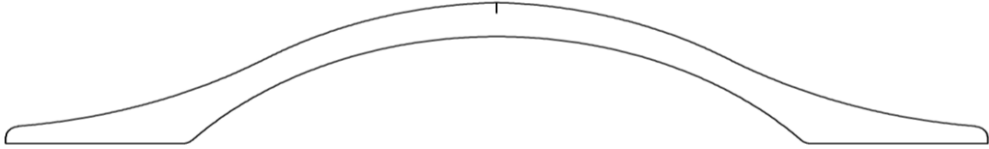 


WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

KITCHEN CART

DA6545N / DA6545W


 

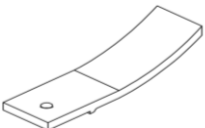 
 
 
 
 
HARDWARE LIST

| | |
|---|--|
| 1 | 2 |
|  |  |
| CAM BOLT 8 PCS | CAM LOCK 8 PCS |
| 3 | 4 |
|  |  |
| Ø5/32" x 1" FLAT HEAD SCREW 8 PCS | Ø1/4" x 1-3/4" HEX SOCKET HEAD BOLT 8 PCS |
| 5 | 6 |
|  |  |
| ALLEN KEY 1 PC | WOOD DOWEL 16 PCS |
| 7 | |
|  HANDLE 3 PCS | |

KITCHEN CART

DA6545N / DA6545W

 
 
 
 
 
 
 

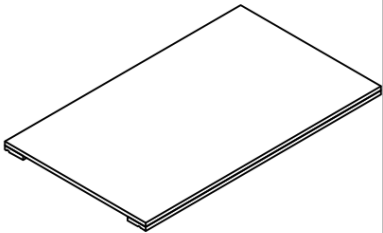 
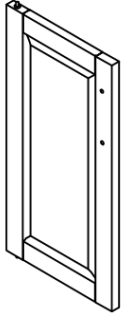 
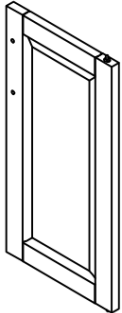 
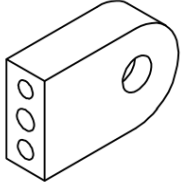 
HARDWARE LIST

| | | | | | |
|-------------------------------|---|---|--|--------------------------|---|
| 8 |  $\text{Ø}5/32'' \times 7/8''$ | 9 |  | 10 |  $\text{Ø}1/8'' \times 3/8''$ |
| ROUND HEAD BOLT 6 PCS | | PLATE 2 PCS | | FLAT HEAD SCREW 2 PCS | |
| 11 |  | 12 |  $\text{Ø}5/32'' \times 5/8''$ | 13 |  |
| DRAWER STOPPER 1 PC | | ROUND HEAD SCREW 16 PCS | | SHELF SUPPOTR 4 PCS | |
| 14 |  $\text{Ø}1/4'' \times 1-1/2''$ | 15 | | | |
| HEX SOCKET HEAD BOLT 6 PCS | |  $\text{Ø}1/8'' \times 1/2''$ | | | |
| | | ROUND HEAD SCREW 1 PCS | | | |

KITCHEN CART

DA6545N / DA6545W

 
 
 
 
 
 

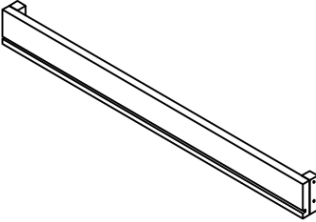 
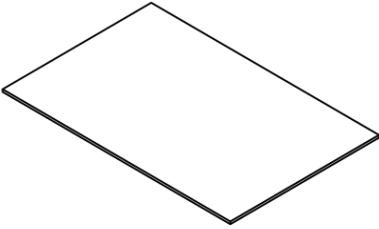 
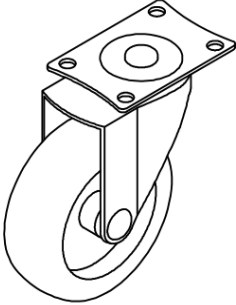 
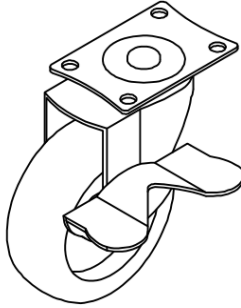 
PARTS LIST
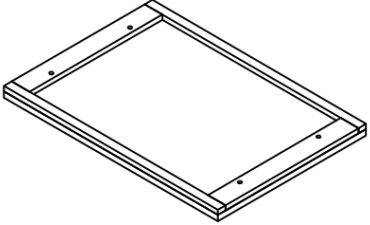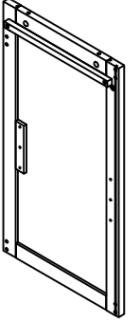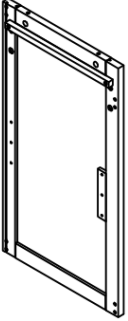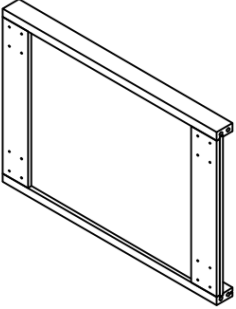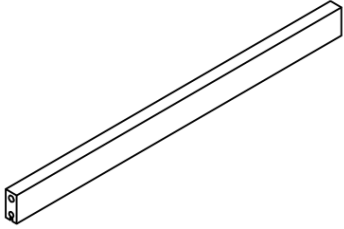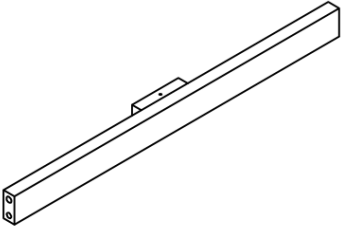
| | | | |
|---|---|--|---|
| <p>A</p>  | <p>B</p>  | <p>C</p>  | <p>D</p>  |
| <p style="text-align: center;">TOP PANEL 1 PC</p> | <p style="text-align: center;">LEFT SIDE PANEL - 1 PC</p> | <p style="text-align: center;">RIGHT SIDE PANEL - 1 PC</p> | <p style="text-align: center;">BOTTOM PANEL - 1 PC</p> |
| <p>E</p>  | <p>F</p>  | <p>G</p>  | <p>H</p>  |
| <p style="text-align: center;">BACK PANEL- 2 PCS</p> | <p style="text-align: center;">BACK UPPER RAIL- 1 PC</p> | <p style="text-align: center;">FRONT UPPER RAIL- 1 PC</p> | <p style="text-align: center;">BACK MIDDLE RAIL - 1 PC</p> |
| <p>I</p>  | <p>J</p>  | <p>K</p>  | <p>L</p>  |
| <p style="text-align: center;">ADJUSTABLE SHELF - 1 PC</p> | <p style="text-align: center;">LEFT DOOR- 1 PC</p> | <p style="text-align: center;">RIGHT DOOR- 1 PC</p> | <p style="text-align: center;">TUBE SUPPORT- 2 PCS</p> |

KITCHEN CART

DA6545N / DA6545W

PARTS LIST
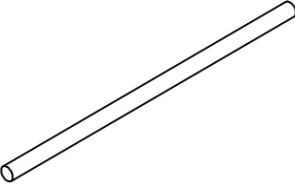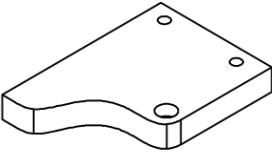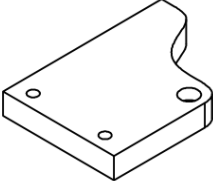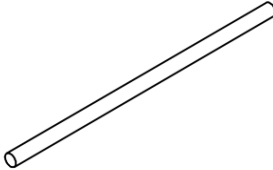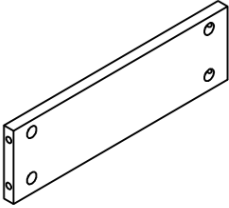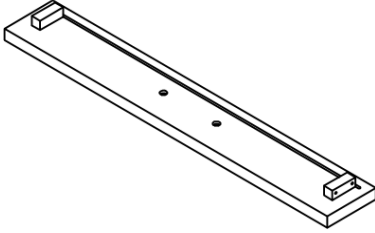
| | | | |
|---|---|---|--|
| <p>M</p>  | <p>N</p>  | <p>O</p>  | <p>P</p>  |
| <p>METAL TUBE- 1 PC</p> | <p>RACK LEFT PANEL- 1 PC</p> | <p>RACK RIGHT PANEL- 1 PC</p> | <p>RACK METAL TUBE- 1 PC</p> |
| <p>Q</p>  | <p>R</p>  | <p>S</p>  | <p>T</p>  |
| <p>RACK SHELF - 1 PC</p> | <p>DRAWER FRONT- 1 PC</p> | <p>DRAWER SIDE- 2 PCS</p> | <p>DRAWER BACK- 1 PC</p> |
| <p>U</p>  | <p>V</p>  | <p>W</p>  | |
| <p>DRAWER BOTTOM- 1 PC</p> | <p>CASTER- 2 PCS</p> | <p>LOCKING CASTER- 2 PCS</p> | |

KITCHEN CART

 
DA6545N / DA6545W

STEP 1

Insert cam bolts (1) into the rack left and right panels (N&O).

Insert cam locks (2) into the rack shelf (Q).

Attach the rack left and right panels (N&O) to the rack metal tube (P) and the rack shelf (Q) and secure by rotating cam locks (2) 1/2-turn clockwise using a Phillips head screwdriver (not included).


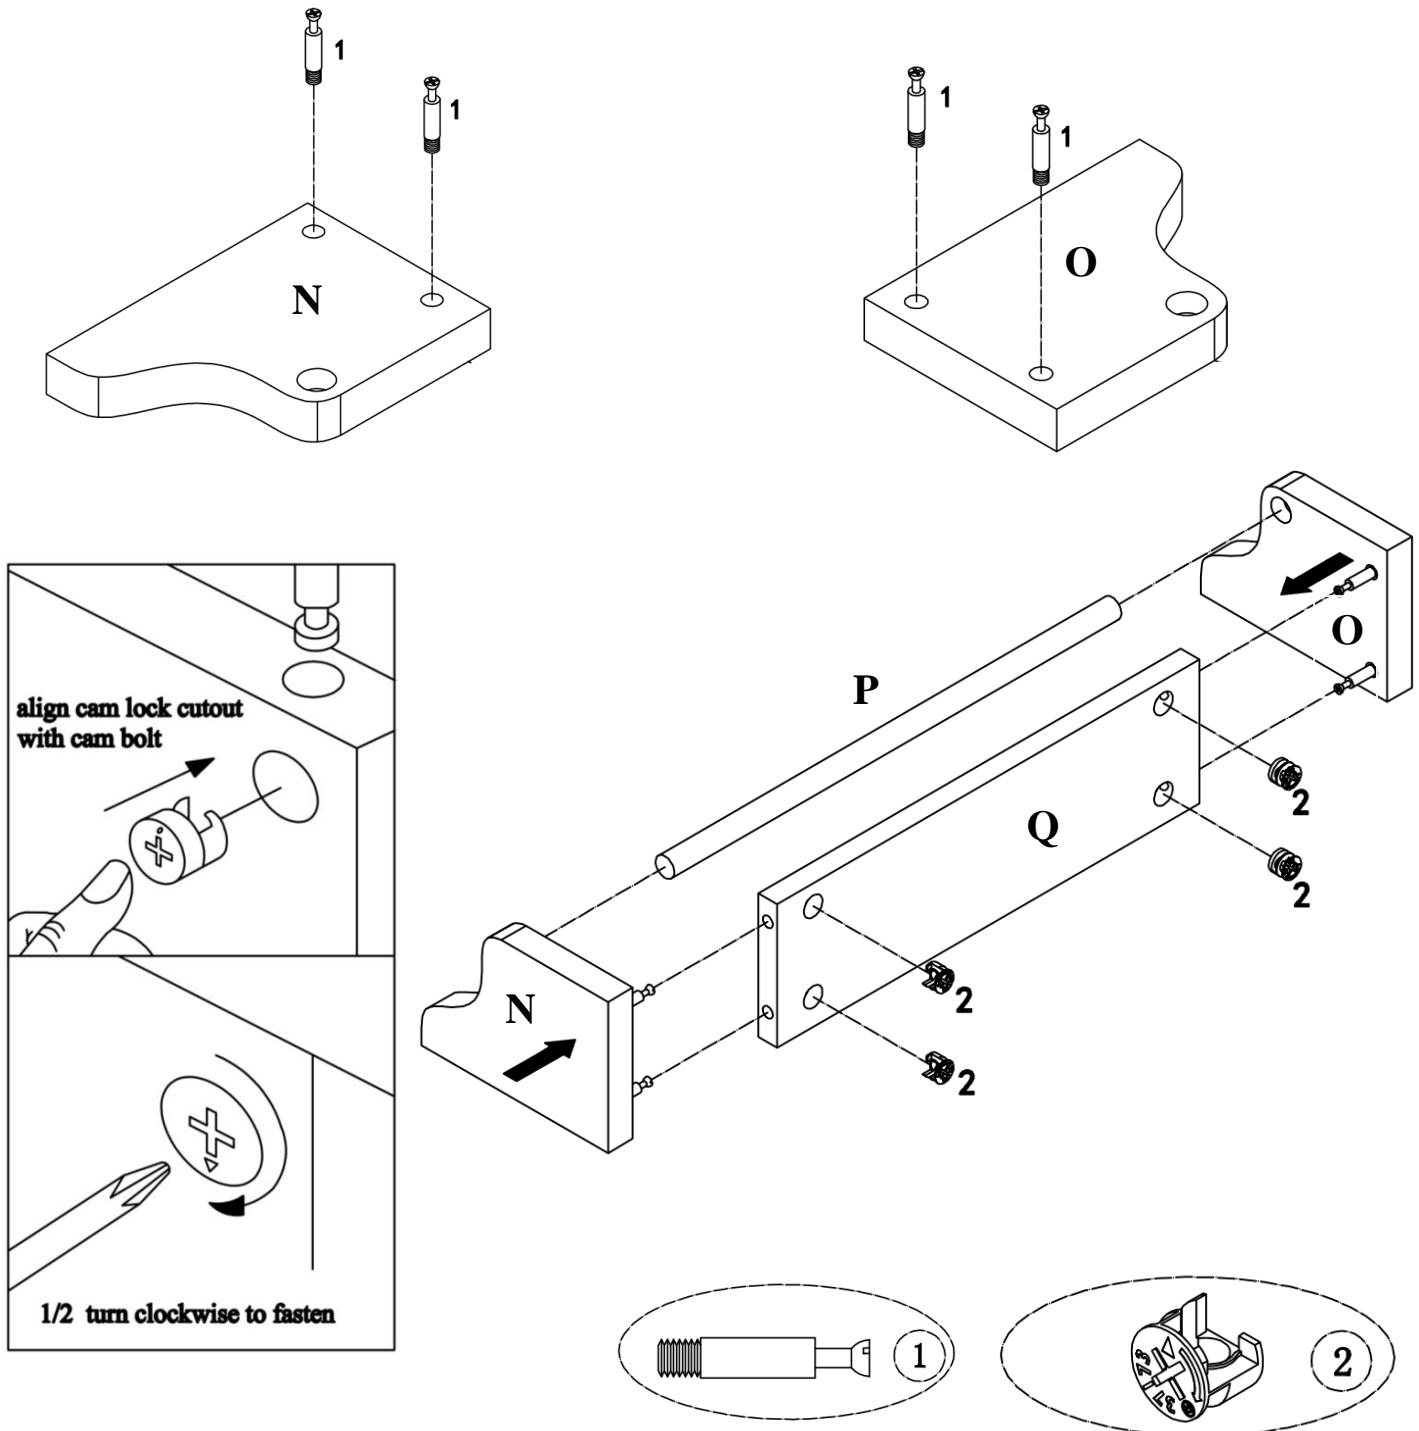


KITCHEN CART

DA6545N / DA6545W

STEP 2

  Attach the assembled rack to right side panel (C) with hex socket head bolts (14).
Use Allen key (5) to tighten the bolts.

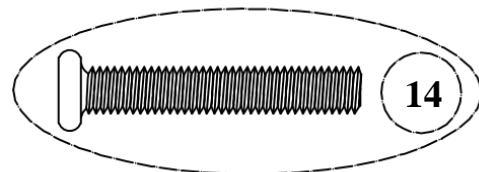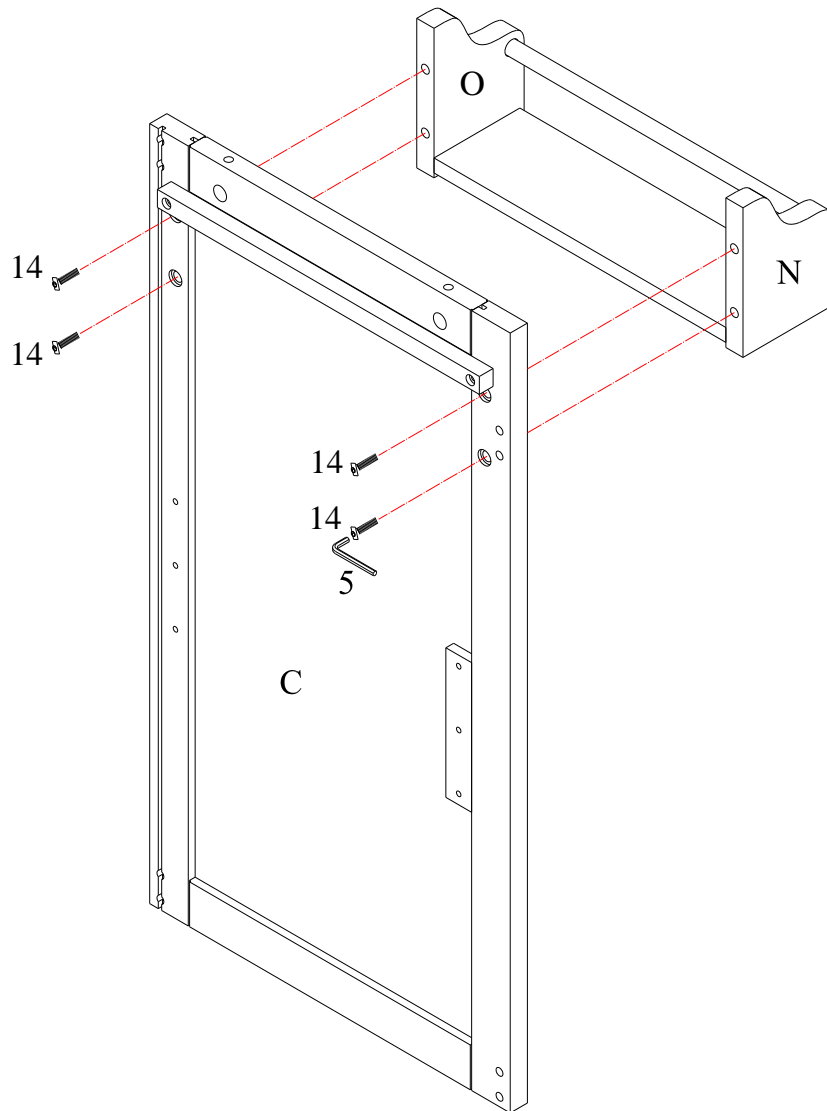

KITCHEN CART

 
 
 
DA6545N / DA6545W

STEP 3

Insert wood dowels (6) into the bottom panel (D).

Attach right side panel (C) to bottom panel (D) with hex socket head bolts (4).

Use Allen key (5) to tighten bolts.

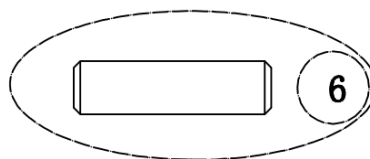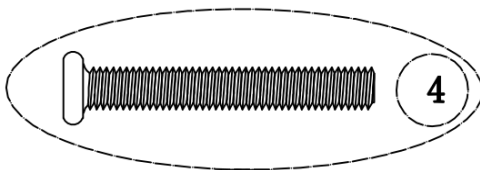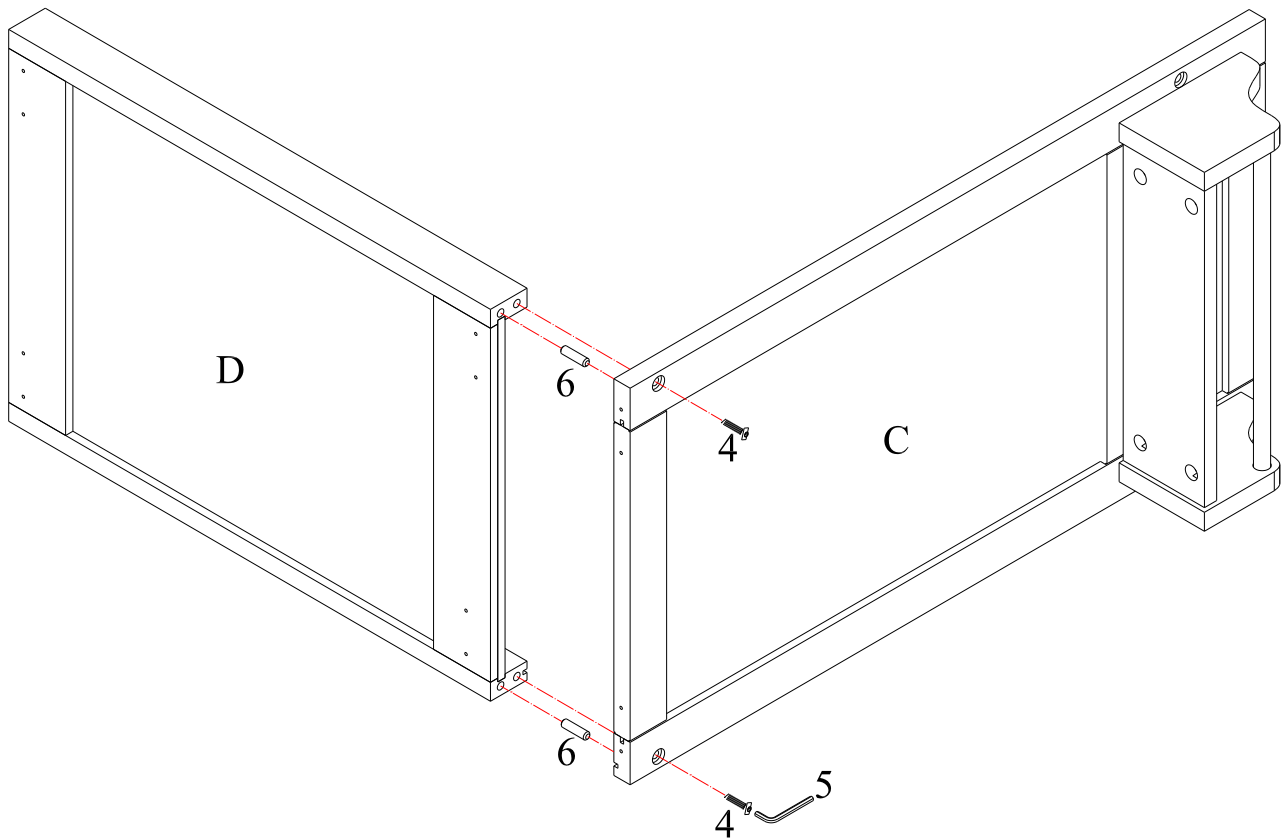

KITCHEN CART

DA6545N / DA6545W

STEP 4

Insert wood dowels (6) into bottom panel (D). Attach back middle rail (H) to bottom panel (D).

Slide back panels (E) into the grooves of back middle rail (H), right side panel (C) and bottom panel (D).

 
 
 
Insert wood dowels (6) into back middle rail (H) and into the end of back upper rail (F).

Attach back upper rail (F) to back middle rail (H).

Secure back upper rail (F) to right side panel (C) with hex socket head bolts (4).

Insert wood dowels (6) into front upper rail (G). Attach front upper rail (G) to right side panel (C) with hex socket head bolts (4).

Use Allen key (5) to tighten the bolts.

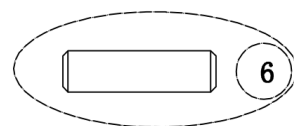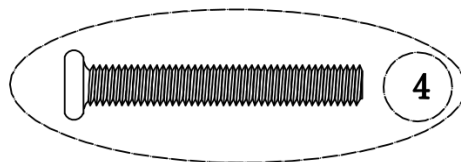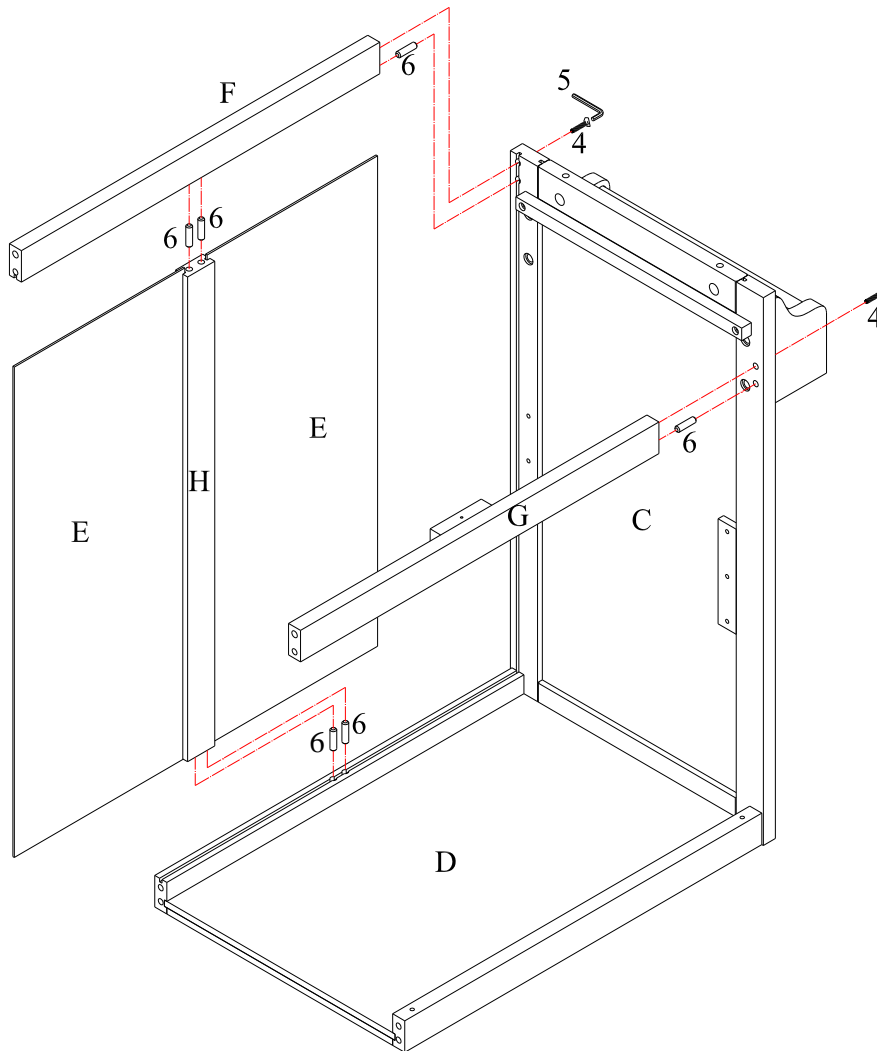


KITCHEN CART

DA6545N / DA6545W

STEP 5

Insert metal tube (M) into tube supports (L).

 Insert wood dowels (6) into tube supports (L) and attach to left side panel (B) with hex socket head bolts (14). Use Allen key (5) to tighten the bolts.

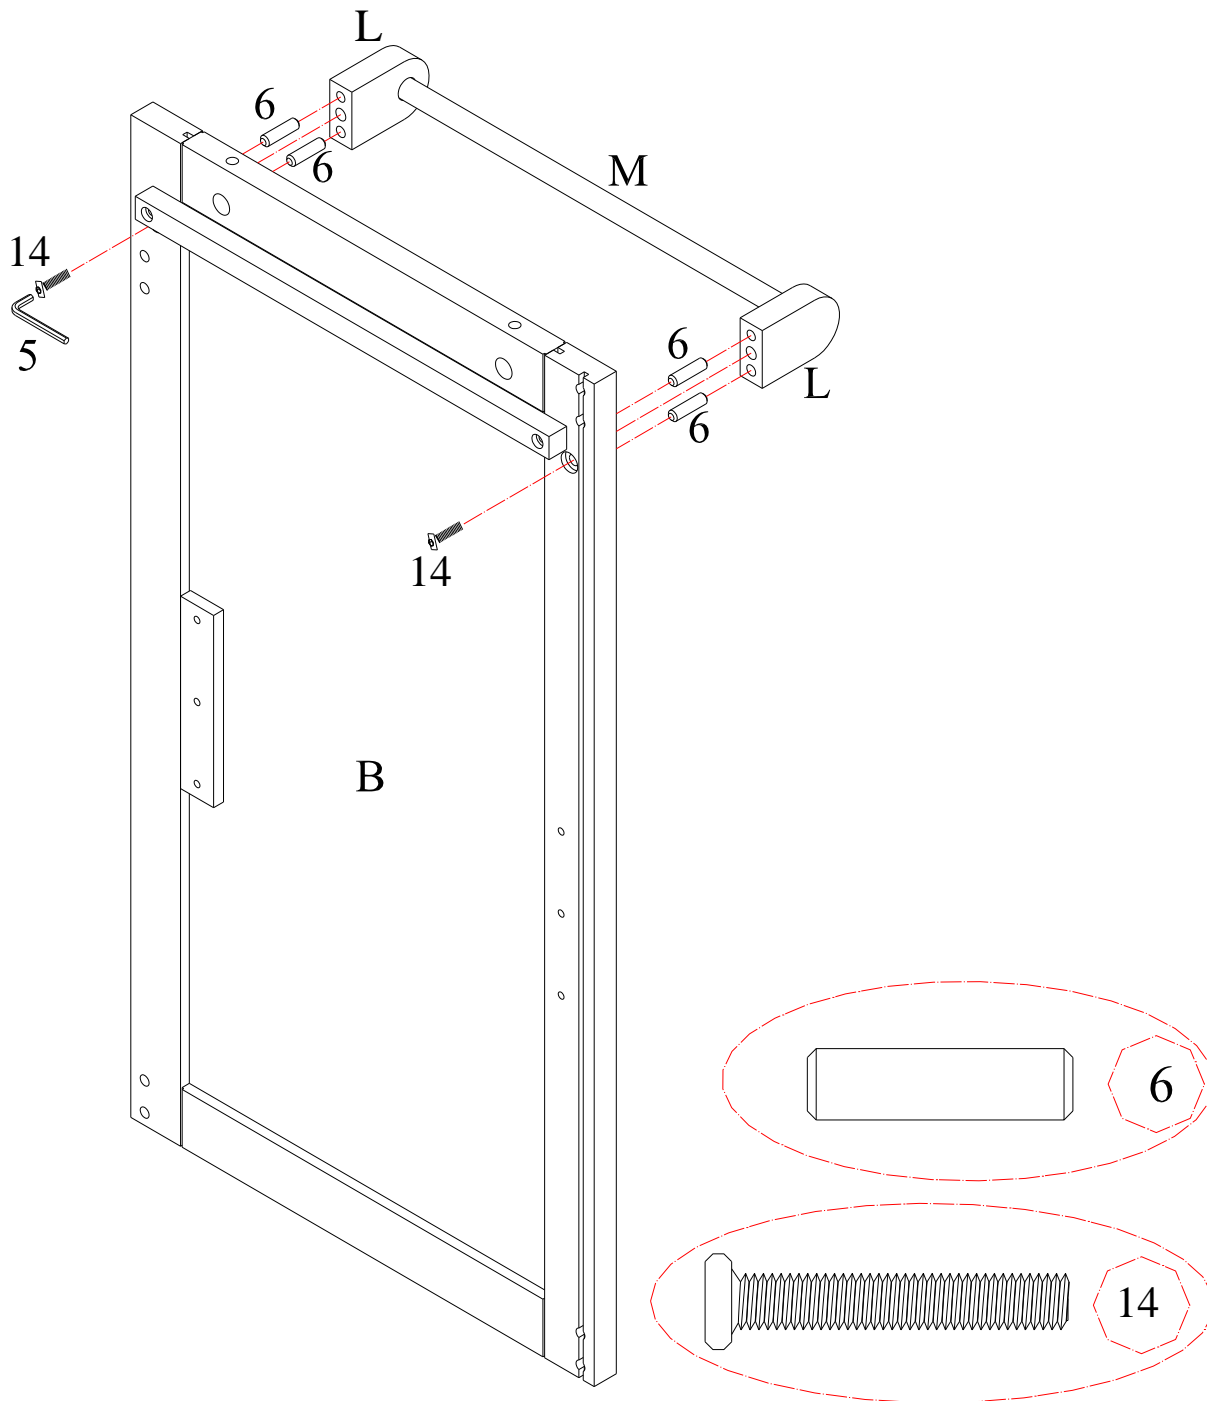

KITCHEN CART

 
DA6545N / DA6545W

STEP 6

Insert wood dowels (6) into back upper rail (F), front upper rail (G) and bottom panel (D).

Attach left side panel (B) to the assembled unit with hex socket head bolts (4). Use Allen key (5) to tighten the bolts.

Install casters (V) and locking casters (W) to bottom panel (D), left side panel (B) and right side panel (C) with round head screws (12) using a Phillips head screw driver (not included).

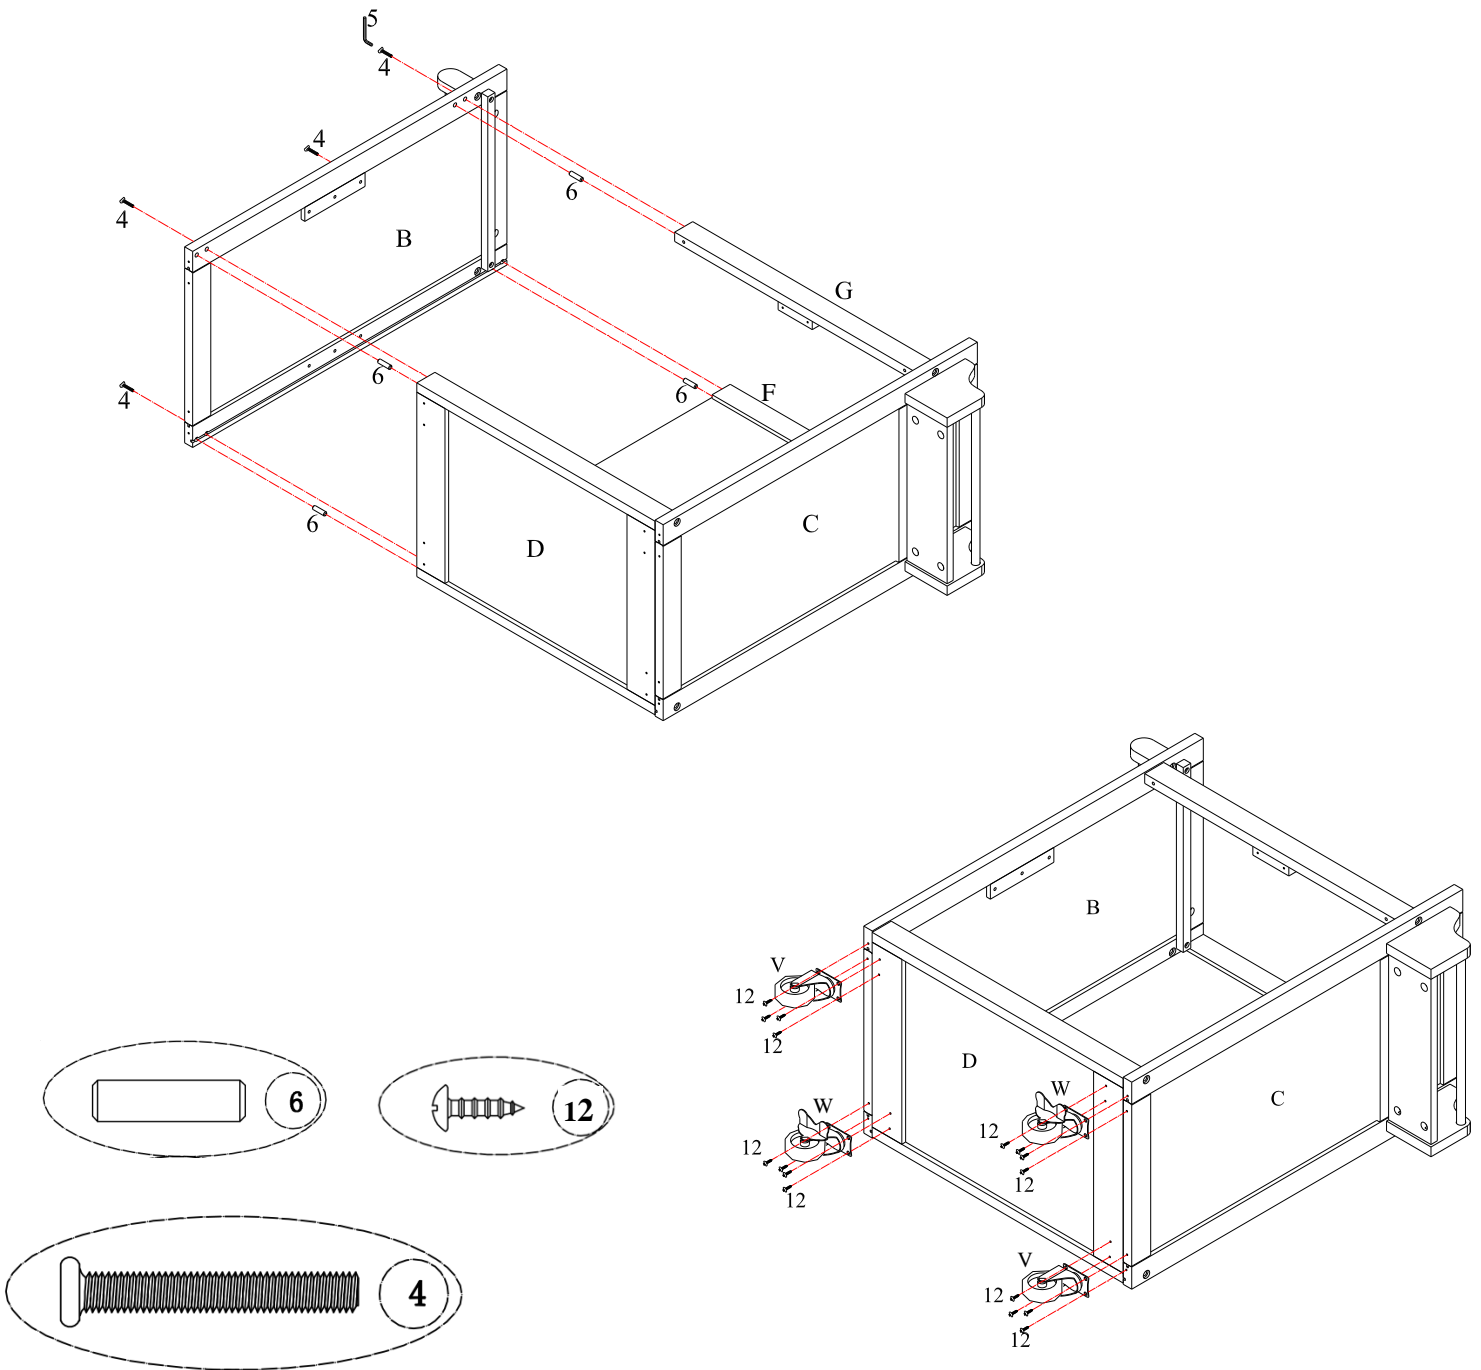







KITCHEN CART

DA6545N / DA6545W

STEP 7

Attach handle (7) to right door (K) with round head bolts (8). Attach plate (9) to right door (K) with flat head screw (10). Repeat this step for the left door (J).

      Attach drawer stopper (11) to front upper rail (G) with round head screw (15). Install doors (J&K) by pushing down on the door pins and inserting them into the holes on front upper rail (G) and bottom panel (D).

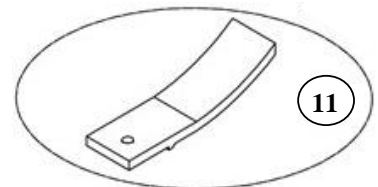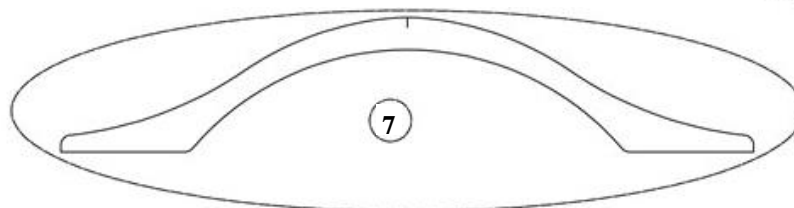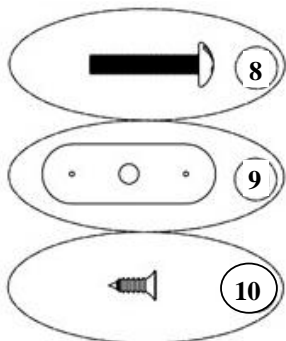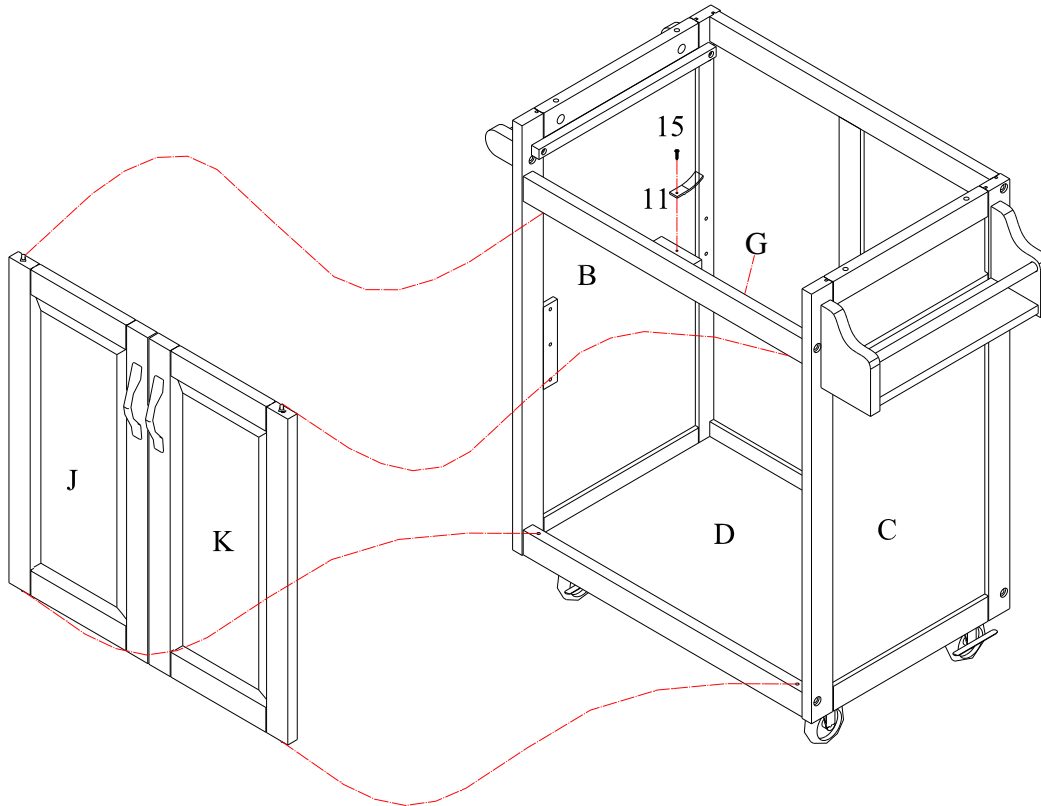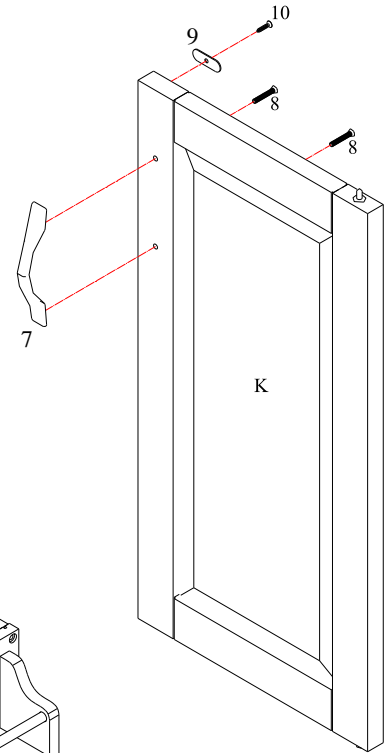

KITCHEN CART

 
DA6545N / DA6545W

STEP 8

Insert cam bolts (1) into the top panel (A).

Insert cam locks (2) into the left side panel (B) and right side panel (C).

Fasten top panel (A) to the assembled unit by rotating cam locks (2) 1/2-turn clockwise.

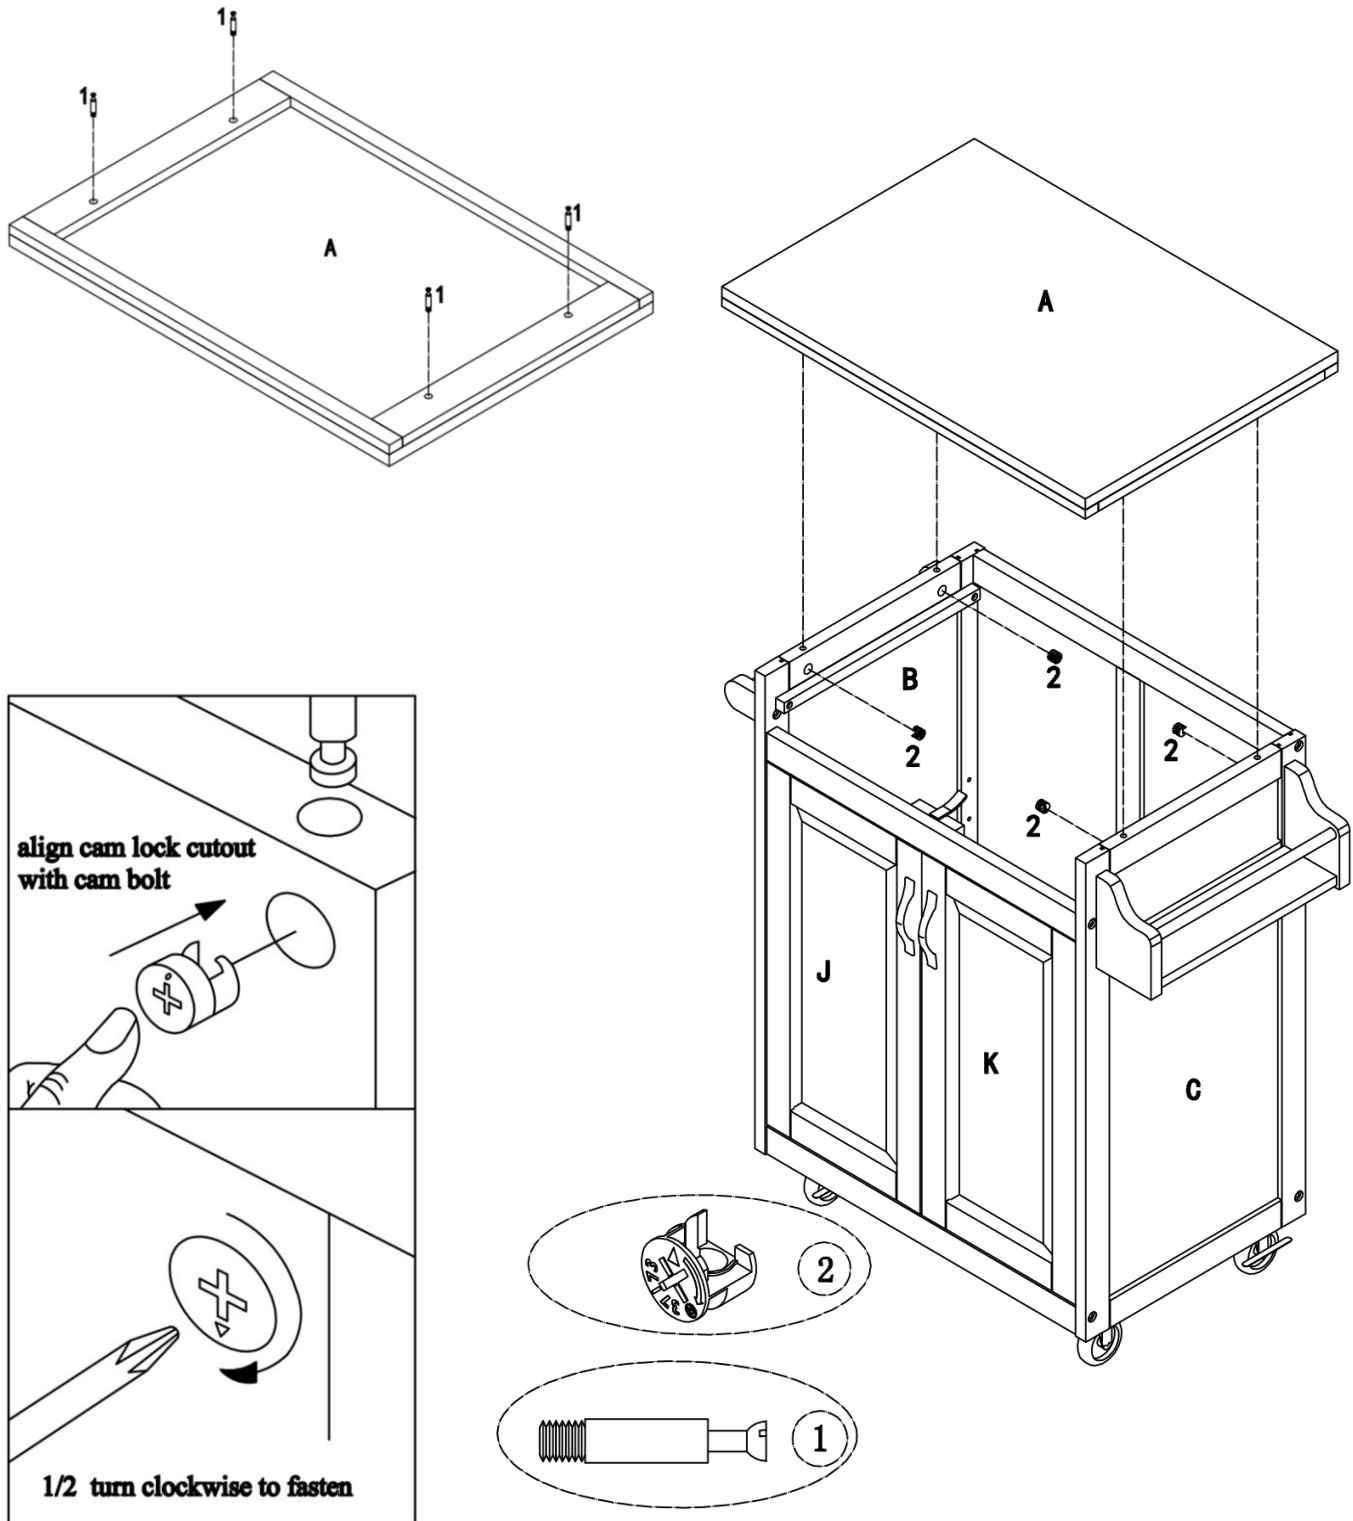

KITCHEN CART

DA6545N / DA6545W

STEP 9

 
Attach drawer sides (S) to drawer front (R) with flat head screws (3).

Slide drawer bottom (U) into the grooves of the drawer sides (S) and drawer front (R).

Attach drawer back (T) to drawer sides (S) with flat head screws (3). Make sure that drawer bottom (U) fits into the groove of the drawer back (T).

Attach handle (7) to drawer front (R) with round head bolts (8).

Use a Phillips head screw driver (not included) to install screws (3) and bolts (8).

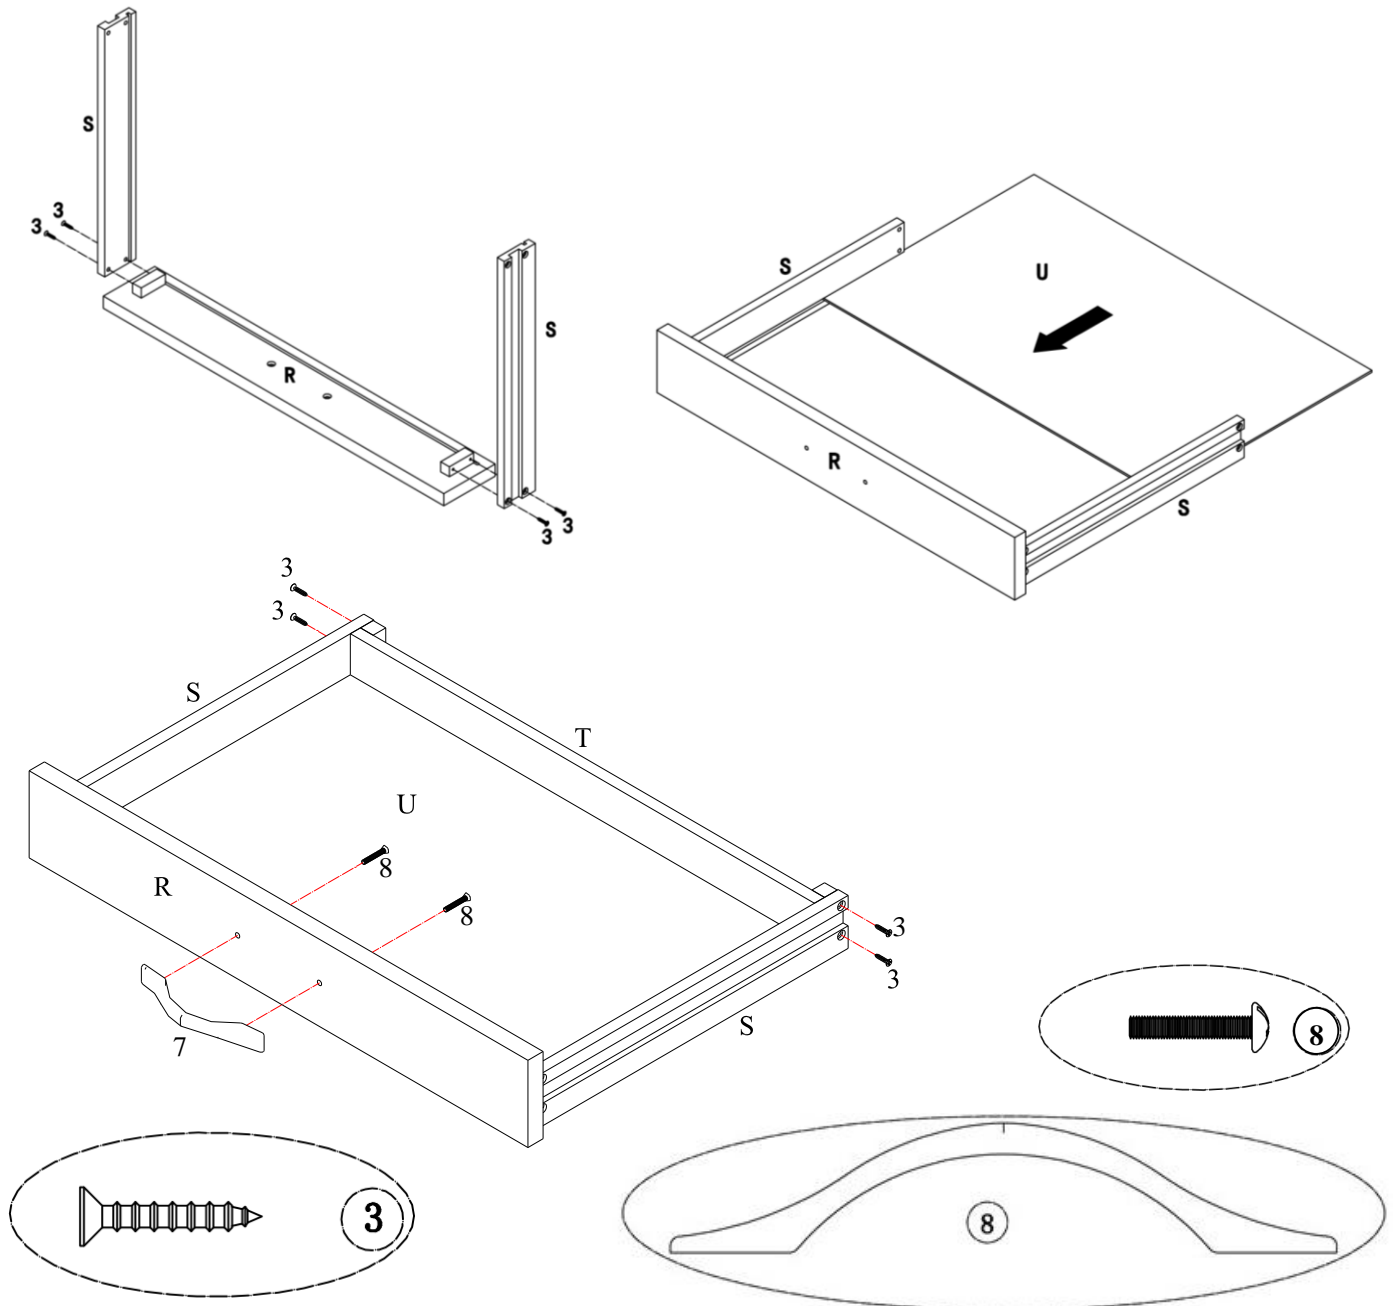


KITCHEN CART

DA6545N / DA6545W

STEP 10

Insert shelf supports (13) into right side panel (C) and left side panel (B).
Place adjustable shelf (I) onto the shelf supports (13).

 
Insert the drawer.

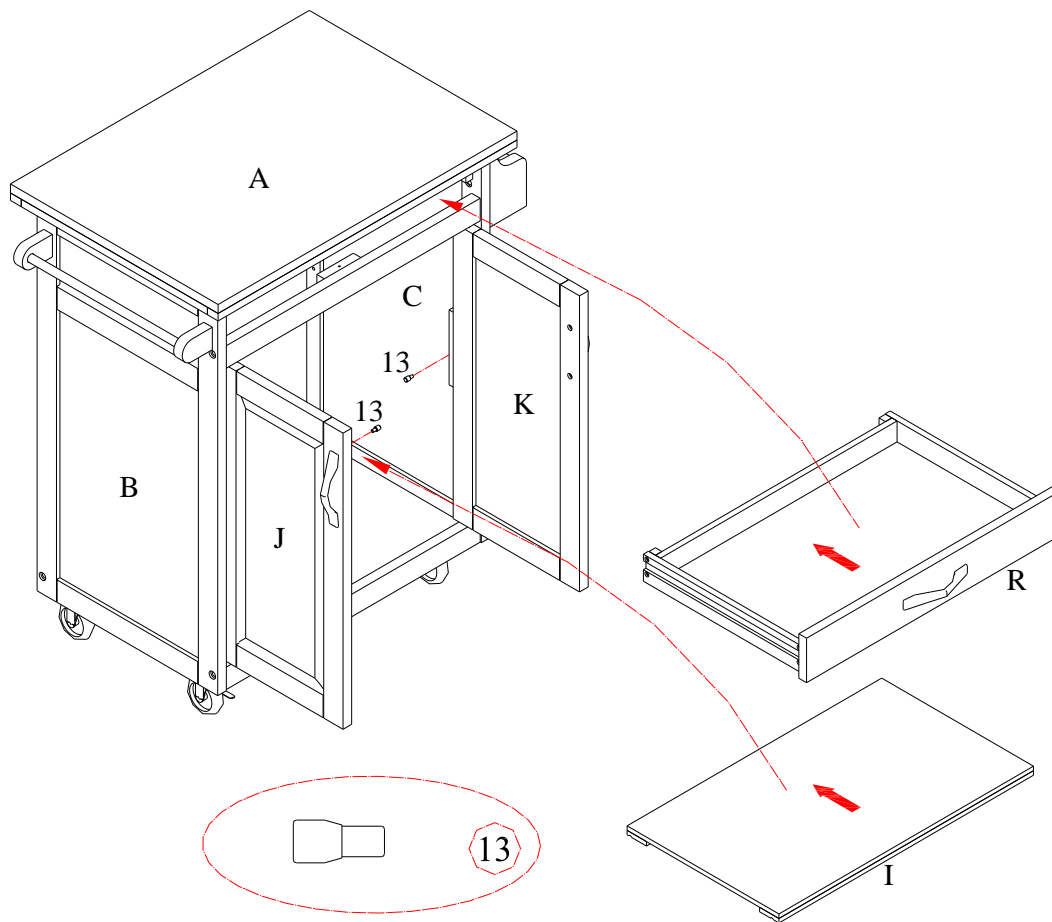

KITCHEN CART


DA6545N / DA6545W

 ⚠ CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

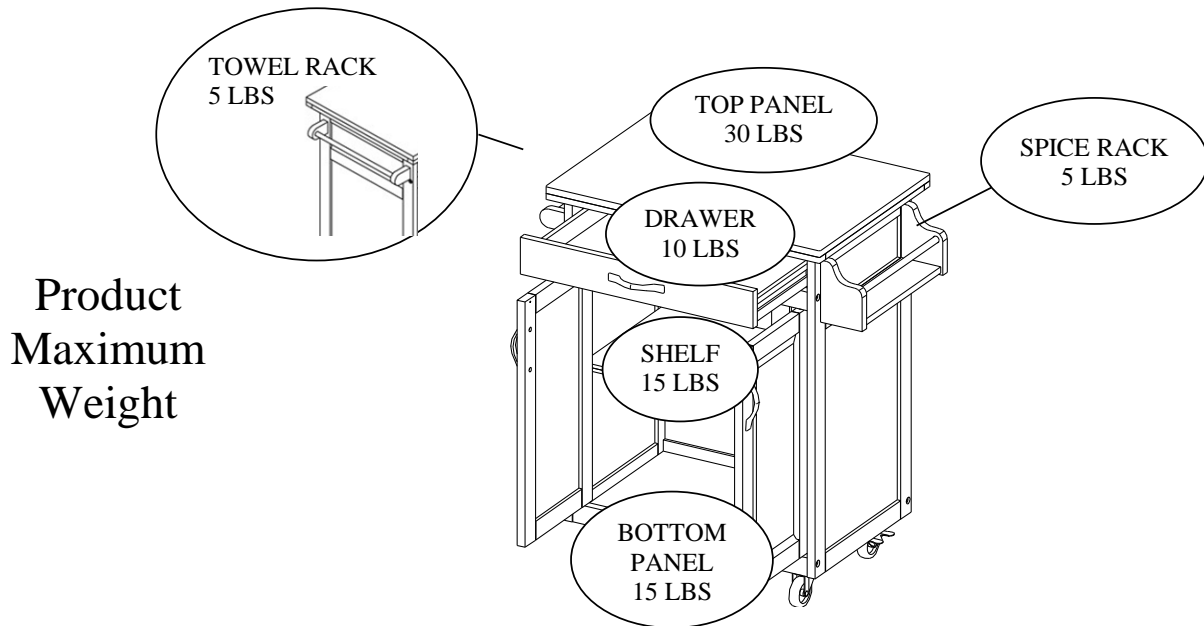

That's it ! You've finished assembling your kitchen cart.

⚠ WARNINGS:

- * **DO NOT** place any item on the kitchen cart with dimensions exceeding those of the top panel.
- * Before moving the kitchen cart remove all products off the top panel and make sure the caster wheels are in the unlocked position.
- * **DO NOT** use the kitchen cart as a seating  surface.
- * **DO NOT** place any type of electrical appliance on the unit.
- * **DO NOT** place any pots or pans containing hot liquids on the unit.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.

Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980

Customer Service Fax Number 514-353-7819

Email: das@dorel.com

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:
(including area code)

Date & Place of Purchase:

Part(s) description and quantity: (Please be sure to list model number or SKN number)

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1