



*Elizabethan
Classics*

Assembly Instructions for WS10

CAUTION: DO NOT OVER TIGHTEN NUTS AND SCREWS- THIS CAN LEAD TO STRIPPING OR CRACKING AND WILL VOID YOUR WARRANTY.

NOTE: TO BE INSTALLED ONLY BY QUALIFIED, LICENSED PLUMBER

NOTE: USE TEFLON TAPE ON ALL THREADED CONNECTIONS

Shut off the water supply valve under the sink. Remove your old faucet and pop-up assembly. Cover the sink drain so that no small parts are lost down it. Caution: Do not damage your old water supply lines. Clean the surface of the sink in preparation for installing the new faucet.

FAUCET INSTALLATION:

1. Unscrew the bell from the hot valve body. Thread the brass nut, metal washer and rubber washer down the valve body. Insert the hot valve body in the left hole of sink from underneath. Place the flange and o-ring, screw the bell onto the valve body securely. Tighten the brass nut tight.
2. Unscrew the brass locking nut (I), and remove the brass washer (H) and O-ring (G). Remove the T-connector (F). Install the spout in the center hole of sink. Place the rubber washer (A), metal washer (B) onto the threaded shank and secure with lock nut (C). Tighten wrench tight. Make sure the washer (E) is inside the T-connector (F), then re-attach the T-connector (F), O-ring (G), brass washer (H) and brass nut (I). Tighten the brass lock nut (I) tight by using a wrench.
3. Repeat step 1 for the cold valve body.
4. Attach supply hose to each side of the T-connector (F) and to the outlets of the valve bodies.
5. Connect the supply lines (sold separately) to the treaded shanks. Tighten brass supply line nuts securely. **CAUTION: Over-tightening can strip or over stress threads.**

POP-UP INSTALLATION:

1. Unscrew seat and top gasket from pop-up assembly.
2. Slip drain body through the drain opening and screw seat and top gasket onto the drain body.
3. Drop stopper into place. Remove pivot nut and insert pivot opening. Making sure the pivot rod engages the stopper properly.
4. Remove spring clip from pivot rod and slide pivot nut over pivot rod and thread onto pivot rod opening. Tighten firmly, being careful not to over-tighten.
5. With lift rod in positing on faucet, insert the lift rod through the lift rod strap secure with the set screw.
6. Guide the pivot rod through one the holes on the lift rod strap and secure it with the spring clip, then adjust the height of the lift rod by resetting the set screw.

HANDLES INSTALLATION:

1. Put the cross handles on the broaches and then tighten the screws.
2. Insert the caps on the cross handles.

AFTER INSTALLATION IS COMPLETED, remove the aerator. Turn on the water supply valves and allow both hot and cold water to run at least one minute each. While water is running, check for leaks, especially at hook-ups to supply lines. Tightening nuts slightly will stop any minor leaks.

