

This instruction contains 10 pages:

Page 1: Read Safety instructions

Page 2: Unpack and inspect parts contained

- Page 3~4: Notes before installation and Hanging system installation /Blade installation
- Page 5: Wire connection
- Page 6: Canopy installation / Transmitter instruction
- Page 7: Operation instruction
- Page 8~10: Resetting process



Toll Free: 1-855-676-7247

Net weight

5.2 KGS. 11.4 LBS.

WARNING : Read and follow these instructions carefully and be mindful of all warnings shown throughout.

READ AND SAVE THESE INSTRUCTIONS

WARNING : TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY TO PERSONS, PLEASE OBSERVE THE FOLLOWING :


- 1]. To ensure the success of the installation, be sure to read the instructions and review the diagrams thoroughly before beginning.
- 2]. To avoid possible electric shock, be sure electricity is turned off at the main power box before wiring. All electrical connections must be made in accordance with local codes, ordinances and/or the National Electric Code. If you are unfamiliar with the methods of installing electrical wiring and products, require the services of a qualified and licensed electrician as well as someone who can check the strength of the supportive ceiling members and make the proper installations and connections.
- 3]. Make sure that your installation site will not allow rotating fan blades to come in contact with any object when fan is in operation. Blades must mounted at least 7 feet from the floor.
- 4]. If possible, mount ceiling fan on a ceiling joist the joist must be able to support the motion and weight of the moving fan. If the fan will be mounted on a ceiling outlet box, a 4" x 2-1/8" deep METAL octagon box is required ; one UL listed as " suitable for fan support ". The box and its supporting members must not be able to twist or work loose. DO NOT USE PLASTIC BOXES. Installation on a concrete ceiling should be performed by qualified personnel.
- 5]. Blades should be attached after motor housing is hung and in place. Fan motor housing should be kept in carton until ready to be installed to protect its finish. If you are installing more than one ceiling fan, make sure that you do not mix fan blade sets.
- 6]. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into outlet box. The wires should be spread apart with the grounded conductor and the equipment grounding conductor on one side of the outlet box and the "HOT" wires on the opposite side.
- 7]. Electrical diagrams are for reference only. Light kits that are not packed with the fan must be UL/ETL listed and should be installed per the light kit's installation instructions.
- 8]. After fan is completely installed, check to make sure that all connections are secured to prevent fan from falling and/or causing damage or injury.
- 9]. The fan can be made to work immediately after installation. There is no need to oil your fan. The motor has permanently lubricated bearings.
- 10]. The fan must be turned off and stopped before reversing fan direction.
- 11]. The fan is for downrod mount only.
- 12] . This fan is reversible.
- 13]. This fan is controlled by remote.
- 14]. This fan is suitable for damp location use.

" Special note: All green grounding wire(s) from fan must be attached to house Ground/Earth wire to prevent flickering of LED. "


P2


Unpack and inspect fan carefully to be certain all contents are included.

Unpack (Fan & Blades packed in one Box)

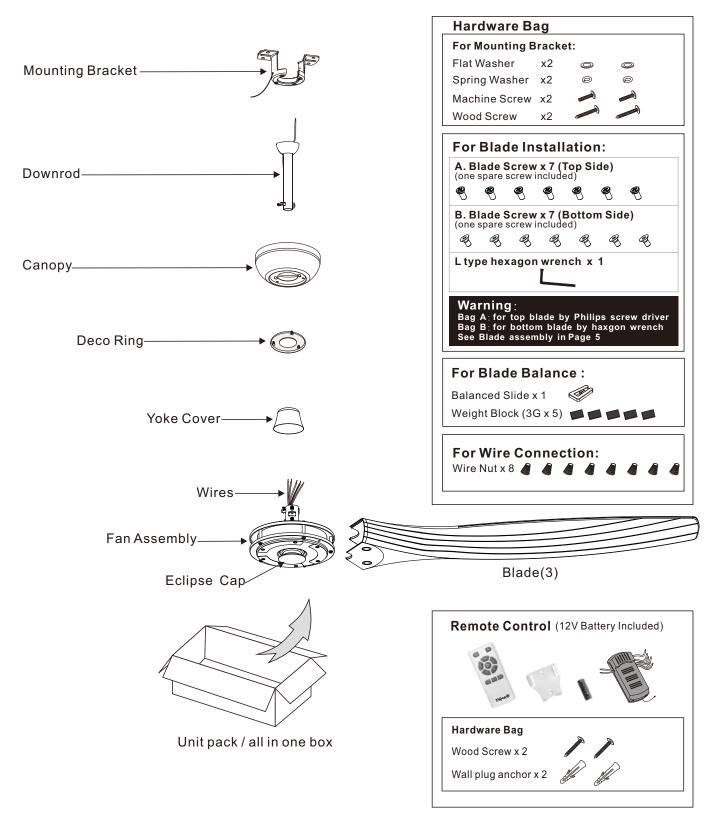


WARNING: blades should be at least 7 feet from floor

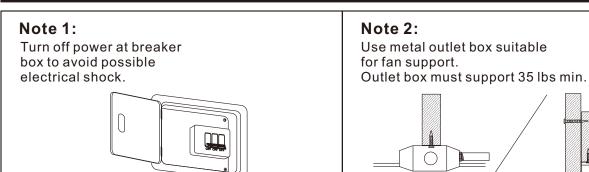

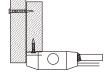

1. HANGING SYSTEM INSTALLATION

1. Installing mounting bracket to ceiling outlet box

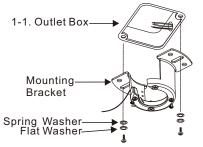



1-1. Install mounting bracket to outlet box on ceiling by using screws included with the outlet box and washers from the hardware bag.

1-2. Screw (2) (Loosening)

1-2. Loosen the screws at mounting bracket. **Do not remove.**

2. BLADE INSTALLATION

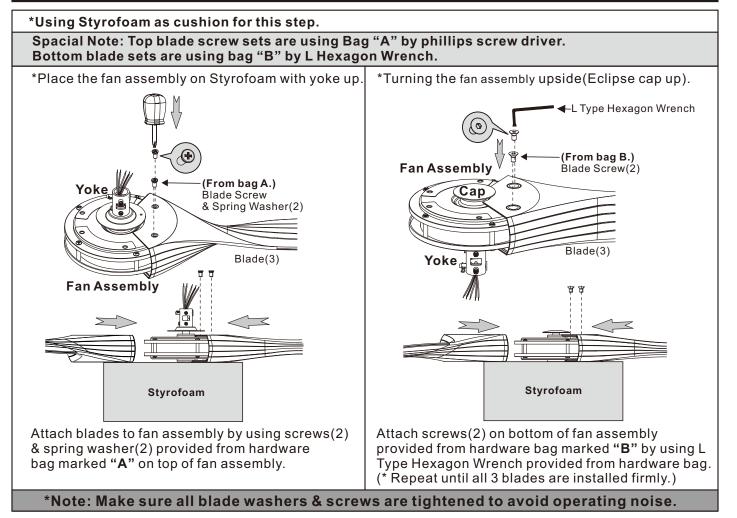

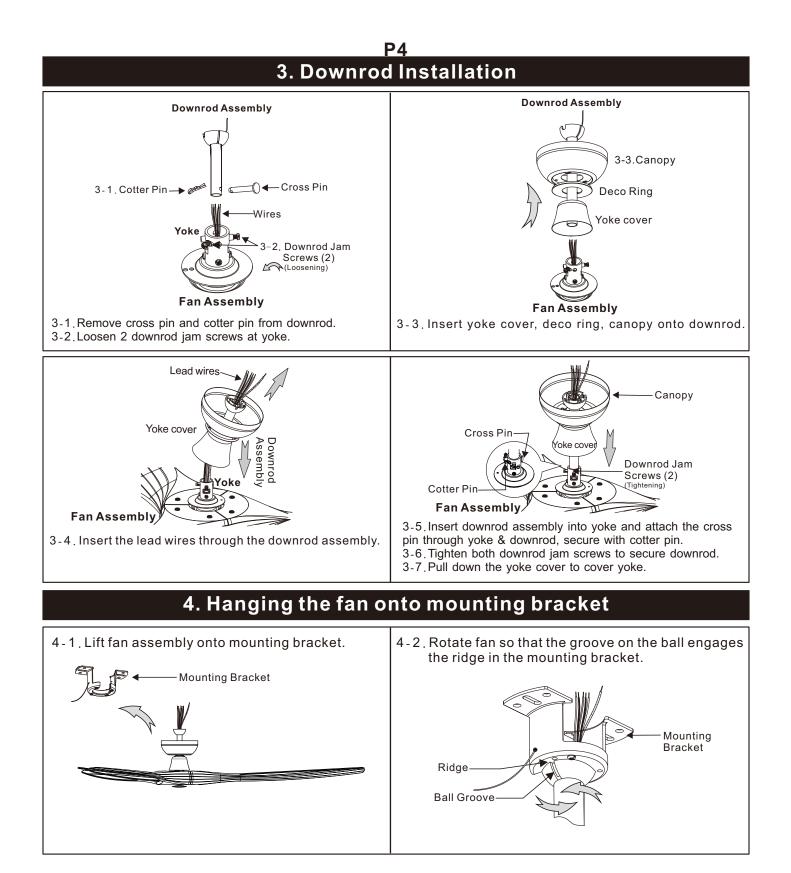


5. WIRE CONNECTION

5-1. Check the serial No. & Model No. on the receiver & Transmitter NOTICE ·


All remote sets for DC motor are looked the same, this remote set (Transmitter and receiver) is pre-set at factory, please note the following before operation,

- 1. The serial number on transmitter and receiver must be the same.
- 2. The label also shows the model number on receiver.
- 3. Do not mix the remote sets if you are installing more than one fan.

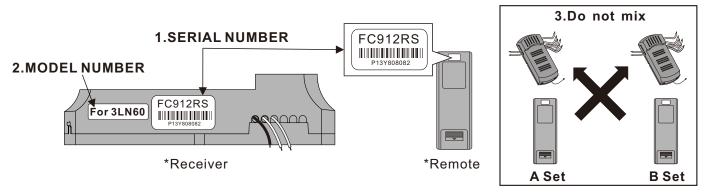

5-2. Insert receiver into mounting bracket

NOTE: Do not squeeze all the wires while inserting the receiver into the mounting bracket.

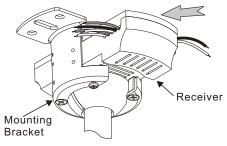


5-3. Making electrical wire connection

The standard lead wires are for 72" downrod. You may need to cut all 5 lead wires (from motor) in proper length & strip them for wire connection and it is easier for Canopy installation.


Follow diagram below and make sure that all exposed wires are secured inside wire nuts or terminal block. Note : Wires from house may vary in color and may not include ground wire (green).

After wiring is completed, gently push wires into junction box with wire nuts pointing upward.

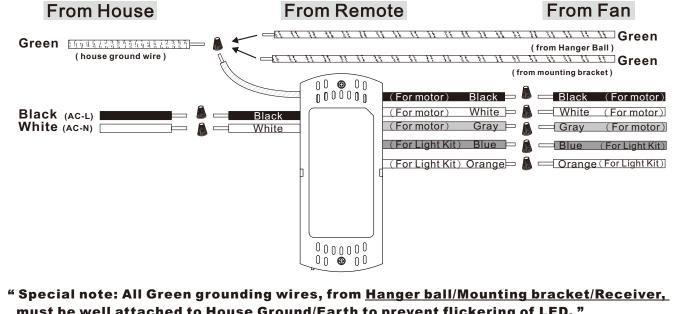

must be well attached to House Ground/Earth to prevent flickering of LED. "


P6 6. CANOPY INSTALLATION

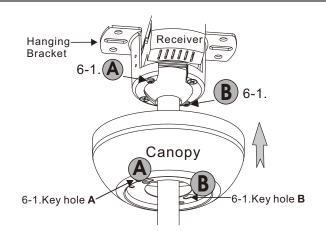

Note: Two screws are installed on mounting bracket for canopy installation.

6-1. Push canopy up until the two pre-screwed screws on the mounting bracket are engaged with the two key holes on canopy.

6-2. Before rotating the canopy, make sure Key hole **A** & **B** of the canopy correspond to **A** & **B** positions of the hanging bracket.

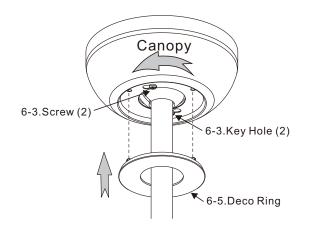



6-3. Rotate canopy slightly until the two preinstalled screw heads are engaged in the narrow end of key holes.

6-4. Tighten both screws.


6-5. Aligning the nubs from Deco Ring to 3 holes on the canopy, push Deco Ring up and snap into the canopy.

7.TRANSMITTER INSTRUCTION

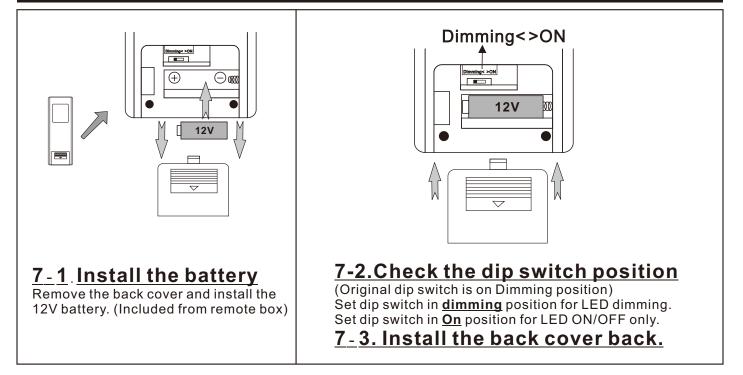

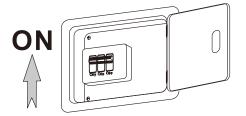

Turn on power at breaker box, the fan is ready for operation! (The receiver will have beep sound)

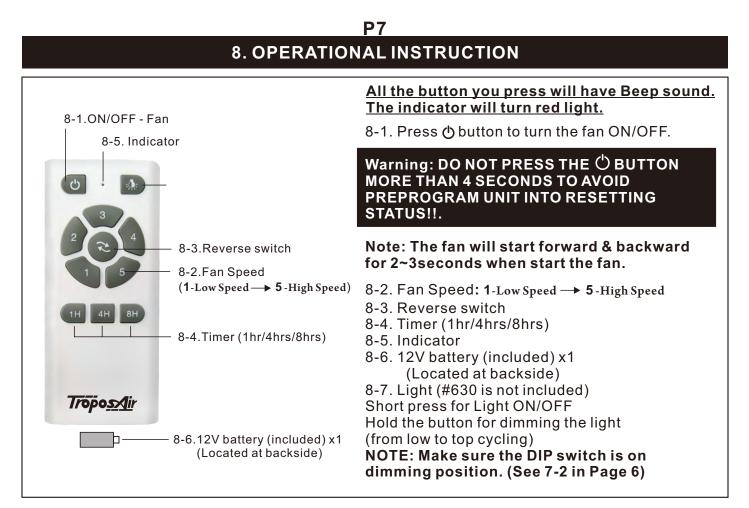

Note: The remote has "Memorize device", the "fan speed" & "Light" will be back to last status when you turn the fan on.



#630(Not included)

Integrated type: For only Solara / Troposair


9. Resetting process

For single fan

In the event the fan does not operate properly, please check the following steps.

9-1. Put down the canopy and check the all wires are connected properly.

9-2. Process the resetting as following at 9-3.

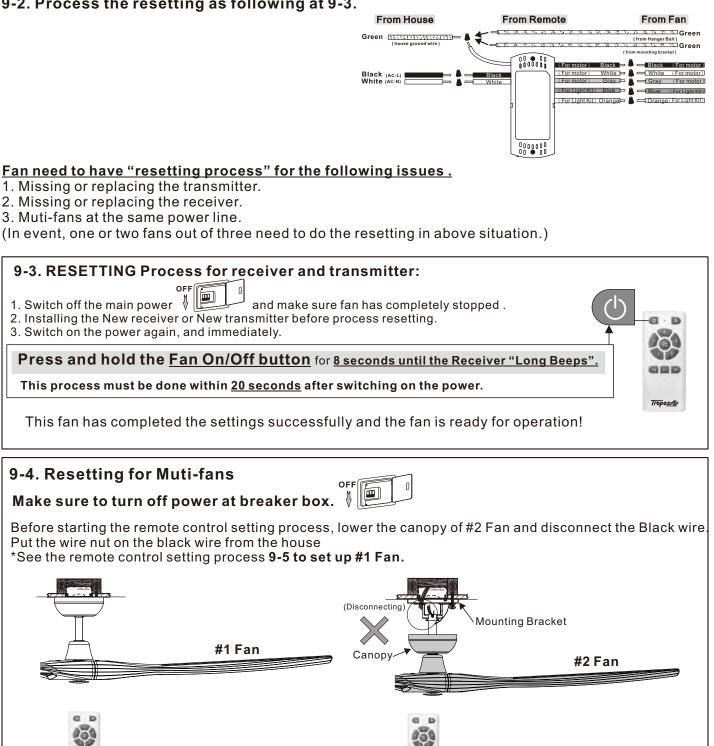


000

Turn on power at breaker box and #1 Fan is ready for setting.


#1 Fan is ready for setting.



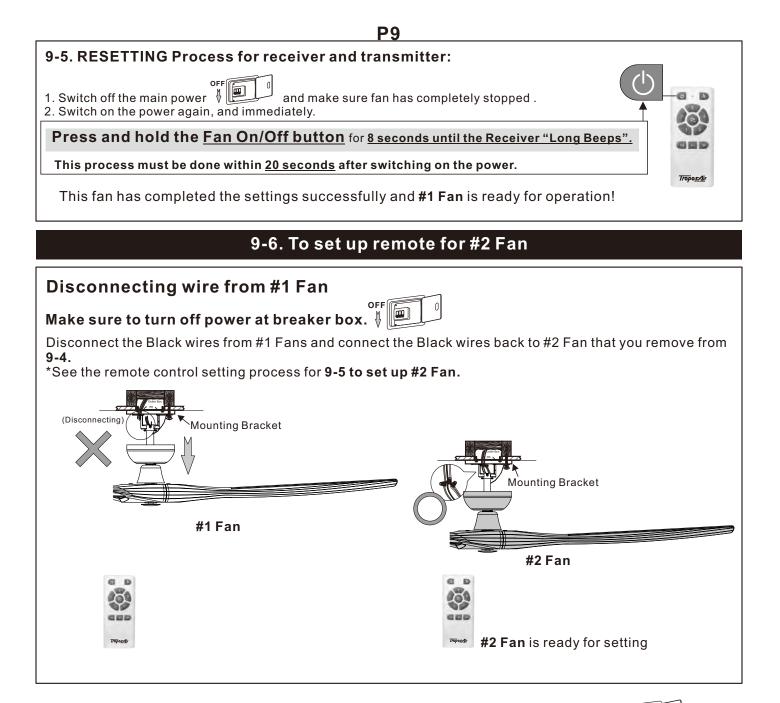


Turn on power at breaker box and #2 Fan is ready for setting.

P10 10. Reconnecting all fans

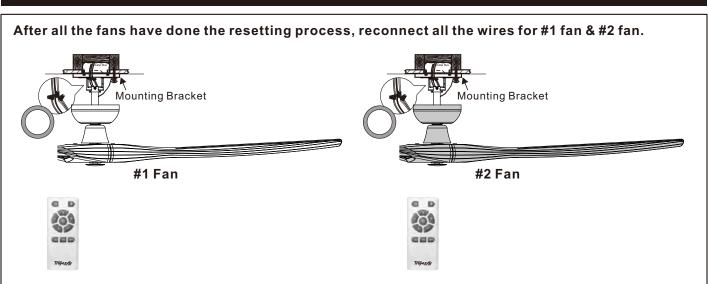

10-1.

Turn on the power from main switch and now each of these two fans are operated by its own remote individually.

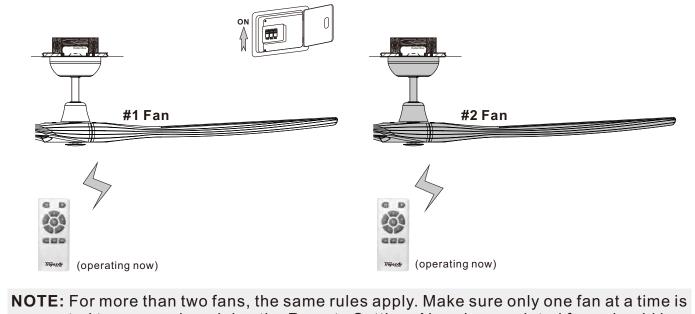

NOTE: For more than two fans, the same rules apply. Make sure only one fan at a time is connected to power when doing the Remote Setting. Already completed fans should be disconnected until all fans have completed the Remote Setting process.