


HOME
DECORATORS
COLLECTION

Item #667-668
667-658
Model # HF-B0036
HF-B0036B

USE AND CARE GUIDE

BREXLEY CLUB CHAIR RECLINER

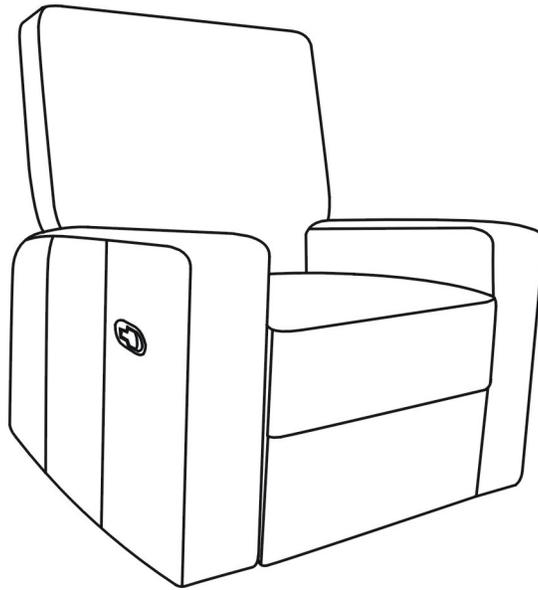

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. – 6 p.m., EST, Monday-Friday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.

Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2	Pre-Assembly	3
Safety Information	2	Planning Assembly	3
Warranty	2	Package Contents	3
1 Year Product Warranty	2	Assembly	4
What is Covered.....	2	Care and Cleaning	5
What is Not Covered	2		

Safety Information

Save these instructions for future reference. Record the model number from the packing label.



WARNING: Keep plastic bags and small parts away from children.



WARNING: Safely discard all packing material.

Warranty

1 YEAR PRODUCT WARRANTY

WHAT IS COVERED

We warrant the product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing, or abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-800-986-3460 or visit HOMEDEPOT.COM/HOMEDECORATORS.

Pre-Assembly

PLANNING ASSEMBLY


Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard.



NOTE: More than one person may be required to complete the assembly of this product.


PACKAGE CONTENTS

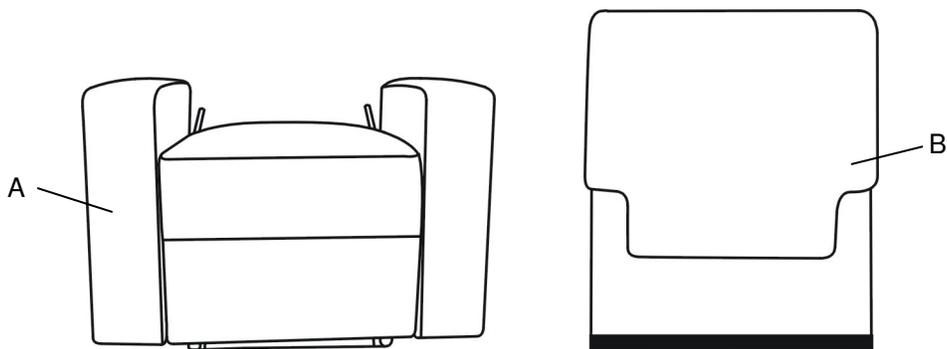


Part	Description	Quantity
A	Chair Base	1
B	Chair Back	1

1 Attaching the chair back to the chair base

- Align the slot of the metal female clip preassembled onto the end of the chair back (B) and insert it into the metal male clip preassembled on the chair base (A).
- After the chair back (B) is properly aligned with the chair base (A), insert into the chair base (A) completely and tightly.

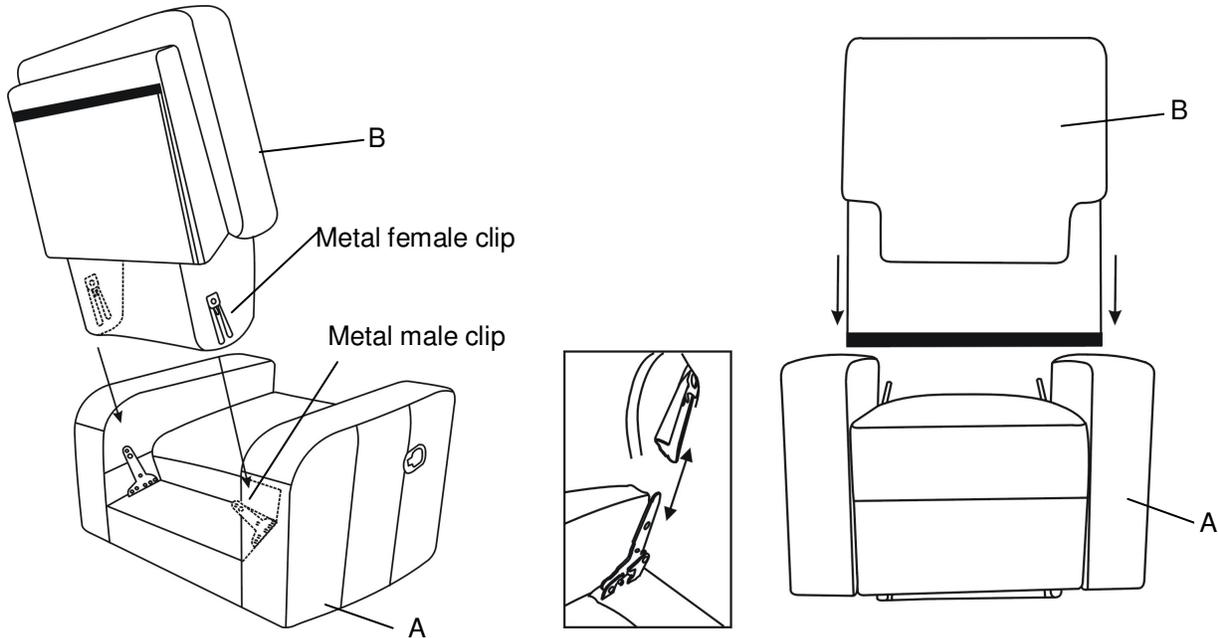

NOTE: To disassemble the chair back (B) from the chair base (A), pull out the pulling buckle on the metal female clip as shown on below picture. Then pull chair back (B) upward. Be careful and watch your hand at this step.

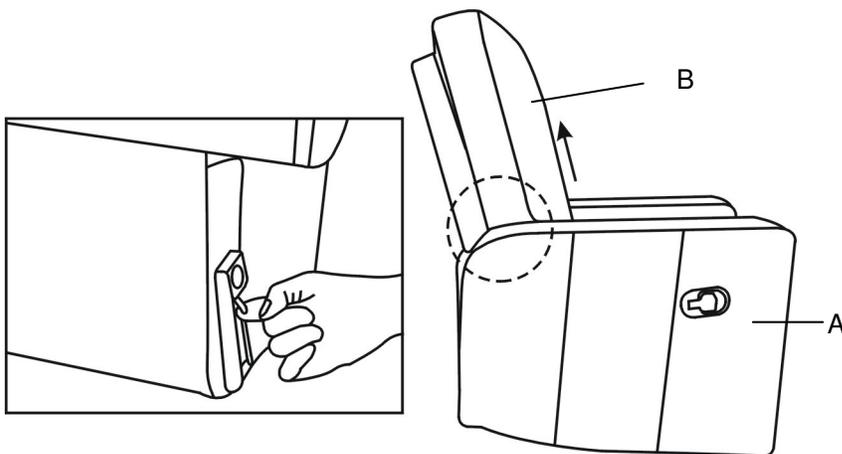

Care and Cleaning

- For best results, clean the furniture with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach, or solvents.
- Store the furniture in a dry, sheltered place when not in use.
- Keep the furniture out of fire, extreme heat, freezing conditions, and inclement weather, such as rain, hail, sleet, snow, or wind.

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. – 6 p.m., EST, Monday-Friday

1-800-986-3460

[HOMEDEPOT.COM/HOMEDECORATORS](https://www.homedepot.com/homedecorators)

Retain this manual for future use.