



# Swan Retro

designed for life



## Toaster

Model: ST19010/ST19020 (all colours)

V1.0 CAN





## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. DO NOT touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, DO NOT immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the manufacturer for examination, repair or adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by the manufacturer may cause hazards.
9. Do not use outdoors.
10. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
11. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot liquids.
13. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF',





## IMPORTANT SAFEGUARDS

then remove plug from wall outlet.

14. DO NOT use appliance for other than intended use.
15. DO NOT leave unit unattended while in use.
16. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
17. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls and the like, when in operation.
18. DO NOT attempt to dislodge food when toaster is plugged in.
19. DO NOT place any bread or object on top of the toaster. This will block airflow and cause fire or damage to the toaster.

## SAVE THESE INSTRUCTIONS

## HOUSEHOLD USE ONLY



### GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug [2 blades and 1 pin]. If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.





## HOW TO USE

### BEFORE FIRST USE

Unpack the toaster and remove all packaging materials etc.

- Place the toaster on a suitable, level, heat resistant surface. Set the browning dial to 3 or 4.
- Place one or two slices of bread into the toaster slots.
- Press down the carriage lever. NOTE: The carriage lever will only stay down if the product is connected to the electricity supply. The toast will pop up when it is ready

### THINGS TO NOTE:

On first use, you may notice a slight odour. This is caused by the evaporation of light oils used in manufacture. This only occurs on the first use and does not affect the taste of your toast.

### OTHER FUNCTIONS:

The **Defrost** bread setting is perfect for defrosting and toasting frozen bread. To use this function, press the carriage lever down then press the Frozen Bread button.

The **Bagel** setting warms the outside crust and browns the cut side of the bagel, English muffin, etc.

The **Cancel** function interrupts the toasting process in any mode





## CLEANING & MAINTENANCE

ALWAYS ENSURE THE PRODUCT IS UNPLUGGED AND COMPLETELY COOL BEFORE CLEANING.

- This product requires very little maintenance.
- The toaster is equipped with a crumb tray which slides out from the bottom of the toaster. This should be removed and the crumbs discarded after each use. Excessive build up of crumbs can cause an unpleasant odour and – in extreme cases – pose a fire hazard.
- For cleaning external surfaces, a soft cloth moistened with a mild detergent solution is all that is required.

DO NOT USE ABRASIVE OR STRONG CHEMICAL CLEANERS

DO NOT IMMERSE ANY PART OF THE PRODUCT IN WATER

All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section





## POWER CORD

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.



## LIMITED WARRANTY

**\*\*The original sales receipt is the only acceptable proof of purchase\*\***

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website: [www.salton.com/customer-care](http://www.salton.com/customer-care)

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received. This warranty does not include the cost of shipping, which is to be borne by the customer.



 **WARRANTY FORM**

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ Prov/State \_\_\_\_\_ Postal/Zip Code \_\_\_\_\_

Daytime Phone No. \_\_\_\_\_ Email \_\_\_\_\_

Product defect: \_\_\_\_\_

Type of payment:      Cheque/Money Order       Visa       MasterCard

Name on card \_\_\_\_\_ Expiry Date \_\_\_\_\_ CSV No \_\_\_\_\_

Card No. \_\_\_\_\_

To contact our Customer Service Department:

SALTON CANADA  
 81A Brunswick,  
 Dollard-des-Ormeaux, Quebec H9B 2J5  
 Canada

Telephone: 514-685-3660 (Ext. 226)  
 E-mail: [service@salton.com](mailto:service@salton.com)  
 Fax: 514-685-8300  
[www.salton.com](http://www.salton.com)





[www.swan-brand.com](http://www.swan-brand.com)



Scan this QR code  
to hear about  
our story



We love  
what we do



we're proud  
of our quality



Find us on Facebook

Distributed by / Distribué par: Salton Canada  
81A Brunswick, Dollard-des-Ormeaux, QC, Canada H9B 2J5