



# CAMP CHEF

THE WAY TO COOK OUTDOORS™

**CAUTION:** *Please be advised that this fire pit is equipped with natural lava rock that may crackle or pop the first time it is used. The lava rock has been pre-heat treated. However, in rare cases on first time use the lava rock may pop or burst causing small pieces of hot rock to fly out of the fire pit. These hot pieces could cause injury or property damage.*

As a precaution, please follow these instructions the first time the fire pit is used:

1. Follow manufacturers instructions to assemble the fire pit.
2. Place included screen over the lava rocks.
3. On first use do not stand over or near the fire pit once lit.
4. Set up the fire pit a safe distance away from any combustible materials.
5. Light the fire pit and let it run on high for 15 minutes.
6. Once lit do not go within 10 feet of the fire pit for the first 15 minutes on the first use.
7. After first use burning process, discard screen.

After the first heating cycle there is no further concern. It is rare that any crackling will happen on the first use, this is simply a precaution. Discard the screen after first use.



Screen shown on model #: GCL0GD.  
Your fire pit may vary from this picture.

