

- Please read manual carefully before using it
- Please see the real product for its appearance、 color and design
- There may be some differences between our refrigerator you buy and this manual because of improving of the product, but it does not influence its capability and the method



# Refrigerator

■ EP22756BK/WH


## Contents

Safety attention items .....	1
Structure figure .....	2
Preparation for use .....	3
Temperature selection .....	4
Instructions for use .....	4
Bulb replacement .....	6
Methods for defrosting .....	6
Cleaning the appliance .....	7
Trouble-shooting guide .....	8
Non-trouble phenomenon .....	9
Major parameters .....	10
Packing list .....	10
Figure of the appliance's working principle .....	11



Figure of the appliance's working principle

 Thanks for choosing our products

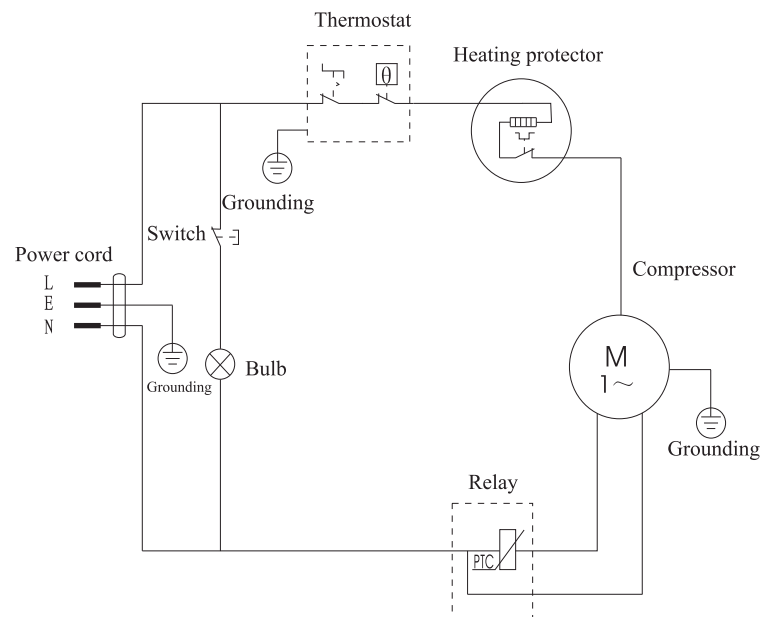

Attention:




- It's only for your reference, specific parameters are based solely on the data on nameplate.


Product model:  
**EP22756BK/WH**




## Safety attention items

 - Please read the safety instruction carefully.

 It maybe leads to death or badly injury.	 It may hurt you by accidentally or damage the material.	 Forbidden!
----------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------


 Power supply used at the appliance must be in accordance with the nameplate. Use standard three pin socket (above 10A), and plug must be grounded.	 Keep the plug clean, make sure it is firmly touched. Do not press the plug, damage the power cord, or leave the power cord close to compressor lest the insulation
 Do not store flammable, highly volatile and eroded goods.	 If the appliance has exceptional sound, odor, smoke or other unusual instance, cut off the power supply and call our service agent in time.
 Do not make the appliance wet, or place a vessel of water on it.	 It's forbidden to hang heavy objects on the door, or else may overturn the appliance, especially for child.
 Do not use the appliance outdoors or in rain.	 Do not store glass bottles or canned liquid food in freezer compartment because it may cause cracking. It may hurt your hands if you touch the foods in freezer compartment with your wet hands.
 Do not disassemble repair the appliance by yourself.	 Disconnect power supply before you replace the bulb, clean the appliance or you do not intend to use the appliance for long periods of time.
 Do not place heavy objects on top of the appliance or other heat emitting devices such as thermos, electric cooker booster, candle and etc.	 Do not touch the appliance when the gas leaks, turn off the valve first, and then open the window for ventilation. It may cause fire if you pull out the plug or turn the thermostat at once.



## Major parameters


Model	EP22756BK/WH
Ratevoltage	115V/60Hz
Effectivestoragevolume(L)	22
Freezervolume(L)	73
Packingdimension(mm)	460*550*1065
Refrigerant/Inputquantity	R134a/68g
Ratecurrent(A)	0.9
Foam	Cyclopentane
Netweight(kg)	27.6

 - Addition :We keep the right to amend the design of our products without further notice. Specific parameters are based solely on the data on nameplate.



## Packing list

 
Model	EP22756BK/WH
Ice-makebox	1
Eggrack	1
Refrigeratorshelf	3
Fruitbox	1
Fruitboxcover	1
Manual	1




## Non-trouble phenomenon

- Please check the following items before you require a service call:

 Problems	Causation
The noise of liquid is heard	This is a normal condition to hear the refrigerant flow during the operation and when it is not operating.
Silvery noise	The noise of the injection moulding when it expands or shrinks
Noise of compressor when it starts to work	It's the normal noise when the compressor is operating, especially when it starts and shuts down
It's wet outside or around door	There may be slight drips on the surface of the appliance in drippy days, it's the same reason as there will be drips on the surface of a glass of ice water
The surface of the appliance becomes hot	It's obvious to feel the temperature of the rear wall is growing when the appliance starts to work or in summer, it does not mean that something is wrong and it has no influence on the




## Structure figure

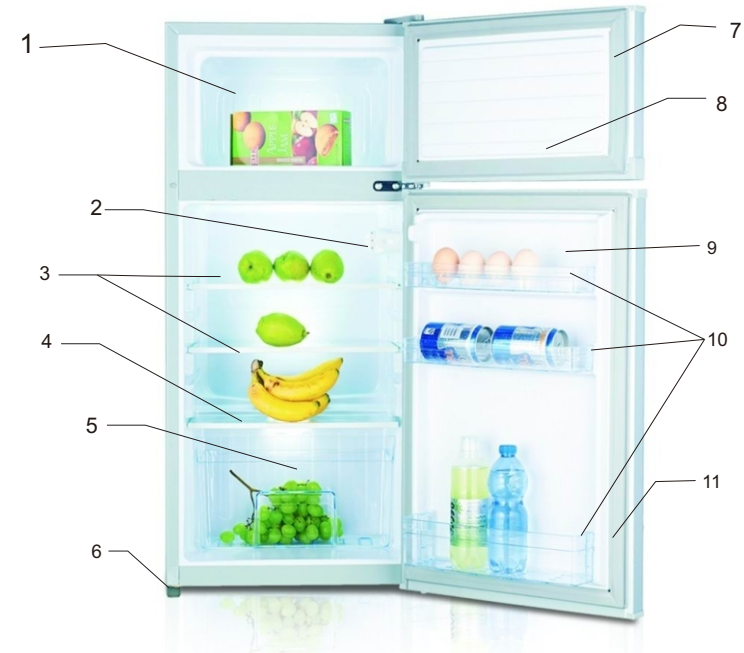 

- ① Freezer Compartment    ⑥ Adjustable Leg    ⑪ Refrigerator Door Gasket
- ② Thermostat Control    ⑦ Freezer Door Gasket
- ③ Glass Shelves    ⑧ Freezer Door
- ④ Crisper Cover    ⑨ Egg Rack
- ⑤ Vegetable Crisper    ⑩ Refrigerator Door Balconies


 
■ It s only for your reference, specific parameters are based solely on the data on nameplate



## Preparation for use

### 1 Move it correctly

  - ☆ Carry it from the bottom, don't pull door or handle.
- ☆ Keep horizontal position during transportation, do not upside down the appliance, tilting level cannot be over 45° .
- ☆ Avoid collision or violent shock.

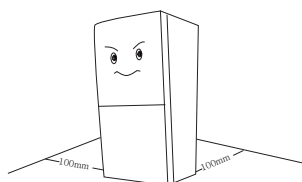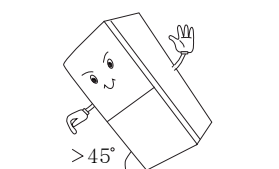

### 2 Place it correctly

- ☆ Place the appliance in a dry and ventilated environment. Never place it near heat emitting devices and do not expose to direct sunlight.
- ☆ The appliance must be level and installed on a firm solid base/floor. Use adjustable foot to level the appliance.
- ☆ Behind the appliance there should be a free space at least 100mm wide
- ☆ For your personal safety, this appliance must be grounded. Do not ground it via telephone cord or gas pipe.

### 3 For first time

- ☆ Clean the appliance thoroughly, especially in the interior. Set the thermostat knob at “3” . Check whether the compressor runs after connecting the appliance to electrical power supply. The temperature in freezer compartment should decrease obviously 30 minutes later. After connecting to power supply, leave the appliance for 2-3 hours before storing the food.



## Trouble-shooting guide

Problems	Causation and Solution
The appliance fails to operate	Check the power cord is properly connected
	Make sure thermostat knob is in operating position
Cooling system do not work well	You may set thermostat knob at a low figure
	Assure adequate air circulation around packages
	The appliance may be overloaded with warm foods
	The door is frequently opened
	Exposed to direct sunlight or near emitting devices
	The reason may be inadequate ventilation
Foods in refrigerator is frozen	The door is not properly closed (the door may sag, the gasket may be polluted or damaged)
	You may set thermostat knob at a high figure
Too much noise	Watery vegetables may be too close to the rear wall
	Keep it at level position on firm solid base/floor
	It may touch the wall or other objects next to it
	Make sure all accessories are correctly placed
	Drip tray on compressor may have fallen off
Unpleasant odor	Refrigerant tubes in compressor may touch together
	Make sure the foods are sealed
	Something is wrong with the foods
Fails to work in winter	You may need to clean the interior of the appliance
	The ambient temperature is too low, you should turn saving switch to “ON” position
The appliance fails to stop work in summer	The appliance may be overloaded with warm foods
	You may set thermostat knob at a high figure
	The door is frequently opened
	The reason may be inadequate ventilation
Water is leaking	The door is not properly closed (the door may sag, the gasket may be polluted or damaged)
	Water outlet may be clogged
	Make sure drip tray on compressor is correctly placed



## Cleaning the appliance

### 1 Cleaning the appliance

- ☆ Interior accessories  
Remove all the brackets , door , drawers and etc, use soft cloth to clean the appliance.
- ☆ Door gasket  
Door gasket can be taken down to clean, push it into the door trough when finishes. Clean it with neutral detergent.

 
### 2 Attention items

- ☆ Clean the appliance every two months to keep both interior and exterior clean.
- ☆ Disconnect power supply before cleaning, wash it with neutral detergent and then dry it. Door gasket should be cleaned carefully especially if it is contaminated in order to prolong the lifetime of the appliance.
- ☆ Do not use hot water, eradicator , acid or basic detergent , fancy soap , petrol , alcohol, organic solvent and brush.
- ☆ It's not allowed to wash the appliance with water directly in order to prevent rusting.
- ☆ Check the plug and power cord whether they're damaged.
- ☆ If you do not intend to use the appliance for long periods of time, disconnect the power supply, take out the foods and clean the appliance. Leave the door slightly open, and place the appliance in dry and ventilated environment.




## Temperature selection

- ☆ The temperature of the refrigerator is controlled by setting thermostat knob (ceiling of the cabinet ) to a desired setting. Thermostat will keep the temperature in a stated range according to the setting.
- ☆ The figure on thermostat knob is position of thermostat, it does not indicate the temperature. "0" means the appliance will stop work. From "1" to "6", the higher the figure is, the lower the temperature is. Set knob from "2" to "4" in summer and "4" to "6" in winter, "3" or "4" is suitable for ecumenical use.

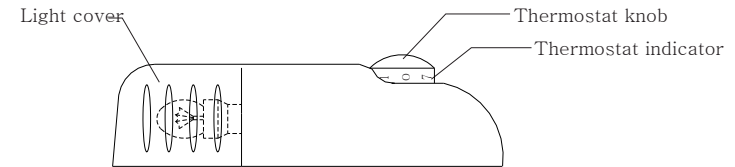

<Parts figure on thermostat cover>

 


## Instructions for use

### 1 Freezer

- ☆ Freezer compartment is used for freezing foods and making ice, ice cream and etc.
- ☆ After purchasing freezing foods, put it into freezer compartment as soon as possible before ice melt away .
- ☆ Before loading the appliance with packages of warm foods, make sure that they are cooled to ambient temperature.

## 1 Freezer

 - ☆ Make sure there is sufficient space for ventilation.
- ☆ It's easy for use if foods are packaged individually. Try not to open the door too often so as to save energy and prevent mixed odor.
- ☆ Freezer compartment does not fit for eggs, dairy products and etc.
- ☆ Icemaker box is used for making ice, put a glass vessel filled with 4/5 water into freezer compartment. Twist icemaker box to separate ice cubes from it after the water freezes. But never twist it like the bottom:

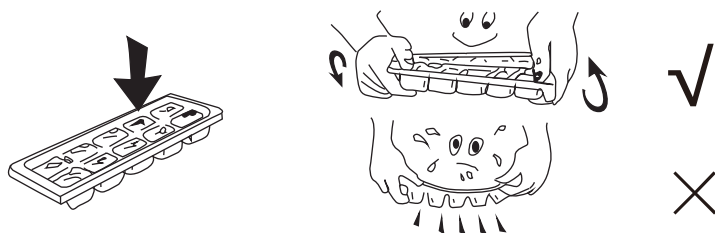

- ☆ Store cooked food and fresh food separately.

## 2 Refrigerator

- ☆ Refrigerator compartment is used for storing beverages and foods that do not need to be frozen. Put the foods that need a short-time storage and fresh dishes into it.
- ☆ Do not put watery vegetables into refrigerator compartment directly, or the water will accelerate rot of vegetables.
- ☆ Before loading the appliance with packages of warm foods, make sure that they are cooled to ambient temperature.
- ☆ Make sure there is sufficient space for ventilation.
- ☆ It's easy for use if foods are packaged individually. Try not to open the door too often so as to save energy.
- ☆ Tropical fruits such as banana, sweet melon, pineapple is not suitable to store in the appliance for a long time.



## Bulb replacement

- ☆ Disconnect the appliance from the power supply.
- ☆ Pull the light cover straight down.
- ☆ Remove the old light at anticlockwise direction.
- ☆ Revolve the new light at clockwise direction.
- ☆ Light parameters 115V, 10W



## Methods for defrosting

- ☆ There is no need to defrost the refrigerator, because ice depositing on the inner back wall is defrosted automatically. Defrost water collects inside the drain through passing through the drain outlet in the inner back wall into a drain pan situated above the compressor, from where it evaporates.
- ☆ Freezer compartment will frost after some time working. The thick frost will influence the freezing effect. Ice should be manually defrosted as soon as it is 5mm thick or above.
- ☆ Remove all foods in freezer compartment and pack them systematically, then put in cool place. Take away all the accessories and set thermostat at “0” position (or cut off power supply directly), open the door of freezer compartment. ( Place a glass vessel of water about 122°F if you want to accelerate the procedure)

### Attention

- Do not use coarse or aggressive cleaning agents as you can damage the surface.
- Do not use electric heaters to defrost.