





## **Operation Instruction:**

- $\Delta$  Upward movement
- **▽** Downward movement

Press the " $\Delta$ " or " $\nabla$ " and do not release until the workstation reaches the desired height. If the motor continuously operates for a relatively long period of time, the overheat protection will activate. The control panel will work normally again after approximately 20 minutes.

## Note:

1. Overload protection mode: while operating, if the load is over weight capacity, the system will enter into an overload protection mode. This will protect the system from damages caused by exceeding weight. When this happens, the workstation will move downward approximately 30mm and stop with the current height displayed.

2. Please reset the system when the adjustable mechanism cannot work or experiences unusual operation. 3. Reset mode: while the unit is powered on, keep pressing the " $\nabla$ " button and the workstation will move into a fully lowered position. Don't release it until the workstation moves upward for approximately 5mm and automatically stops.

