

# INSTRUCTIONS

## IMPORTANT: PLEASE READ ALL THE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

**WARNING:** Not recommended for children under 12 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

## IMPORTANT SAFETY INSTRUCTIONS WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

 **CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT OPEN THE COVER. NO USER SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

 **WARNING:** This product is recommended for OUTDOOR USE ONLY. Please read this manual carefully prior to using the unit.

Model: 88289,120V 60HZ 0.1A

### WARNING:

1. Read the manual prior to using the unit.
2. Keep the manual for further reference.
3. Keep the packaging so that you can transport the unit in its original packaging in order to avoid damage.
4. This item is very bright. Do not shine directly into eyes.
5. For outdoor use only. Just as a household lamps, not for commercial purpose.
6. During installation, nobody should stand beneath the mounting area.
7. Prior to the first use, have the unit checked by a qualified person.
8. The unit contains voltage carrying parts. DO NOT open the light effect.
9. Never plug or unplug the unit with wet hands.
10. Disconnect the unit from the mains prior to replacing the fuse.
11. If the plug and / or mains lead are damaged, they need to be repaired by a qualified technician.
12. If the unit is damaged to an extent that you can see internal parts, do not plug the unit into a mains outlet.
13. Dangers, do not attempt to replace the lamp, if the lamp is burn out, please destroy the unit.
14. Only connect this unit to an grounded mains outlet of 120V ac/60Hz.
15. Always unplug the unit during a thunderstorm or when it's not in use.
16. If the unit has not been used for a longer period of time, condensation can occur inside the housing. Please let the unit reach room temperature prior to use.
17. When you unplug the unit from the mains always pull the plug, but not the lead.
18. In order to prevent dropping of the unit, a safety fastening needs to be installed. This can be a solid cable, etc. which has to be fastened separately from the mounting bracket.
19. The supplied bracket is the main fixing and must be used to solidly mount the light effect.
20. In order to avoid accidents in public premises, the local legal requirements and safety regulations / warnings must be fulfilled.
21. Keep out of the reach of children.
22. When using outdoor use portable luminaires, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.
23. Ground Fault Circuit Interrupter (GFCI) protection is to be provided on the circuit(s) or outlet(s) to be used for the wet location portable luminaire. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.
24. Use only with an extension cord for outdoor use, such as an extension cord of cord type SEW, SEOW, SEOOW, SOW, SOOW, STW, STOW, STOOW, SJEW, SJEOW, SJEOWW, SJW, SJOW, SJOOW, SJTW, SJTOW, or SJTOOW.

## SAVE THESE INSTRUCTIONS USE AND CARE INSTRUCTIONS

# USER SERVICING INSTRUCTIONS

1. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connection, or exposed copper wire.
2. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.

# USER SERVICING INSTRUCTIONS

**WARNING:** Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

**Congratulations!** You're the proud owner of a outdoor Projector. Please read over the directions carefully before using the item.

- Creates a christmas light show.
- Lighting effects: Fire & Ice
- Portable design.
- LED color: white

## CONTENTS

Outdoor Lightshow Projector	1 pc
Image Slides	8 pcs

## INSTRUCTIONS

Set-up Approximately 1-5 minutes.

1. Remove contents from packaging.
2. place unit on level floor and install the stake ,adjust the angle of the stake .
3. Pull slide holder out and insert desired Image Slide.
4. Plug into receptacle or other outlet device to activate your Projector.
5. To deactivate, unplug.
6. Do not block the cooling fan on bottom or ventilation opening on top of Projector.
7. When picture is not clear,only adjust the focal length.It's on the front of the projector.

### Mounting Instructions:

1. Adjust the desired inclination-angle via the mounting bracket and fix the bracket screws tightly.
2. For the pin spot with plug, connect the fixture to the mains with the power plug.

### Outdoor-Holiday Projector assembly instructions

1. Assemble the light stake parts A & B as shown in illustration 1 , Push the A and B parts together until tighten the screws.
2. Push A through the circle, insert the grooves of projector, and tighten the circle, then adjust the angle of projector.
3. Open the lid of the projector (turn right or left), choose your favorite slides, in the projector. (see Illustration 2)

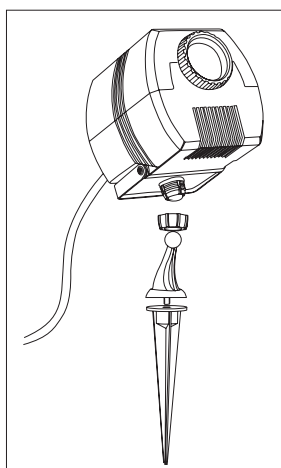


Illustration 1

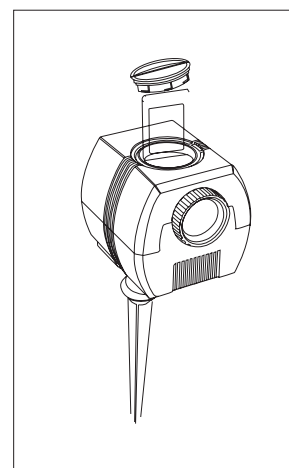


Illustration 2

## WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **WARNING:**

---

CAN ICES-3(B).

## **THIS INSTRUCTION SHEET APPLIES TO ITEM NUMBER**

---

88289



Visit [WWW.GEMMY.COM](http://WWW.GEMMY.COM) for more information.

©2014 GEMMY INDUSTRIES CORP.

117 WRANGLER DRIVE, SUITE 100

COPPELL, TX 75019 U.S.A.

1 (877) 250-9032

MADE IN CHINA / PRINTED IN CHINA