

# OWNER'S MANUAL

## GRIZZLY B-AIR DRYER / BLOWER

### MODEL #GP-1-UL



#### INTRODUCTION

- OPERATION
- SAFETY
- SERVICE
- WARRANTY
- CONTACT
- SPECIFICATIONS
- TROUBLESHOOTING

PLEASE READ AND SAVE THESE  
INSTRUCTIONS

## **INTRODUCTION TO GRIZZLY B-AIR GP-1-UL**

YOUR NEW **GRIZZLY B-AIR GP-1-UL BLOWER AND DRYER** HAS A 1 HP HIGH EFFICENCY MOTOR WITH THE FOLLOWING FEATURES:

- STATE OF THE ART CONSTRUCTION
- SAFETY SCREENS ON OPEN VENTS
- EASY TO USE CARRYING HANDLE
- “KICK STAND” ALLOWS FOR ADDED HEIGHT WHEN NEEDED.
- OPTIONAL TIMER
- 3 SPEED SWITCH

## **OPERATION/USE**

**THIS HIGH AIR VOLUME BLOWER IS INTENDED TO DRY, INFLATE, AND MOVE AIR. IT IS SUITABLE FOR A VARIETY OF APPLICATIONS.**

- A) CAREFULLY PLACE THE GRIZZLY B-AIR UNIT ON A STABLE FLAT DRY SURFACE DURING OPERATION.
- B) USE FREE STANDING OR WITH ATTACHMENTS
  - 1) THE GRIZZLY B-AIR UNIT CAN BE POSITIONED TO AIM AIRFLOW ACROSS FLAT SURFACES OR ANGLED UPWARD. RAISE OR LOWER THE ATTACHED STAND FOR HEIGHT ADJUSTMENT.
  - 2) PET DRYING – ATTACH THE DEN DRYING KIT FOR MULTIPLE CAGE DRYING.
  - 3) INFLATABLES – ATTACH AN INFLATABLE TUBE AROUND THE EXHAUST OPENING USING STRAPS, VELCRO, OR ANY OTHER FORM OF TIGHTENER.
- C) TURN ON THE SWITCH TO DESIRED SPEED AND MAKE SURE IT IS OPERATING CORRECTLY.
- D) TIMERS ARE OPTIONAL. IF THE UNIT COMES WITH A TIMER, SET FOR DESIRED OPERATIONAL TIME. WHEN TIME ELAPSES, THE UNIT WILL AUTOMATICALLY TURN OFF.
- E) ALL BLOWERS/DRYERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.

## **STORAGE**

**STORE UNIT INDOORS IN A CLEAN DRY ENVIRONMENT TO ENSURE LONG LIFE**

## **SAFETY**

- 1) KEEP CHILDREN AND PETS AWAY FROM UNIT WHILE IN OPERATION AND/OR PLUGGED IN.
- 2) DO NOT PUT FINGERS OR OTHER OBJECTS IN UNIT WHILE IN OPERATION AND/OR PLUGGED IN.
- 3) TO AVOID ELECTRIC SHOCK DO NOT OPERATE IN POOLED WATER, MOTOR MUST BE KEPT DRY AT ALL TIMES. IF UNIT BECOMES WET, THOROUGHLY DRY BEFORE NEXT OPERATION.
- 4) INDOOR USE: USE ONLY WITH A GROUNDED PLUG AND/OR EXTENSION CORD TO AVOID RISK OF ELECTRICAL SHOCK OR FIRE. REMEMBER NEVER TO USE A CORD WITH ANY KIND OF DAMAGE OR WEAR.
- 5) UNIT MUST BE KEPT DRY AT ALL TIMES, INCLUDING MOTOR, WIRING AND EXTERIOR. IF UNIT BECOMES WET, THOROUGHLY DRY BEFORE NEXT OPERATION.
- 6) TO PREVENT OVERHEATING THE UNIT, KEEP AIR INTAKES CLEAR AT ALL TIMES, CLOGGING OR BLOCKING THE AIR INTAKES COULD RESULT IN A FIRE OR ELECTRICAL HAZARD.
- 7) IN ORDER TO PREVENT INJURY DO NOT REMOVE ANY SCREENS OR SAFETY GUARDS FROM THE UNIT AND TO AVOID OBJECTS FROM COMING IN CONTACT WITH THE BLOWER WHEEL. UNIT DAMAGE IN THIS MANNER WILL VOID YOUR WARRANTY.
- 8) DO NOT OPERATE UNIT CLOSE TO ANY DANGEROUS AREAS, SUCH AS EXPLOSIVE GASES, FLAMMABLES, HEATERS AND UNVENTILATED ENVIRONMENTS, WHICH MAY RESULT IN EXPLOSIONS OR ELECTRICAL HAZARDS.
- 9) DO NOT USE ANY FORM OF SPEED CONTROL DEVICE AS DOING SO MAY CAUSE INJURY OR FIRE.
- 10) ALWAYS PLACE BLOWER ON A SMOOTH AND LEVELED SURFACE FOR SAFE OPERATION.
- 11) DO NOT USE UNIT IF DAMAGED.
- 12) BEFORE CLEANING OR SERVICING UNPLUG UNIT.
- 13) ALL BLOWERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.
- 14) DO NOT EXPOSE TO RAIN, WATER OR SNOW.
- 15) OUTDOOR USE: UNIT MUST BE CONNECTED TO A G.F.C.I (GROUND FAULT CIRCUIT INTERRUPTER) PROTECTED RECEPTACLE.

## **WARNING**

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT USE THIS BLOWER WITH ANY SOLID-STATE SPEED CONTROL DEVICE. THE USE OF A 3-PRONG TO 2-PRONG ADAPTER IS PROHIBITED, ONLY USE A 2-PRONG TO 2-PRONG ADAPTER.**

**IF THE POWER SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.**

**ALL BLOWERS IN OPERATION MUST BE SUPERVISED AND ATTENDED AT ALL TIMES.**

## **WARRANTY**

### **1 YEAR:**

**B-AIR WILL COVER ALL PARTS (EXCEPT POWER CORD).**

**WHITHIN ONE YEAR OF PURCHASE B-AIR WILL PAY REPAIR COSTS AND ONE WAY UPS GROUND SERVICE SHIPPING TO YOUR LOCATION WHITHIN THE 48 CONTIGUOUS STATES. PROOF OF PURCHASE IS REQUIRED.**

**CUSTOMER IS RESPONSIBLE FOR SHIPMENT OF DAMAGED UNIT TO B-AIR WAREHOUSE FOR REPAIR.**

**CANADA AND NON-CONTIGUOUS STATES MUST PAY FREIGHT BOTH WAYS.**

### **5-YEAR:**

**B-AIR WILL COVER HOUSING FROM DATE OF ORIGINAL PURCHASE. PROOF OF PURCHASE IS REQUIRED.**

## **SERVICE**

IN ORDER TO RECEIVE SERVICE OR REPLACEMENT PARTS UNDER WARRANTY, YOU MUST:

- A) CALL FOR A RMA# (Return Merchandise Authorization Number)
- B) HAVE PROOF OF PURCHASE
- C) SHIP TO B-AIR BLOWER
  - IF IMMEDIATE SERVICE IS REQUIRED, B-AIR WILL SHIP A REFURBISHED BLOWER IMMEDIATELY TO REPLACE THE ONE REQUIRING SERVICE PROVIDED A VALID CREDIT CARD IS PROVIDED AND CHARGED. ONCE WE RECEIVE YOUR BLOWER, WE WILL CREDIT YOUR CREDIT CARD ACCOUNT.
  - WE WILL GLADLY REPAIR YOUR BLOWER AND SHIP WITHIN 24 HOURS.

UPON INSPECTION, WE WILL ADVISE YOU OF THE REPAIRS NEEDED AND THE COST (IF APPLICABLE).

B-AIR WILL ISSUE REPAIR OR REPLACEMENT PARTS DEPENDING ON WARRANTY.

## **CORDS**

- 1) USE 3 PRONG ADAPTORS THAT ARE UL AND CE APPROVED AND NOT LESS THAN 14-3 WITH GROUND FAULT CIRCUIT INTERRUPTER (GFCI).
- 2) DO NOT USE CORDS THAT SHOW ANY KIND OF WEAR OR DAMAGE.
- 3) CORDS ARE NOT COVERED BY WARRANTY.
- 4) MAKE SURE YOUR EXTENSION CORD IS IN GOOD CONDITION AND BE SURE TO USE ONE HEAVY ENOUGH TO CARRY THE CURRENT THE PRODUCT WILL DRAW. THE EXTENTION CORD SHOULD BE AT LEAST 14 GAUGE. AN UNDERSIZES EXTENSION CORD WILL CAUSE A DROP IN LINE VOLTAGE RESULTING IN LOSS OF POWER AND OVERHEATING. IF IN DOUBT, USE THE NEXT HEAVIER GAUGE. THE SMALLER THE GAUGE NUMBER, THE HEAVIER THE CORD.
- 5) TO REDUCE THE RISK OF ELECTRIC SHOCK, USE ONLY WITH AN EXTENSION CORD TYPE S, SO, ST, STO, SJ, SJT, SJO, OR SJTO.

## **GRIZZLY B-AIR LIMITED WARRANTY**

### **COVERS**

- 1) GRIZZLY B-AIR BLOWERS ARE COVERED AGAINST DEFECTS IN MATERIAL AND CRAFTSMANSHIP USED UNDER NORMAL INTENDED USE TO ORIGINAL PURCHASER FOR A TERM OF (1) ONE-YEAR FROM THE ORIGINAL DATE OF PURCHASE INCLUDING PARTS, LABOR AND SHIPPING.
- 2) GRIZZLY B-AIR BLOWER'S HOUSING IS COVERED FOR A TERM OF (5) FIVE FULL YEARS FROM THE DATE OF THE ORIGINAL PURCHASE.

### **DOES NOT COVER**

- 1) ANY SIGNS OF MISUSE INCLUDING, BUT NOT LIMITED TO ROUGH HANDLING, ABUSE, TAMPERING, IMPROPER VOLTAGE USE, AND UNAUTHORIZED MAINTENANCE AND REPAIRS.

## **CONTACT**

**INTERTEX, INC. / B-AIR BLOWERS**

**1851 TYBURN STREET**

**GLENDAL, CA 91204**

**1-877-800-2247 (BAIR)**

**FAX: (818) 242-2430**

**EMAIL: [info@b-air.com](mailto:info@b-air.com)**

**WEB SITE: [www.b-air.com](http://www.b-air.com)**

## **PECIFICATIONS**

### **MODEL# GP-1-UL**

VOLTS	115 V	230 V
CYCLE	60 Hz	50 Hz
MAX AIR VOLUME	3550 CFM	3180 CFM
AMPS	10.6 A	6.5 A
MAX STATIC PRESSURE	3.1 INCH	2.8 INCH
WEIGHT NET/SHIP	39/43 LBS	39/43 LBS
UNIT SIZE (L x W x H)	19"x 18"x 19.5"	19"x 18"x 19.5"
WHEEL SPEED (RPM)	L 1300 / M 1440 / H 1720	L 1070 / M 1190 / H 1400
MOTOR	1 HP	1 HP
ATTACHED CORD (14G)	25 FT	25 FT
SPEEDS	3	3
KICK STAND HEIGHT	4.5"	4.5"
TIMER OPTIONAL	8 Hours / 35 Min	8 Hours/35 Min

## **TROUBLESHOOTING**

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>	<u>SOLUTION</u>
Motor Not Running	a) Switch is OFF	a) Turn Switch ON
	b) Bad Outlet	b) Check Outlet/ Change to Another Outlet
	c) Faulty Switch/Cord	c) Call Factory for new Switch/Replace Cord
Scraping Noise From Blower	a) Wheel Out Of Line	a) Call Factory for Replacement Advise
Weak Air Flow	a) Obstructed Vents/Inlets	a) Clean Out Vents/Inlets