

NEED HELP?

DO NOT RETURN TO STORE. PLEASE VISIT US AT:
www.polygroupstore.com OR 1-877-527-0313

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:


- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c. This seasonal product is not intended for permanent installation or use.
- d. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
- l. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
- m. The lamps of this product are not replaceable. Do not attempt to change or modify the lamps.
- n. Read and follow all instructions that are on the product or provide with the product.

o. SAVE THESE INSTRUCTIONS

Assembly

Assembling the wreath

- Step 1.** Choose an appropriate location near a wall outlet.
- Step 2.** Each wreath section is numbered with a tag. Please identify all sections before assembling.

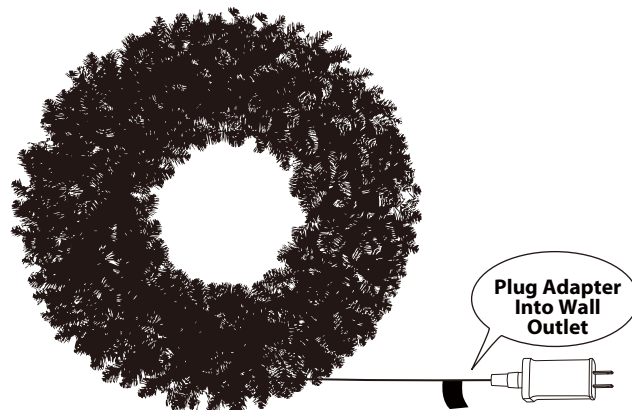

Step 3. Assemble the wreath.

Step 4. Plug the adapter into the wall outlet. Your entire wreath should now be lit.

Operation

Turning on the wreath

NOTE: If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs.

Step 1. Connect the light strings of the tree together and plug the adaptor into a wall outlet.

Step 2. If the tree comes with a foot pedal, step on the On/Off button.

Maintenance

If extra parts are needed, contact the Customer Service Team at 1-877-527-0313 between the hours of 8 am and 5 pm EST, Monday through Friday.

Use and Care Instructions

- 1. Remove all ornaments and decorations, and unplug from power.
- 2. Disconnect the extension cords and plugs.
- 3. Remove the wing bolts and disassemble the wreath sections.
- 4. Carefully place all parts into shipping box and tape it shut.
- 5. Store in a cool, dry place away from sunlight. Exposing your wreath to excessive heat or humidity may damage your wreath.

CAUTION: Use only power adaptor that was provided with this product. Using a different power adaptor will damage the lights and cause fire, electrical shock hazard.

Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.
	Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided