




USE AND CARE GUIDE

CEDAR ISLAND 50 IN. WOVEN DINING TABLE

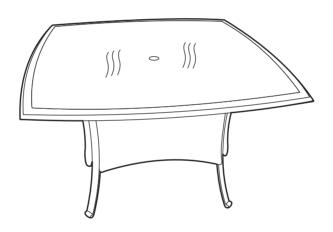

Questions, problems, missing parts? Before returning to the store, call Martha Stewart Living Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM/MARTHASTEWARTLIVING

THANK YOU

Table of Contents

Table of Contents	2
Safety Information	
Warranty	
What is Covered	
What is Not Covered	2
Pre-Assembly	3
Planning Assembly	
Hardware Included	3
Package Contents	4

Assembly5
Care and Cleaning6

Safety Information



WARNING: Do not sit or stand on the table top.



WARNING: Do not place extremely hot or cold items on the table top.



WARNING: Do not place heavy items on the table top.

Warranty

5 YEAR FRAME WARRANTY/1 YEAR WEAVE WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for five years and the weave for one year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing, and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise if the model in question is no longer in production.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com/MarthaStewartLiving.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.



NOTE: More than one person may be required to complete the assembly of this product.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.












3

Part	Description	Quantity
AA	M6*20 mm Hex bolt	8
ВВ	M6* 15 mm Hex bolt	16
CC	Washer	24
DD	M6 Hex bolt cap	24
EE	Hex wrench	2

Pre-Assembly (continued)

PACKAGE CONTENTS

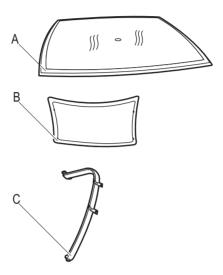


Part	Description	Quantity
Α	Table rim with glass	1
В	Side panel	4
С	Table leg	4

Assembly


1 Attaching the table legs

- □ Remove the plastic glass clamps from the table rim (A), remove the glass top from the table rim, and carefully place the glass top on a soft surface.
- Carefully place the table top (A) upside down on a soft, flat, non-abrasive surface.
- Attach the table legs (C) to the table rim (A) using hex bolts (AA) and washers (CC).

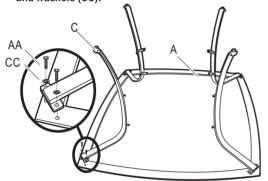


2 Attaching the side panels

- Attach the side panels (B) to the table legs (C) using hex bolts (BB) and washers (CC).
- Ensure all bolts are aligned and assembled correctly.
- □ Tighten all hex bolts (AA and BB) with the hex wrench (EE).
- Attach the hex bolt caps (DD).

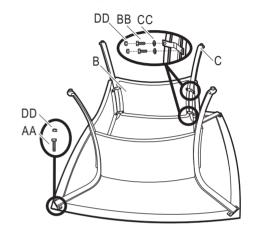

3 Replacing the glass top

- With the assistance of another person carefully turn the table over and set it down on its legs.
- ☐ Place the glass top onto the table rim (A).

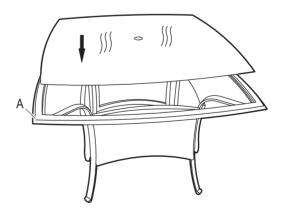

Care and Cleaning

	Do not allow water to build u	p in the frames.	This will cause cor	rosion and possible	e freezing dama	ige in cold climates.
--	-------------------------------	------------------	---------------------	---------------------	-----------------	-----------------------

- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol-based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- □ Rinse with clean water and dry with a soft, absorbent cloth towel.
- ☐ Treat frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.



Questions, problems, missing parts? Before returning to the store, call Martha Stewart Living Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM/MARTHASTEWARTLIVING


Retain this manual for future use.





USE AND CARE GUIDE

CEDAR ISLAND WOVEN DINING CHAIR

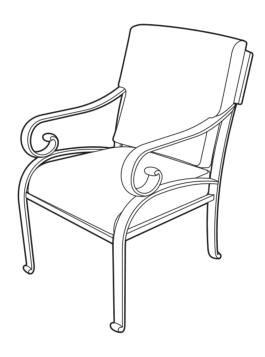

Questions, problems, missing parts? Before returning to the store, call Martha Stewart Living Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM/MARTHASTEWARTLIVING

THANK YOU

Table of Contents

Table of Contents	2
Safety Information	
Warranty	2
What is Covered	
What is Not Covered	
Pre-Assembly	
Planning Assembly	
Hardware Included	
Package Contents	4

Assembly	¹	5
	Cleaning	

Safety Information



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

Warranty

5 YEAR FRAME WARRANTY/1 YEAR FABRIC AND WEAVE WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for five years and the fabric and weave for one year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing, and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise if the model in question is no longer in production.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com/MarthaStewartLiving.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.



NOTE: More than one person may be required to complete the assembly of this product.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.












3

Part	Description	Quantity
AA	M6*20 mm Hex bolt	4
ВВ	M6*30 mm Hex bolt	4
CC	Washer	8
DD	M6 Hex bolt cap	8
EE	Hex wrench	1

Pre-Assembly (continued)

PACKAGE CONTENTS

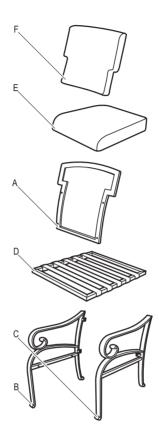


Part	Description	Quantity
Α	Back	1
В	Right arm	1
С	Left arm	1
D	Seat	1
E	Seat cushion	1
F	Back cushion	1

Assembly


1 Attaching the arms

- Attach the right arm (B) to the back (A) using hex bolts (AA) and washers (CC).
- Repeat these instructions to attach the left arm (C) to the back (A).
- □ Do not tighten the hex bolts (AA) until assembly is complete.

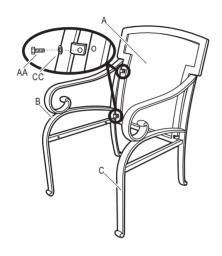


2 Attaching the seat

- Attach the seat (D) to the arms (B and C) using hex bolts (BB) and washers (CC).
- □ Ensure all hex bolts are aligned and assembled correctly.
- □ Tighten all hex bolts (AA and BB) with the hex wrench (EE).
- Attach the hex bolt caps (DD) to each of the bolts on the chairs.

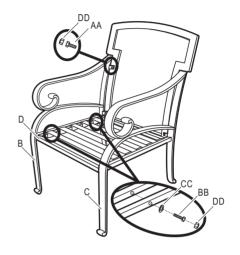

3 Adding the cushions

- Place the seat cushion (E) and the back cushion (F) onto the chair.
- □ The chair is now ready for use.

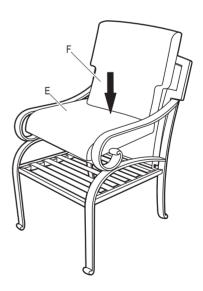

Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol-based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- □ Rinse with clean water and dry with a soft, absorbent cloth towel.
- ☐ Treat frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.



Questions, problems, missing parts? Before returning to the store, call Martha Stewart Living Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM/MARTHASTEWARTLIVING

Retain this manual for future use.