


USE AND CARE GUIDE

1 LIGHT PENDANT

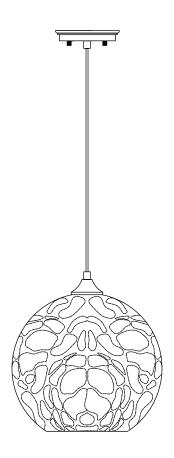

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

Table of Contents

Table of Contents2	Hardwa
Safety Information2	
Warranty2	
Pre-Installation3	
Planning Installation3	•
Tools Required. 3	

Hardware Included	3
Package Contents	4
Installation	5
Operation	7
Care and Cleaning	7
Troubleshooting	7

Safety Information

☐ Consult a qualified electrician if you have any electrical questions.



CAUTION: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation. Please call our Customer Service Team at 1-800-986-3460.



WARNING: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

Warranty

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of three (3) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

 
Contact the Customer Service Team at 1-800-986-3460 or visit www.homedepot.com/homedecorators.

Pre-Installation


PLANNING INSTALLATION

- ☐ Read all instructions before installation.
- ☐ To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard.
- \square Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED




HARDWARE INCLUDED

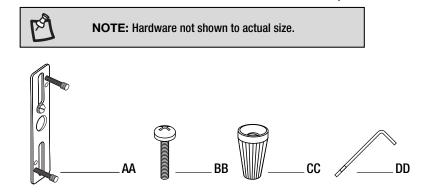

Part	Description	Quantity
AA	Mounting unit	1
BB	Mounting screw	2
CC	Wire nut	3
DD	L wrench	1

Pre-Installation (continued)

PACKAGE CONTENTS

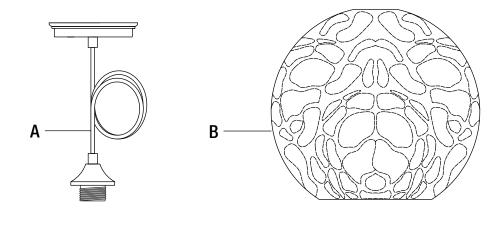




Part	Description	Quantity
Α	Light fixture	1
В	Glass shade	1
С	Socket ring cover	1

Installation


1 Assembling the light fixture

- ☐ Adjust the wire of the light fixture (A) to the desired length and secure it with the L wrench (DD).
- ☐ Remove the preinstalled socket ring cover (C) from the light fixture (A), place on the glass shade (B) over the socket and secure it with the previously removed socket ring cover (C).

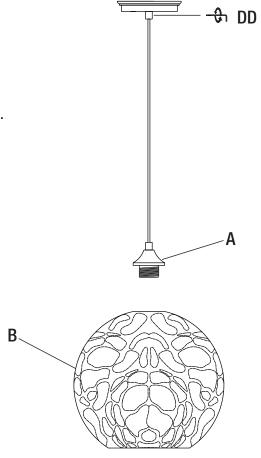

2 Attaching the mounting unit to the junction box

□ Remove the pre-installed cap nuts from the mounting unit (AA) and put them in a safe location. Attach the mounting unit (AA) to the junction box (not included) with the mounting screws (BB). Ensure the screws on the mounting unit (AA) protrude away from the junction box.

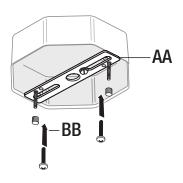


Installation (continued)


3 Making the electrical connections

- ☐ Connect the copper wire from the light fixture (A) to the mounting unit (AA) by securing it with the preinstalled ground screw.
- ☐ Connect the black to black (power), the white to white (neutral) and copper wire to ground wire with the wire nuts (CC) and secure with electrical tape (not included).



NOTE: If the wires from the fixture are the same color, attach the side with markings or letters to the black (positive) wire and the other to the white (neutral) wire.

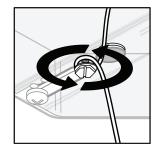


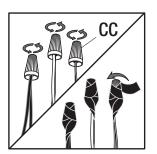

4

Securing the canopy to the junction box


□ Secure the canopy of the light fixture (A) to the junction box by placing the holes in the canopy over the support screws on the mounting unit (AA). Secure with the previously removed cap nuts as shown.

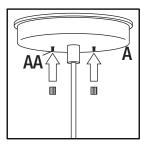

5

Installing the light bulb

☐ Install one medium base 60-watt bulb (not included).

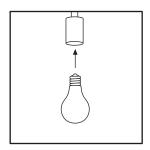

Operation

Turning the light on

 $\ \square$ Turn the light switch on to activate the fixture.

Care and Cleaning

- \Box Clean the lamp with a soft, dry cloth.
- $\ \square$ Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution	
The bulb will not light.	The bulb is burned out.	Replace the light bulb.	
	The power is off.	Ensure the power supply is On.	
	There is a faulty wire connection.	Check the wiring.	
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.	
The fuse blows or circuit breaker trips when the light is turned on.	There are crossed wires or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or call the Customer Service Team at 1-800-986-3460.	