


## Parts

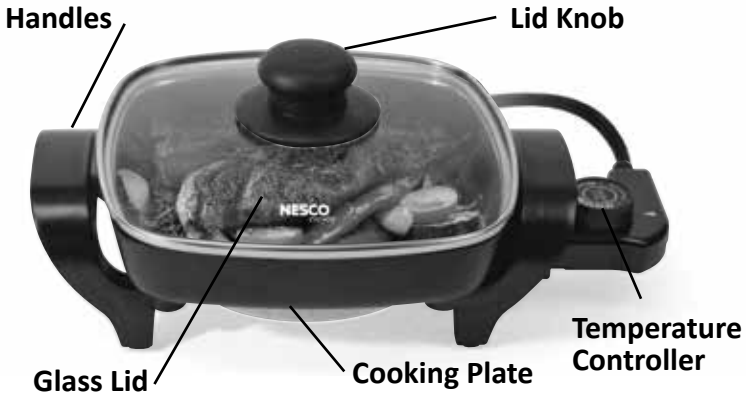

## How to assemble your electric skillet

Remove all parts from the packaging.

1. Locate and remove Lid Knob in packaging.
2. Place the screw through center hole of lid. The head of screw to inside of lid.
3. Place Protector Ring over screw threads on the outside of lid. Rough side of ring facing glass.
4. Turn Lid Knob onto screw thread while pressing on head of screw.
5. Tighten screw until snug. Do not overtighten. The Lid is now ready for use.

## Before first use

Before using the appliance, READ AND SAVE ALL INSTRUCTIONS. Wipe down the appliance with a soft damp cloth and make sure there is no metal or foreign objects on the temperature control. Wipe dry with soft cloth.

## Operation

1. Place appliance on a flat, heat resistant, stable surface in a well ventilated area.
2. Make sure the temperature controller is in OFF position. Insert control into inlet on the side of skillet. Then insert plug into electrical outlet.
3. Adjust controller to desired setting. NOTE: The signal light on controller indicates heat setting. When desired setting is reached, the light will turn off. It will continue to cycle on and off during use to indicate heat setting is being automatically maintained.
4. Preheat the skillet with the lid on for 10 minutes or until the indicator light goes out. NOTE: The cooking temperatures listed in this user manual are estimates. Adjust the cooking temperature slightly up or down to achieve the results you prefer.
5. A steam vent is located on the Glass Lid. The steam vent allows steam to escape while cooking with the lid in place. CAUTION: Escaping steam is hot! Be careful when removing or lifting lid. Oven mitts are recommended when removing cover from skillet base or when replacing it.