


PARTS AND FEATURES


PARTS AND FEATURES OF YOUR COOKTOP

Throughout this manual, features and appearance may vary from your model.

LCE3010SB Radiant Cooktop

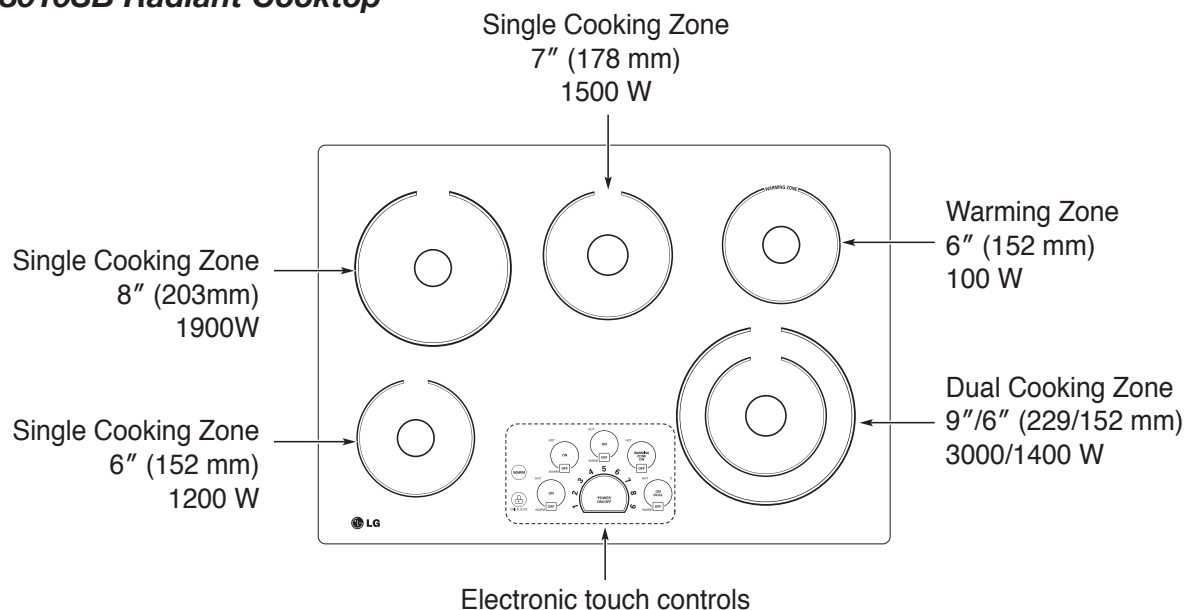

LCE3610SB Radiant Cooktop

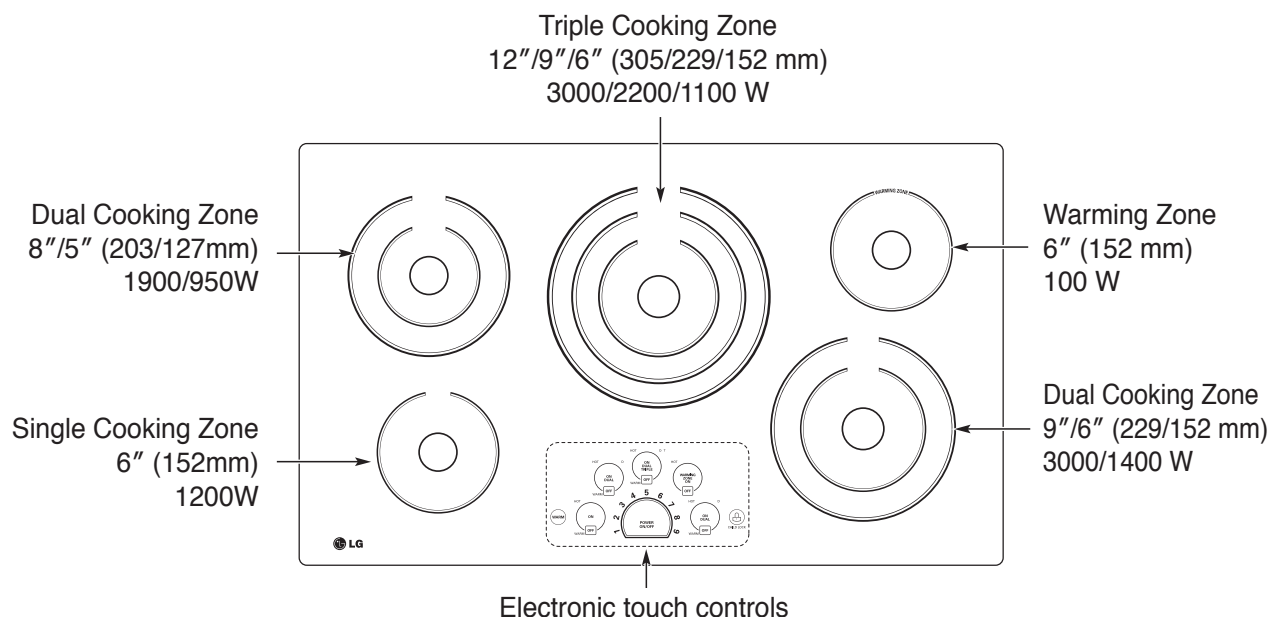


Accessories



Cooktop Cleaner
(1ea)



 Non-scratch scouring pad
(1ea)



Retainer brackets
(2ea)



Bolt
(2ea)



Bolt
(2ea)


PARTS AND FEATURES

TOUCH CONTROL FEATURES


LOCATIONS OF SURFACE ELEMENTS AND CONTROLS

The surface burner elements are positioned in the same locations on the cooktop and the control panel for ease of use.


LCE3010SB Radiant Cooktop

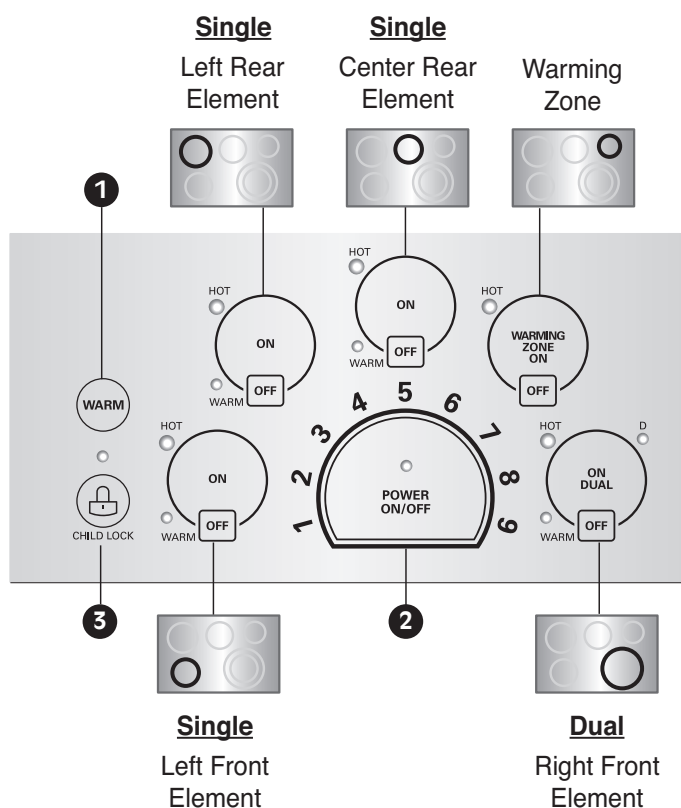

LCE3610SB Radiant Cooktop

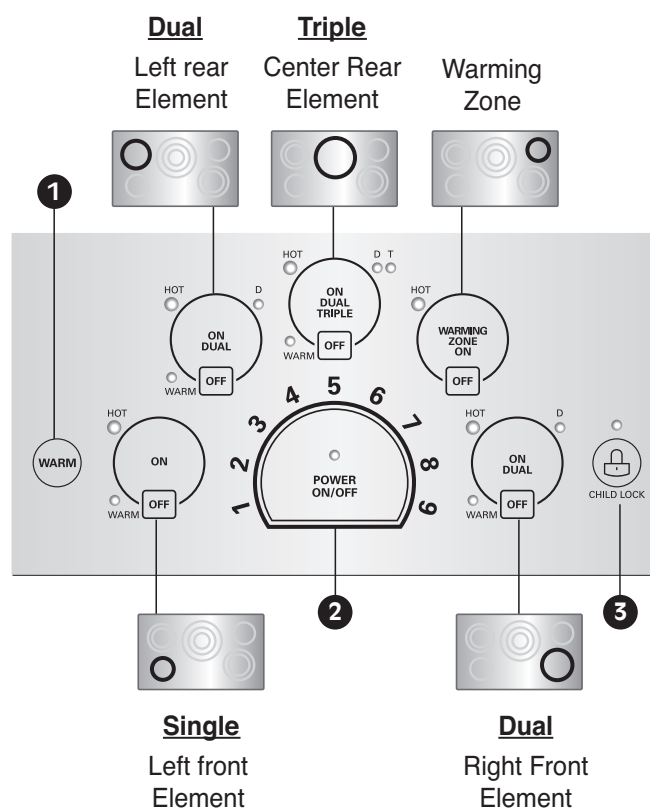

 - 1 WARM:** This pad lowers selected active element to the lowest setting.
- 2 POWER ON/OFF:** Touch the POWER ON/OFF pad to turn the entire cooktop ON and OFF. When it is ON, the cooktop is in standby mode until a Cooking Zone is activated.
- 3 CHILD LOCK:** Touch and hold for 3 seconds to activate and deactivate the child lockout function.



To set the element power level: Select the number on the element power settings for the active Cooking Zone to adjust the power level from 1 to 9.

Hot Surface Indicator: The indicator light below the HOT will illuminate when the cooking area is hot. It will remain on, even after the control is turned off, until the area has cooled.