

# WARRANTY

## USPA Personal Hygiene Appliance Limited Warranty

- We warrant our products to be free from manufacturing defects under normal use and service for a period of one (1) year from the date of your purchase.  
100% Coverage of all parts and labor for the entire product for the first year from original date of purchase.  
This warranty is only valid within the United States and Canada.
  - Our obligation to you under this warranty is limited to repair or replacement, at our option, of defective products or parts, provided that the products were properly installed and used in accordance with instructions. We reserve the right to make inspections in order to determine the cause of the defect. We will not charge for labor or parts in connection with warranty repairs or replacement. We are not responsible for the cost of removal, return and/or reinstallation of products.
  - This limited warranty does not apply to:
    - a) Damage or loss from a fire, earthquake, flood, storm, etc.
    - b) Damage or loss resulting from any unreasonable use, abuse, negligence, or improper maintenance.
    - c) Damage or loss from improper installation, removal, repair, or modification.
    - d) Damage or loss resulting from sediment or other matters contained in your water system.
  - This warranty gives you specific legal rights.
  - For warranty or service information, please contact your dealer where you bought this appliance or us.
  - Only the original purchaser may submit a claim under this limited warranty.
  - This limited warranty is our only warranty covering your product. Repair or replacement as provided under this warranty shall be the exclusive remedy available to you. We shall not be responsible for loss of the product or for other incidental, or consequential damage or expenses you may incur or for labor or other costs due to installation or removal, or cost of repairs by others, or for any other expense not specifically stated above. Except to the extent prohibited by applicable law, any implied warranties, including that of merchantability or fitness for use, are expressly limited to the duration of this warranty.
- ※ Warning! We are not responsible or liable for any failure of, or damage to, this plumbing product or product component caused by in-tank bowl cleaners containing chlorine(calcium hypochlorite).
- ※ Note : The use of high concentration of chlorine related products can seriously damage the fittings. This damage can cause leakage and serious property damage.
- For more information, please contact your dealer or us.

### **BBC INNOVATION**

7900 S RT 31 Crystal Lake IL 60014  
TEL:847-458-2334 FAX:847-854-1296  
E-mail : support@biobidet.com <http://www.biobidet.com>

*Great products for your healthy living !*

If you need any help,  
Please call us.

**CUSTOMER CENTER**  
**877-339-5214**

**BBC INNOVATION**  
7900 S RT 31 Crystal Lake IL 60014



# Operating Instruction Manual

**A7**

- *Thank you for purchasing this USPA bidet seat.*
- *You are kindly requested to carefully read this operation manual for proper use of this appliance.*
- *Please save this manual and place it in an easily accessible location.*

## READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION.

### Notes

1. *This product should be installed according to this manual.*
2. *Read this manual carefully and install properly.*
3. *Keep this instruction manual in an easily accessible place.*
4. *Do not attempt to service this appliance yourself. Doing so will void the warranty.*

## Table of Contents

### PREPARATION

1. IMPORTANT SAFEGUARDS	1
2. CAUTIONS BEFORE INSTALLATION	2
3. IDENTIFICATION	3
4. SAFETY INFORMATION (DANGER)	4
5. SAFETY INFORMATION (WARNING)	5

### INSTALLATION

6. HOW TO INSTALL	6
-------------------	---

### HOW TO USE

7. HOW TO USE	8
8. HOW TO CLEAN	11
9. MAINTENANCE	12

### ETC

10. BEFORE CALLING FOR SERVICE	13
11. SPECIFICATIONS	13
12. WARRANTY	14

# 1. Important Safeguards

## 1. READ ALL INSTRUCTIONS BEFORE USING

### **DANGER - To reduce the risk of electric shock:**

1. Do not place or store this appliance in a location where it can fall or be pulled into a tub or sink.
2. Do not place in, or drop into water or other liquids.
3. Do not touch a product that has fallen into water. Unplug immediately.

### **WARNING - To reduce the risk of burns, electric shock, fire or injury.**

1. Close supervision is necessary when this appliance is used by or is near infants, elders, or with disability persons. Children should not be permitted to use or touch this appliance without adult supervision.  
Be sure to adjust the toilet seat's temperature for elders, with disability persons, or people with sensitive skin.
2. Use this appliance only for its intended purpose as described in this manual.  
Only use attachments recommended by the manufacturer.
3. Do not operate this appliance if the cord is damaged or if the product is dropped into water.
4. Install the unit properly by following the installation procedure.
5. Only authorized persons can install or repair the unit. Do not attempt to service this appliance by yourself.  
Doing so could void the warranty.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any objects into any opening or hose.
8. Do not use outdoors. Do not use aerosol or oxygen spray products on the unit.
9. Always follow the grounding instructions in this manual before plugging in the unit.

## **SAVE THESE INSTRUCTIONS**

# 2. Cautions before installation

## 1. NOTE THE FOLLOWING IMPORTANT POINTS

1. Do not install in a location where water might be splashed on this appliance or in a location exposed to excessive moisture where condensation might form on the product's surface.
2. To avoid damage to electronic components due to high levels of humidity, provide adequate ventilation by opening a window and/or door when bathing.
3. Water supply should have a water pressure of 0.07 MPa to 0.74 MPa.
4. Connect the product to a pipe carrying potable water. Do not connect to an industrial water line or other water supplies that are not potable.
5. Bring the unit to room temperature.
6. The thermal protector in the water tank may malfunction when transporting or storing warm water.
7. The rated power voltage in AC 120V, 60Hz
8. Do not plug the unit in, until installation is complete. It may result in malfunction.

## 2. Cautions before installation

### 2. WIRING REQUIREMENTS

1. After installation all other servicing should be performed by authorized service representatives.

#### 2. GROUNDING INSTRUCTIONS


This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire and grounding plug. They must be plugged into an outlet that is properly installed and grounded.

**DANGER-Improper use of the grounding plug can result in a risk of electric shock.**

If it is necessary to repair or replace the cord or plug, do not connect the grounding wire to a flat blade terminal. The grounding wire can be identified by its insulated outer surface. It will either be colored green or will not contain yellow stripes.

Check with a qualified electrician or serviceman if you do not understand grounding instructions or if you do not know whether the product is properly grounded.


3. This product is for use on a nominal 120V circuit. it has a grounding plug that similar to the plug illustrated in sketch A. A temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until the properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored rigid ear, lug and the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

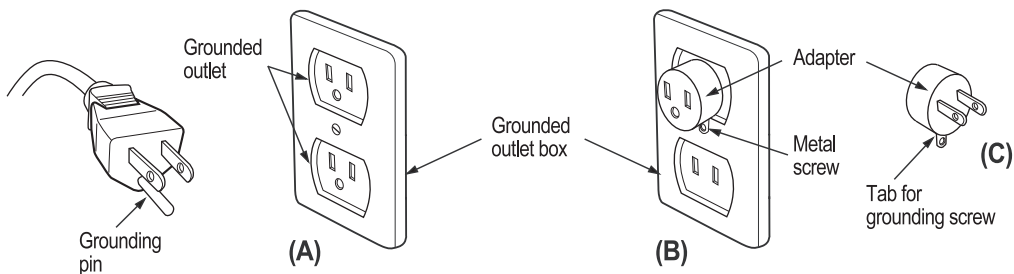


4. If it is necessary to use an extension cord, use only a three wire extension cord that has a three-blade grounding plug, and a three-slot receptacle that will accept the plug on the product. Do not use a damaged extension cord.

# 3. Identification

## Main unit

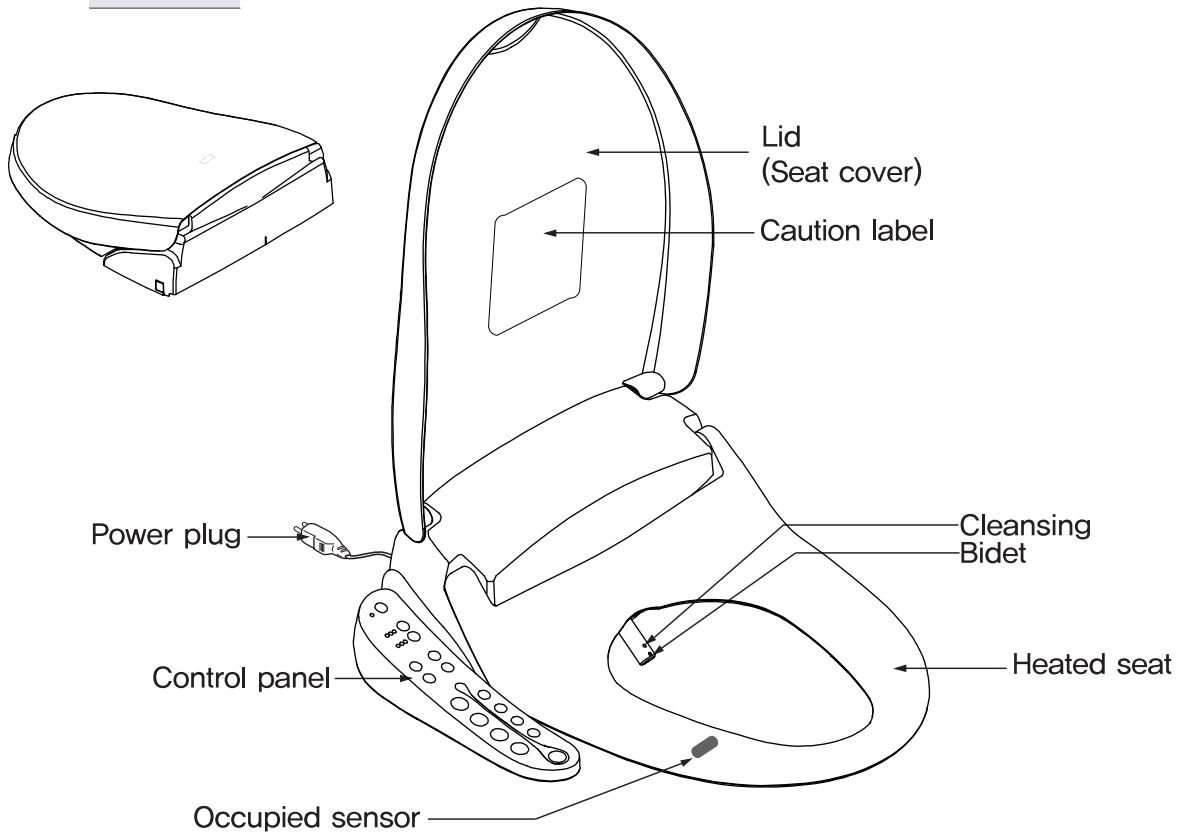

## Accessories

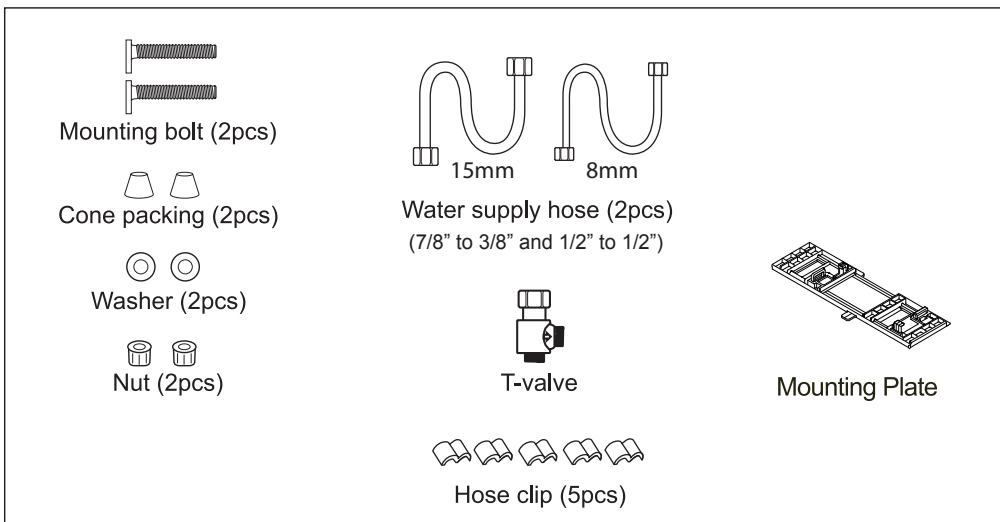

※ In the interest of continued product improvement, specifications may change without notice.











## 4. Safety Information (Danger)

Follow these basic instructions to ensure the safe use of your appliance.

### **DANGER**

Failure to follow may cause severe injury or death. Follow the instructions.

 Indicates a [prohibited] use of the appliance.	 Prohibited  Do not disassemble  Use of fire prohibited  Do not handle with wet hands
 Indicates a [required] step in use of this appliance.	 Required step  Ground Connection

-  Do not splash water or cleansers on the product's plug. Doing so may result in fire or electric shock.
-  Do not plug or unplug with wet hands.  
-It may result in injury or electric shock.  
-Regularly wipe off the plug and electric outlet with a dry, soft cloth to prevent electric shock or fire.
-  Do not use a faulty or loose electric outlet or cord.  
-Doing so may result in short circuit, electric shock or fire.
-  Do not throw anything flammable into the toilet.  
-Doing so may result in fire, discoloration or malfunction.
-  Grounded wire or outlet must be installed.  
-Not doing so may result in malfunction or electric shock.  
-If no grounded plug is used, make sure to install grounded wire.
-  Do not use many appliances in one power strip.  
-Doing so may result in fire or damage.  
-Be sure to use a dry and clean outlet.  
-Do not use a faulty or loose outlet.
-  Use potable water only. (ground water)  
-Not doing so may cause irritation or injury to your skin.  
-It may clog the pipe due to contaminants.
-  Do not disassemble the seat.  
-Doing so may result in electric shock.
-  Do not disassemble, repair or modify this appliance.  
-Doing so may result in electric shock, injury or malfunction.
-  Unplug when you hear beeping or smell strange odor.  
-Unplug right away and contact your dealer from whom you bought this appliance.













## 5. Safety Information (Warning)

Follow these basic instructions to ensure the safe use of your appliance.

### **WARNING**

Might cause slight injury or damage. Be aware.

 Indicates a [prohibited] use of the appliance.	 Prohibited  Do not disassemble  Use of fire prohibited  Do not handle with wet hands
 Indicates a [required] step in use of this appliance.	 Required step  Ground Connection

-  Be aware of a low-grade burn.
  - It may result in a low-grade burn if sitting on the heated seat for a long time.
  - Be aware if being used by the following: children, senior citizens, patients, people who cannot control the temperature, people who are not sober, or people who are tired.
  - If injured in a low-grade burn, see a doctor immediately.
-  Do not step on or place heavy objects on this appliance.
  - Doing so may damage the unit.
  - Do not step on a lid, seat, or control panel to avoid injury or product damage.
-  Unplug while not using over extended period of time.
-  Unplug when there is thunder or lightening.
-  Use this appliance on a toilet only.
  - Not doing so may result in fire, injury or electric shock.
-  Do not use force to pull out the water hose.
  - Doing so may cause water leakage.
-  Be aware of urine splash on a nozzle.
  - Not doing so may result in malodor or failure.
-  Do not use force to close the lid.
  - Doing so may cause malfunction.
  - Be aware not to put fingers between the lid and seat when you close the toilet. It may cause injury.
-  Unplug when cleaning.
  - Not doing so may result in fire or electric shock.
-  Use low temperature for children and handicapped.
  - If the temperature is too high, it may result in burn if they fail to recognize the temperature.
-  Do not sit or lean against the lid or the control panel.
  - Doing so may cause malfunction or breakage.
  - Applying excessive force may damage the lid or components that may lead to injury.
-  Do not put a vase cup or small materials on this appliance.
  - Doing so may result in fire or electric shock.



## 6. How to install

※ **If electric work is needed, please contact a qualified electrician or serviceman only.**

### Remove the existing toilet lid and seat


1. Remove the nuts, washers, and cone packings from the toilet seat and mounting bolts in the back of the toilet.
2. Remove the toilet seat, lid and mounting bolts.
3. Keep them in case you need them.

## Install the appliance

### Installation

#### How to mount the plate


- 1 Place the mounting plate over each mounting hole. Insert the mounting bolts through the plate and mounting holes. Slide cone packings and washers onto the bolts and fasten tightly with nuts.

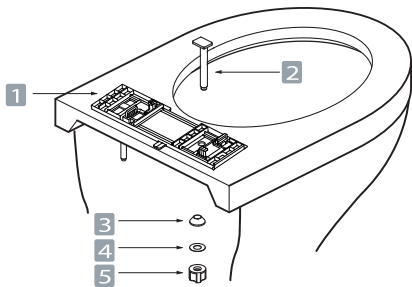

- 1 Mounting plate    2 Mounting bolt    3 Cone packing  
4 Washer    5 Nut


### Toilet size (Elongated)

- 1 The toilet dimensions must be within those shown below. Do not install this appliance on a toilet that does not meet these dimensional requirements.

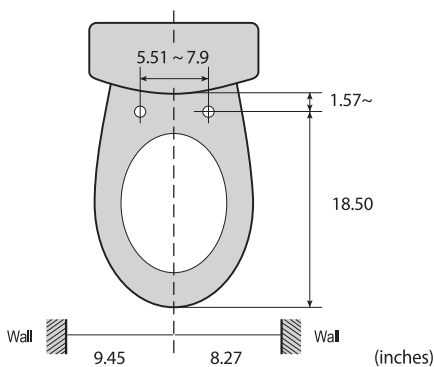

#### How to attach the unit

- 1 Use the tab on the mounting plate and align it with the track on the seat, for proper fit.

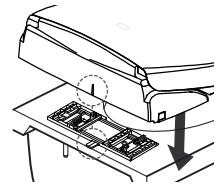


- 2 While pressing the side button, lower the seat onto the mounting plate.




#### How to detach the unit

- 1 While pressing the side button, pull the seat up and separate it from the toilet bowl.

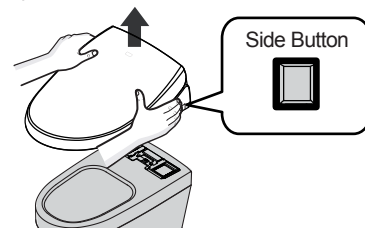


### Occupied sensor

- 1 This appliance is equipped with an occupied sensor.
- 2 The unit will not work unless the seat is occupied.

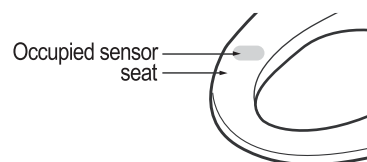

## Connecting the water hose

Connect the other end of the flexible hose from the T-valve to the main appliance.

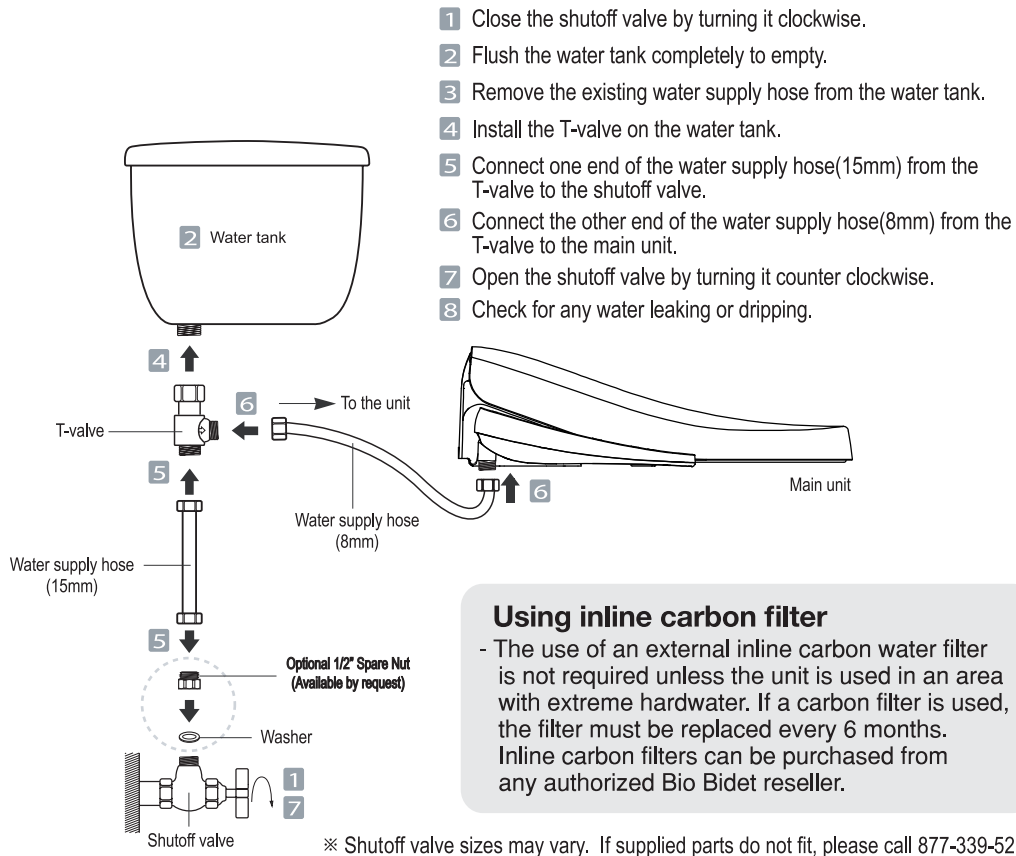

## Trial operation

### 1. Preparation

Plug the power cord into the outlet, and then the water tank will be filled with water in 2 minutes.

### 2. Checking all functions

Cover the toilet bowl using the sheet of plastic wrap on the unit to prevent the washing water from being sprayed out of the toilet.

Then check for all function described in this manual.

### 3. There are possibilities of water coming out that remains in the unit while heating.

## 7. How to use

### ※ Caution

- All functions will be operational when the seat is occupied except Nozzle Cleaning.
- Before operating, ensure that water tank is filled up completely.

### **Stop**

- Press "Stop" to stop current operation.
- When a user stands up, all operations will stop automatically.
- Press "Stop" for 3 seconds to turn the main unit off.

### **Cleansing**

- Press "Cleansing" to clean your posterior. The function will stop in 1 minute automatically.
- Press this button again to activate oscillation. The nozzle moves back and forth automatically to widen cleansing area.
- Oscillation wash stops if this button is pressed again.

### **Bidet**

- Press "Bidet" for feminine wash. The function will stop in 1 minute automatically.
- Press this button again to activate oscillation. The nozzle moves back and forth automatically to widen cleansing area.
- Oscillation wash stops if this button is pressed again.

### **Auto**


- Press "Auto" during the operation of "Cleansing" or "Bidet".
- Cleansing wash, oscillating wash and oscillating with massage will operate for each 20 seconds consecutively.
- If Bidet Auto wanted, press "Bidet" and "Auto" consecutively.

### **Massage**

- Press "Massage" to activate rhythmical wash for massage effect when you are using "Cleansing" or "Bidet".
- Press the button again to release this function.

### **User setting**

- ※ see page 10.

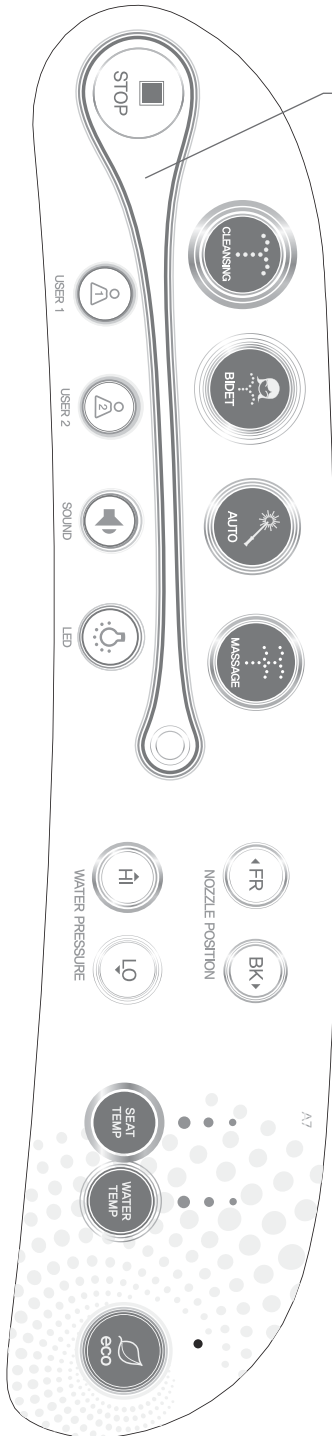

### **LED bar**

- All functions will show its duration or setting on LED bar.

### **Sound**

- Press "Sound" to enable the beeping sound.
- To disable, press the button again.

### **LED**

- Press the button to activate LED light.
- Delicate light will help user to use toilet without turning the light on during night time.

### **Nozzle position** ◀FR / BK▶

- Nozzle position can be adjusted by pressing FR or BK buttons to 5 levels.
- Nozzle position will remain.

### **Water pressure** HI / LO

- Water spray pressure can be adjusted by pressing HI or LO buttons to 5 levels.
- Water pressure level will remain.

### **Temperature adjustment** (seat / water)


- Temperature of seat and water can be adjusted.
- There are four levels, Room temp-Low-Medium-High.

### **Eco**

- Press "ECO" to activate the power saving mode. Seat and water temperature will be set to low.
- Press "ECO" again to release the function.

## USER SETTING

- Each button can save 2 settings. (Cleansing, Bidet)
- Press User 1 button with seat sensor <ON>, and Cleansing or Bidet consecutively. Then choose nozzle position and water pressure level by pressing (FR)/(BK), (HI)/(LO) buttons. Press User 1 again will save the setting with beep. (※ The same applies to saving User 2 setting.)

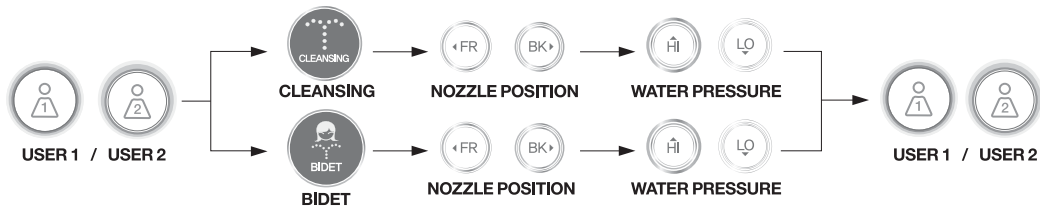

- Press User 1 or User 2 While using Cleansing or Bidet will operate saved settings.

## 8. How to clean

### Nozzle cleaning



Do not forcefully push or pull the nozzles, or bend them. It may result in failure.  
Make sure to use "Stop" button on the side control panel.

#### MANUAL CLEANING

- 1 Make sure the occupied sensor is not activated.  
(Do not sit on the seat or place hands on the seat sensor)
- 2 Press "Front" (FR) button for 3 seconds to extract the nozzle.
- 3 Use a toothbrush or soft cloth to clean the nozzle.
- 4 Press "Stop" button to retract the nozzle.




#### AUTO CLEANING

- 1 Press "Back" (BK) button for 3 seconds to start auto cleaning.  
The nozzle will be cleaned for 30 seconds and returned automatically.
- 2 Press "Stop" button while cleaning will retract the nozzle.

※ Do not use force to push or pull the nozzles while cleaning.

### Strainer maintenance

This appliance will not operate properly if the strainer is clogged.  
Be sure to clean the strainer regularly.

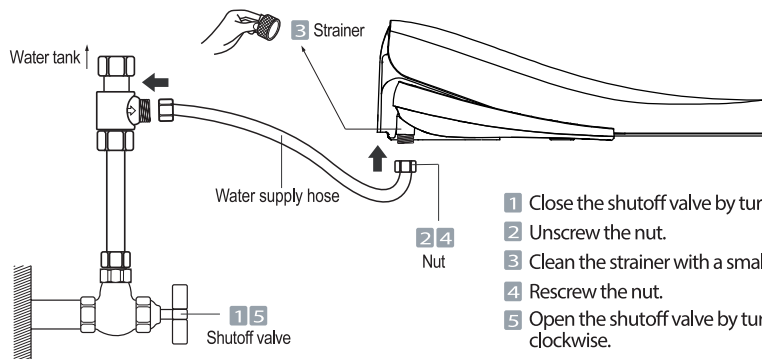

- 1 Close the shutoff valve by turning it clockwise.
- 2 Unscrew the nut.
- 3 Clean the strainer with a small brush.
- 4 Rescrew the nut.
- 5 Open the shutoff valve by turning it counter clockwise.

### Cleaning the body

- 1 Regularly wipe off the body with a dry soft cloth or sponge, or wash with a damp cloth and mild detergent.
- 2 For care of plastic body, do not use any cleansers such as :  
toilet cleanser, home cleanser, bleach, benzene, paint thinner, cresol etc



Toilet cleanser



Thinner  
Benzene



Bugs killer




Sand paper


## 9. Maintenance

### Draining water - while not using over extended period of time.

- 1 Unplug the power supply cord.**  
■ Not doing so may cause fire.

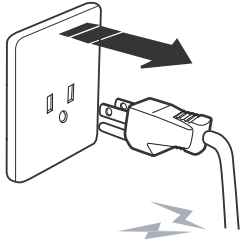

- 2 Close the shutoff valve.**

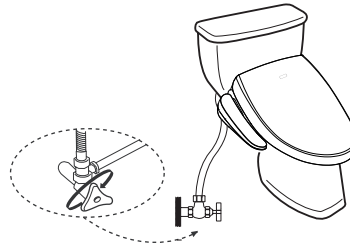


- 3 Unscrew the mounting bolts.**  
■ Refer to the installation method.



- 4 Uphold the appliance and thoroughly drain the water by unscrewing the drain bolt. (beware of losing the drain bolt)**


※ The following figure is only to check the location of 'Drain Bolt'. To prevent malfunction, do not place the vertical position or tilt the product.

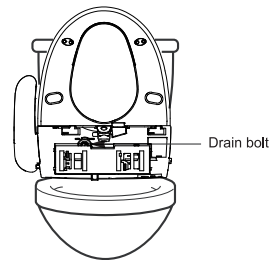

- 5 Screw the drain bolt and install the appliance.**  
■ Refer to the trial operation method in order to use this appliance again.

### Preventing freezing

- 1 Make sure the power cord is plugged in properly.**

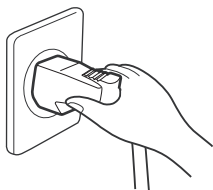

- 2 Set the temperature of water to low or middle. (Freezing can be prevented by thermal efficiency of water tank.)**

■ If there is no heating system in the toilet, wrap pipes with cloth or other materials.

- 3 Not using the unit for a long time in winter unplug and drain the water from the water tank and pipes thoroughly.**

■ Refer to the water drain method.

## 10. Before calling for service

Problem	Possible cause	Solution
Completely fails to work	Is there a power cord outage? Is the power cord unplugged? Are you sitting on the seat correctly?	- Check for power cord failure or a tripped breaker - Plug the power cord in properly - Sit on the seat completely
Water does not spray	Is the water shutoff valve closed? Is the strainer clogged? Are the nozzles clogged? Is the water purifying filter clogged?	- Check for any water leaking or dripping - Clean the strainer - Clean the nozzles - Change the water purifying filter
Water is leaking or dripping	Are all hoses tightened up properly?	- If water is still leaking or dripping, contact to your dealer
Seat or water is not warm enough	Is the temperature set to OFF? Is appliance used in eco mode during cold weather?	- Reset the temperature - Press "eco" again to release the function

## 11. Specifications

Item	A7	
Standard power supply	AC 120V 60Hz 1248W	
Water supply	Way of connection	Direct connection to tap water
	Water pressure	0.07MPa ~ 0.74MPa
Clean-sing	Spray for cleansing	700 (±150)mℓ/min
	Spray for bidet	700 (±150)mℓ/min
	Water capacity	740mℓ
	Spray temperature	Room temp ~ 39°C(102.2°F)
	Heater capacity	1200W
Safety feature	Thermal switch, Temperature fuse, Floating switch	
Heated seat	Seat temperature	Room temp ~ 39°C(102.2°F)
	Heater capacity	48W
	Safety feature	Temperature fuse
Deodorization method	-	
Circuit breaker	Within 15mA 0.03 second	
Length of power cord	1.2m	
Dimensions	(W)481 mm(18.94 inches) X (L)528 mm(20.79 inches) X (H)160 mm(6.30 inches)	
Weight	4.6Kg(10.14lbs)	

※ Recommended water supply pressure are 0.1 ~ 0.69MPa.

※ The minimum available water supply pressure is 0.07MPa, however 0.1MPa pressure, water spray pressure might not be adequate.