




Item #1002 089 232
Model #59118

USE AND CARE GUIDE

3-LIGHT LED TRACK BAR

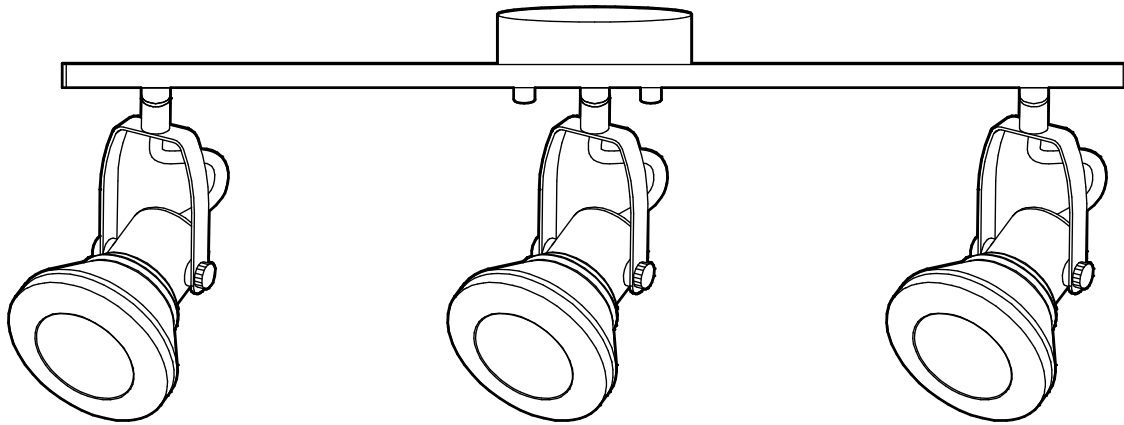

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this LED light fixture. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....2
Safety Information.....2
Warranty2
Pre-installation3


Installation.....5
Care and Cleaning.....7
Troubleshooting.....7


Safety Information


IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

Most electrical accidents are caused by carelessness or ignorance. Review these basic electrical guidelines before you begin this installation.

- Use tools with insulated handles and ladders made of wood or fiberglass.
- Keep dry-chemical fire extinguishers in the kitchen, basement, and workshop.
- Never disable grounding devices. Ensure all appliances that require grounding are properly grounded, and that the electrical system itself is properly grounded.
- Meet or exceed all electrical code requirements that cover the work you are doing.
- Always work with enough light to see what you are doing. It is easy to make a mistake when you work in dim light.
- When in doubt about the safety of any electrical repair or test, call in a professional.


 **WARNING:** When replacing fuses, turn off the main power first. Make sure your hands and feet are dry, and place one hand behind your back to prevent electricity from making a complete circuit through your chest. Touch a plug fuse only by its insulated rim. Remove cartridge fuses with a fuse impeller.


 **WARNING: CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.**

 **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 **WARNING:** Before touching any wire, use a voltage tester to ensure it is not live.

 **WARNING:** When you check for voltage in a receptacle, check both outlets as each may be controlled by a separate wiring circuit.

 **WARNING:** Before working on a circuit, go to the main service panel and remove the fuse or trip the breaker that controls that circuit. Tape a sign to the panel warning others to leave the circuit alone while you work.

Warranty

5-YEAR LIMITED WARRANTY

The manufacturer warrants this lighting fixture against defects in materials and workmanship for a period of three years from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the bill of sale as proof of purchase, to the original place of purchase. The manufacturer will, at its option, repair, replace, or refund the purchase price to the original purchaser or consumer. This warranty does not cover light bulbs or the fixture becoming damaged due to misuse, accidental damage, improper handling and/or installation, and specially excludes liability for direct, incidental, or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, so the above exclusions and limitations may not apply. This warranty gives you specific rights and you may also have other rights that vary from state to state.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HamptonBay.com.

Pre-installation

PLANNING INSTALLATION

Compare all parts with the Hardware Included and Package Contents sections. If any part appears missing or damaged, do not install this product and contact the Customer Service Team at 1-855-HD-HAMPTON.

TOOLS REQUIRED




Ladder



Safety goggles




Phillips screwdriver

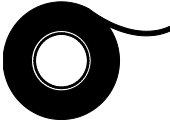

Electrical tape



 
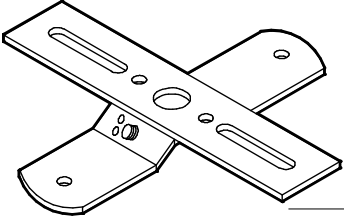
Gloves




Wire strippers

HARDWARE INCLUDED


 **NOTE:** Hardware not shown to actual size.



 AA



BB

 

CC




DD

Part	Description	Quantity
AA	Mounting crossbar	1
BB	Mounting screw	2
CC	Wire connector	3
DD	Outlet box screw	2

Pre-installation (continued)

PACKAGE CONTENTS

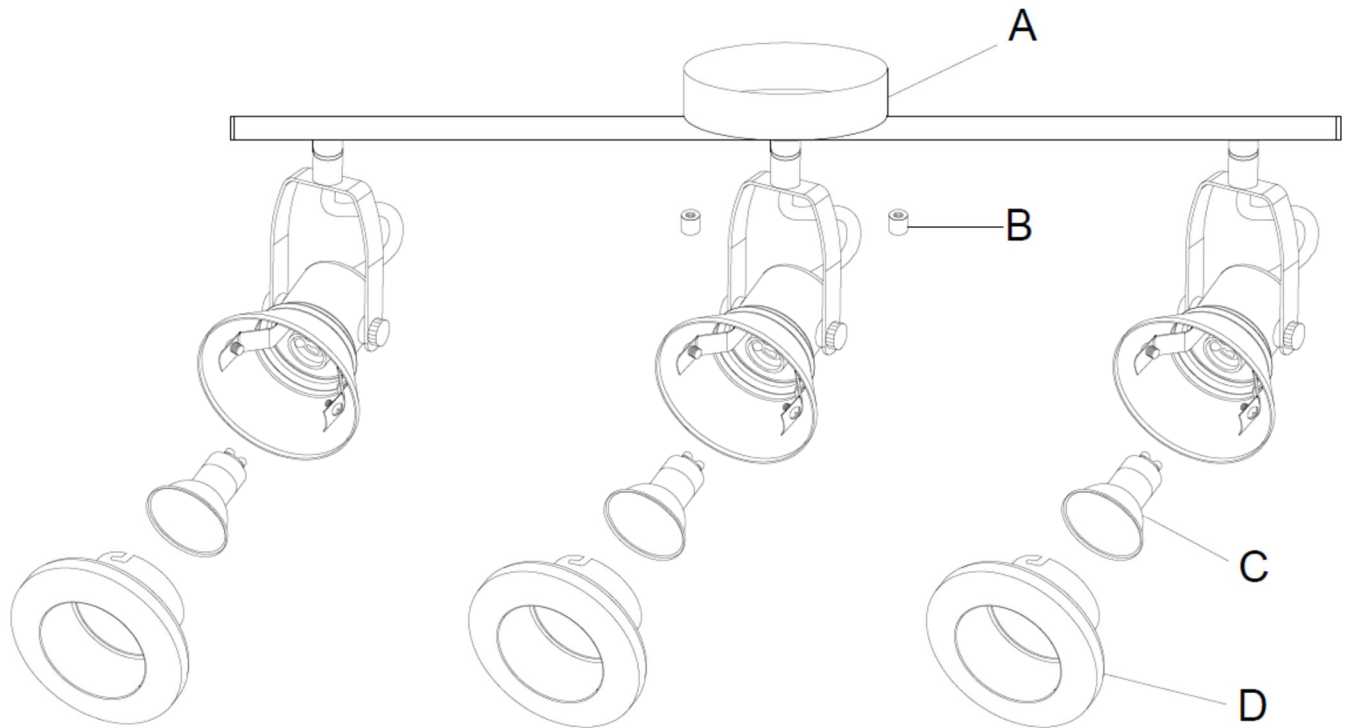


Part	Description	Quantity
A	Fixture body	1
B	Decorative nuts	2
C	LED GU10 bulb, 50W equivalent	3
D	Shade Cover	3

Installation


1 Preparing the mounting crossbar

- Screw the mounting screws (BB) into the mounting crossbar (AA), as shown.

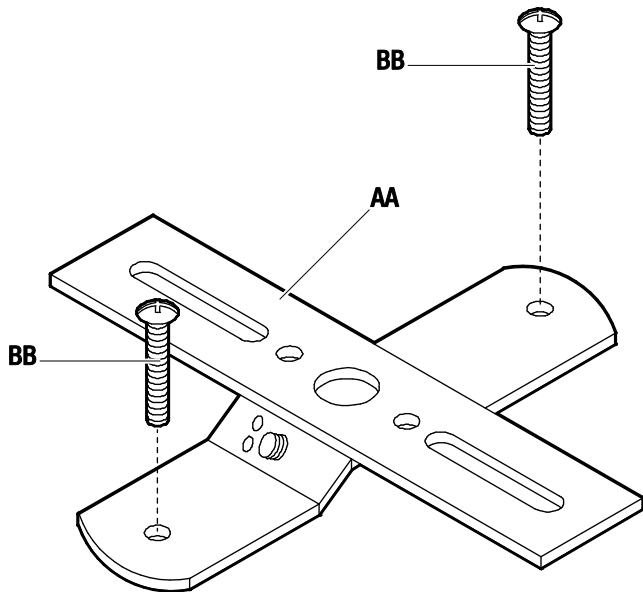

2 Installing the mounting crossbar assembly


- Make sure the power is off.
- Pull the supply wires down out of the outlet box.
- Fasten the mounting crossbar assembly (AA) to the outlet box with the outlet box screws (DD). Ensure the mounting screws (BB) point away from the outlet box as shown.

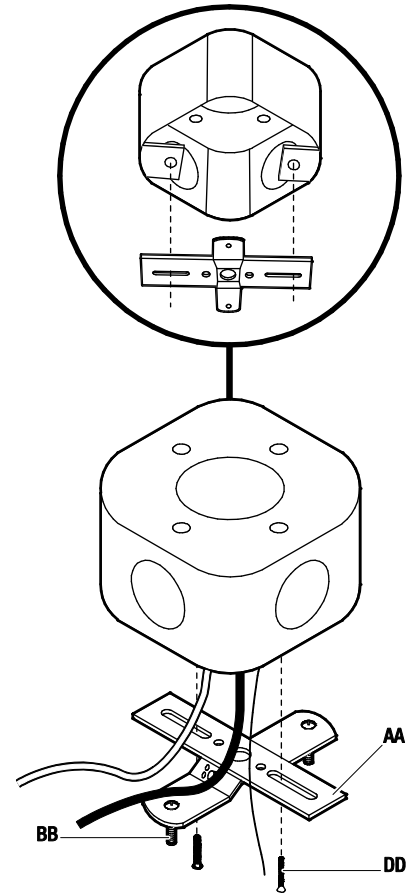

Installation (continued)


3 Making the electrical connections

- Attach the ground wire from the outlet box to the ground screw on the mounting crossbar (AA), which is green and marked "GND".
- Connect the negative wires (white) from the fixture to the negative wires from the supply circuit, the positive wires (black) from the fixture to the positive wires from the supply circuit, and the ground wire (bare) from the fixture to the ground wire from the supply circuit.
- Secure all connections together with the wire connectors (CC) and wrap electrical tape (not included) around the wire connectors (CC).
- Push all excess wire and wire connections back into the outlet box.

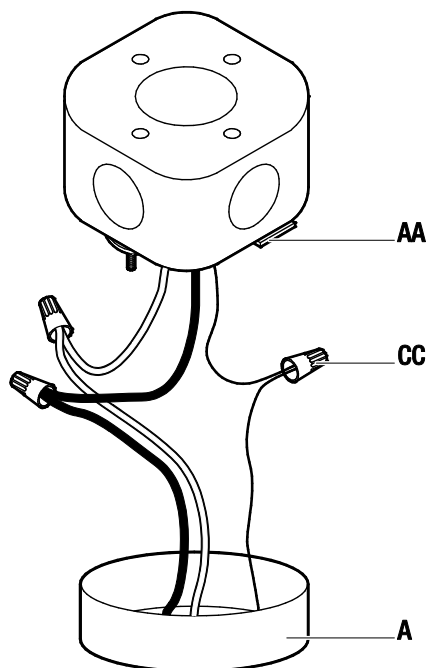

4 Attaching the fixture to the ceiling


- Raise the fixture (A) to the outlet box and align the mounting screws (BB) with the holes in the canopy of the fixture body (A) so that the screws (BB) protrude through the fixture body (A).
- Secure the fixture body (A) to the ceiling using the decorative nuts (B).

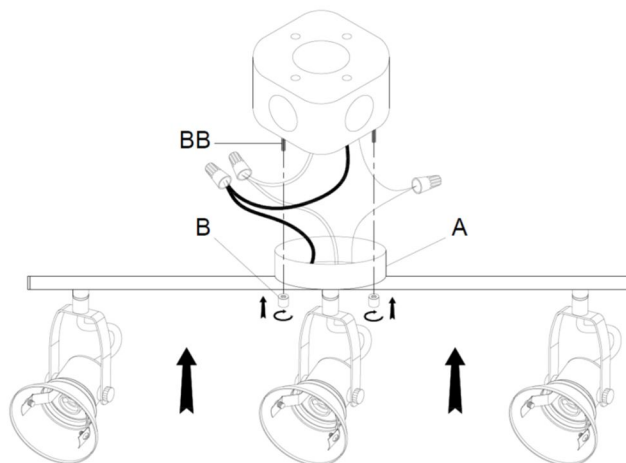

Installation (continued)

5 Installing the bulbs

- Screw the bulbs (C) into the lamp socket of the fixture (A)
 - Attach shade cover (D) to the track head, align with the fastening screw to secure the shade cover to the track head.
- This fixture uses LED GU10, 50W equivalent bulbs

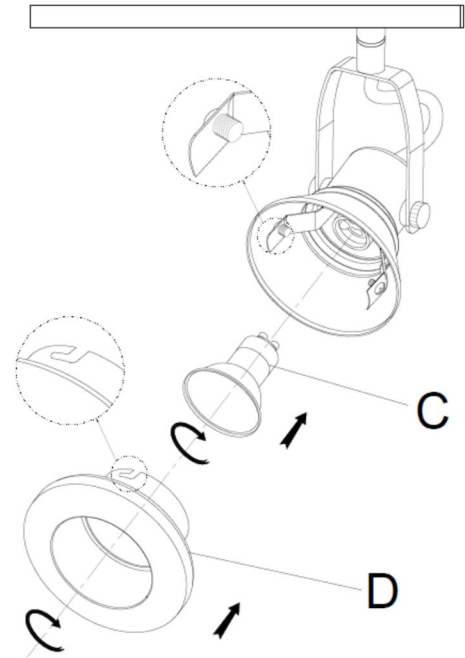

Care and Cleaning

- To clean the fixture, first disconnect the power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box.
- Use a dry or slightly dampened, clean cloth (use clean water, never use a solvent) to wipe the interior and exterior surfaces of the fixture.
- Allow the fixture to dry completely before power is restored.

Troubleshooting

Problem	Probable Cause	Solution
The bulb will not illuminate.	The bulb is burned out.	Replace the bulb.
	The power is off.	Ensure the power supply is on.
	There is a faulty wire connection.	Check the wiring. Contact a qualified and licensed electrician if you are not comfortable troubleshooting wiring issues.
	There is a faulty switch.	Test or replace the switch.
The fuse blows or the circuit breaker trips when the light bulb is illuminated.	There are crossed wires, or the power wire is not properly grounded.	Check the wire connections.



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.