

# 4-DRAWER CHEST

**Model Number:**

DA1011-6

**UPC Code:**

0-65857-17180-8

**Color:**

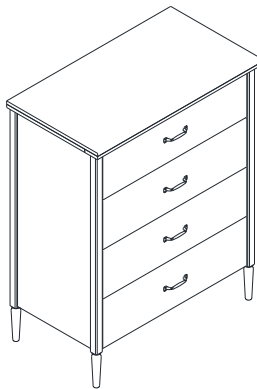 
Walnut

Congratulations on your latest furniture purchase! **Dorel Living** furniture has been developed with quality, convenience and style in mind. We trust it will provide you with many years of exceptional comfort and service.

Before beginning assembly, we encourage you to familiarize yourself with your new furniture piece by taking a few minutes to go through this booklet. It contains important information on our warranty and care tips to keep your furniture looking as good as new.

Customer satisfaction is important to us at Dorel Asia. Our agents are available Monday to Friday 8am to 5pm (EST) to answer any question you may have. For faster service, always have the model number ready when calling our toll free number **1-800-295-1980** or emailing us at **das@dorel.com** .

For more great furniture ideas, check out our website at [www.dorelliving.com](http://www.dorelliving.com)  
You can also keep up to date on all the latest trends by liking our [Facebook page](#).



Date of Purchase: \_\_\_\_ / \_\_\_\_ / \_\_\_\_

Lot Number: \_\_\_\_\_

(taken from carton)

**DO NOT RETURN PRODUCT TO THE STORE.** If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.

NOTE: THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

## CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!

 **CALL 1-800-295-1980**

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413  
12345 Albert-Hudon Boulevard, Suite 100  
Montreal, Quebec  
Canada H1G 3L1**

**E-MAIL: [das@dorel.com](mailto:das@dorel.com)**

## NOTES

- \* Ensure all parts and components are present before beginning assembly.
- \* Assemble on a soft, smooth surface to prevent damage to the product finish.
- \* Use the wall safety strap provided to secure the unit to the wall.
- \* A Phillips head screw driver is not included.
- \* DO NOT use power tools.
- \* CAUTION: Adult assembly required.
- \* Assembly will require two people.
- \* To avoid unnecessary damage, when levelers have been extended, DO NOT drag across surface when moving. Be sure to lift and carry the item to its location.
- \* Estimated assembly time: 60 minutes.

## WARNING

**Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tipover:**

- \* Install tipover restraint provided.
- \* Place heaviest items in the lower drawers.
- \* Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- \* Never allow children to climb or hang on drawers, doors or shelves.
- \* Never open more than one drawer at a time.
- \* Do not defeat or remove the drawer interlock system.
- \* Use of tipover restraints may only reduce, but not eliminate, the risk of tipover.

## CARE AND CLEANING

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

## MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

## LIMITED WARRANTY




 




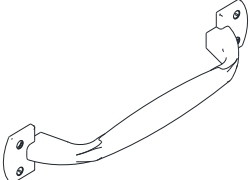 

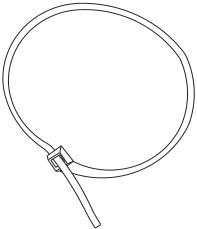 

Dorel warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

 **WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.**

# 4-DRAWER CHEST

## DA1011-6

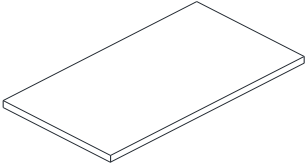 
 
 
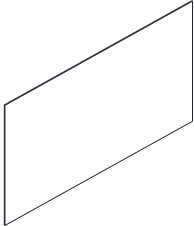 
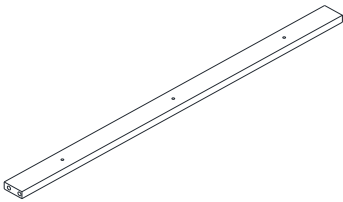 
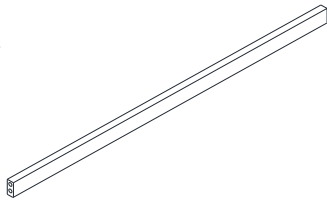 
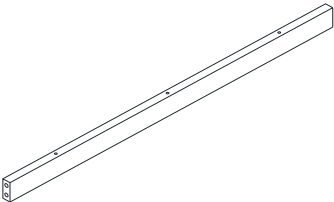 
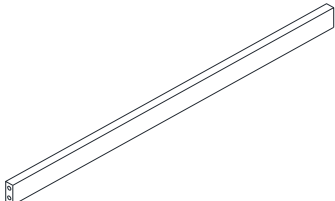 

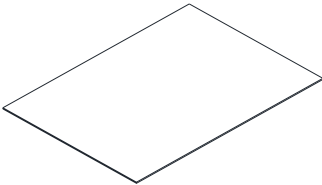 
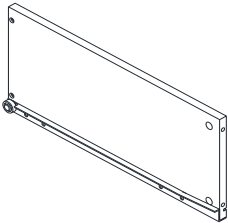 
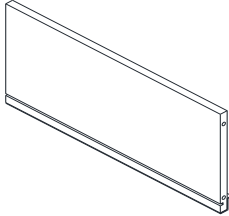 
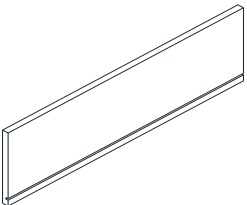 
 
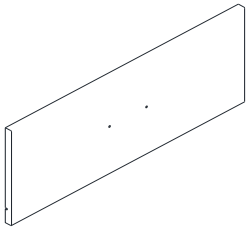 
### HARDWARE LIST

|  |  |   |
|--|--|---|
| <p>1</p>  <p>Ø6 * 37 mm</p>       | <p>2</p>  <p>Ø8 * 32 mm</p>   | <p>3</p>  <p>Ø13 * 10 mm</p>   |
| <p>LARGE CAM BOLT<br/>20 PCS</p>   | <p>WOOD DOWEL<br/>20 PCS</p>   | <p>SMALL CAM LOCK<br/>16 PCS</p>  |
| <p>4</p>  <p>Ø15 * 12 mm</p>      | <p>5</p>  <p>Ø6 * 36 mm</p>   | <p>6</p>  <p>Ø4 * 30 mm</p>    |
| <p>LARGE CAM LOCK<br/>20 PCS</p>   | <p>SMALL CAM BOLT<br/>16 PCS</p>   | <p>SCREW<br/>6 PCS</p>  |
| <p>7</p>  <p>Ø3.5 * 15 mm</p>   | <p>8</p>  <p>Ø4 * 25 mm</p> | <p>9</p>                     |
| <p>SCREW<br/>36 PCS</p>  | <p>SCREW<br/>24 PCS</p>  | <p>HANDLE<br/>4 PCS</p>   |
| <p>10</p>  <p>Ø5/32" * 7/8"</p> | <p>11</p>                   | <p>12</p>  <p>Ø6 * 25 mm</p> |
| <p>BOLT<br/>8 PCS</p>  | <p>SAFETY STRAP<br/>2 KITS</p>   | <p>WOOD DOWEL<br/>32 PCS</p>  |

# 4-DRAWER CHEST

## DA1011-6

### PARTS LIST

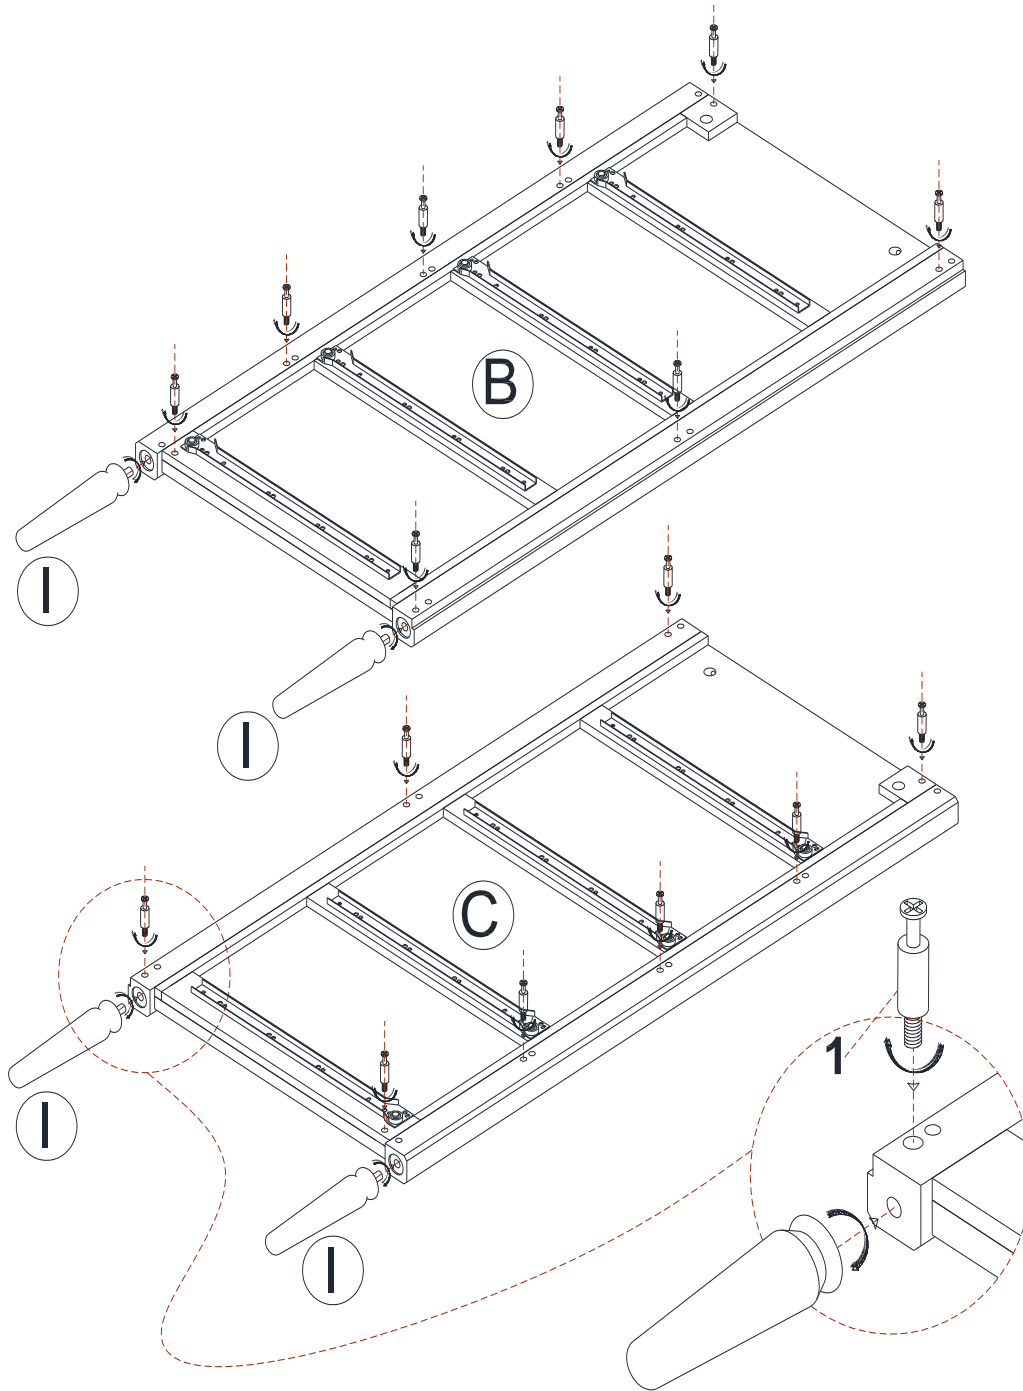 
|   |   |   |
|---|---|---|
| <p><b>A</b></p>    | <p><b>B</b></p>    | <p><b>C</b></p>    |
| <p>TOP PANEL<br/>1 PC</p>   | <p>LEFT SIDE PANEL<br/>1 PC</p>   | <p>RIGHT SIDE PANEL<br/>1 PC</p>  |
| <p><b>D</b></p>    | <p><b>E</b></p>    | <p><b>F</b></p>    |
| <p>BACK PANEL<br/>2 PCS</p>   | <p>FRONT TOP RAIL<br/>1 PC</p>  | <p>FRONT SUPPORT RAIL<br/>4 PCS</p>   |
| <p><b>G</b></p>  | <p><b>H</b></p>  | <p><b>I</b></p>  |
| <p>BACK TOP RAIL<br/>1 PC</p>   | <p>BACK SUPPORT RAIL<br/>2 PCS</p>  | <p>LEG<br/>4 PCS</p>  |
| <p><b>J</b></p>  | <p><b>K</b></p>  | <p><b>L</b></p>  |
| <p>DRAWER BOTTOM<br/>4 PCS</p>  | <p>LEFT DRAWER SIDE<br/>4 PCS</p>   | <p>RIGHT DRAWER SIDE<br/>4 PCS</p>  |
| <p><b>M</b></p>  | <p><b>N</b></p>  | <p><b>O</b></p>  |
| <p>DRAWER BACK<br/>4 PCS</p>  | <p>DRAWER SUPPORT RAIL<br/>4 PCS</p>  | <p>DRAWER FRONT<br/>4 PCS</p>   |

# 4-DRAWER CHEST

## DA1011-6

### STEP 1

Insert large cam bolts (1) into the left side panel (B) and right side panel (C) as shown. Attach legs (I) to the side panels (B & C) by rotating the legs clockwise.



|   |  |        |
|---|--|--------|
| 1 |  | 16 PCS |
|---|--|--------|

# 4-DRAWER CHEST

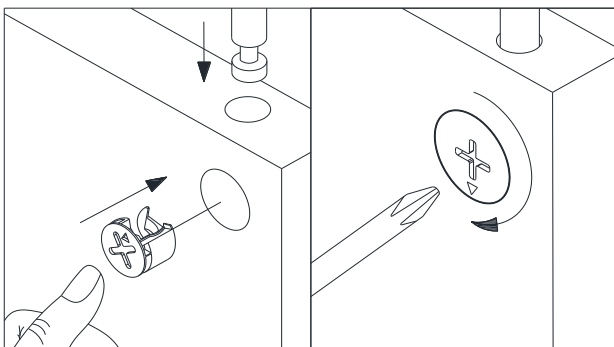 
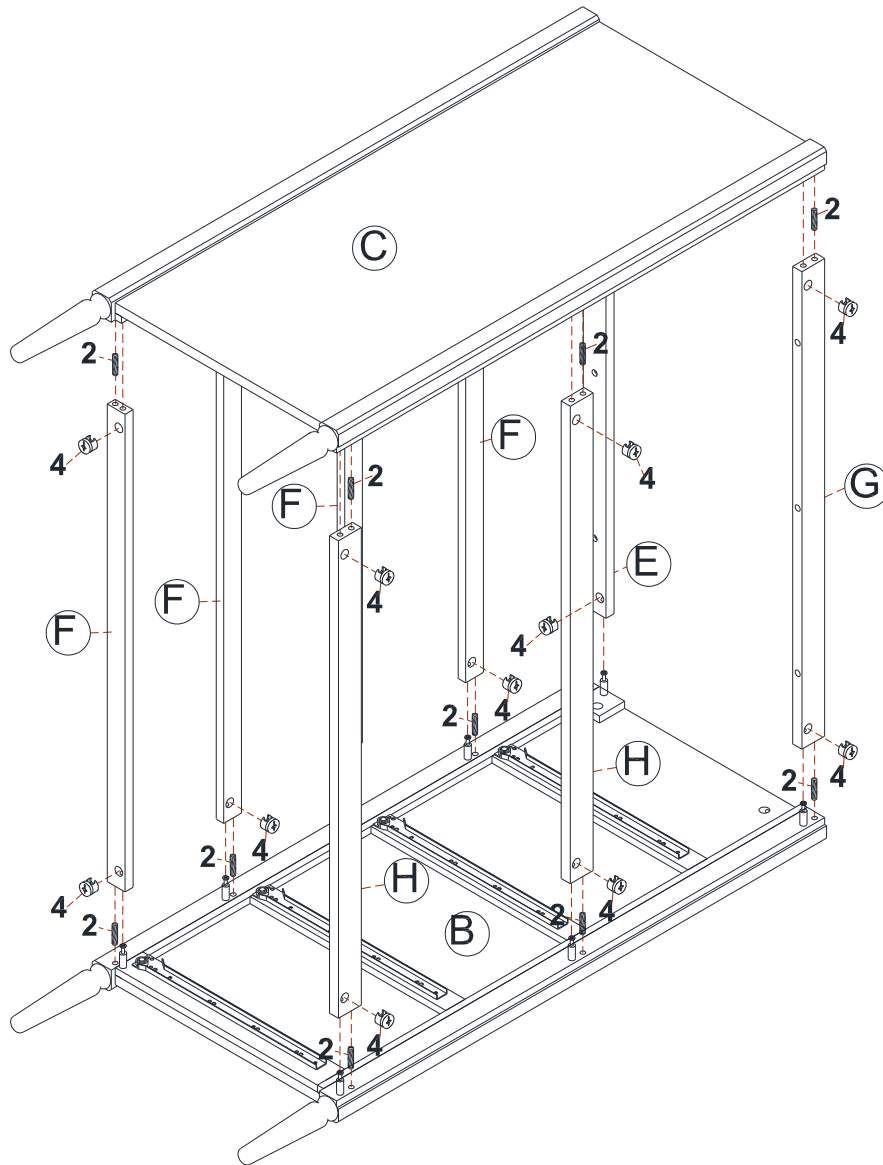 
## DA1011-6

 

### STEP 2

Insert large cam locks (4) into the rails (E, F, G & H).

Insert wood dowels (2) into the left side panel (B) and right side panel (C).

Secure rails (E, F, G & H) to the left side panel (B) and right side panel (C) by rotating the large cam locks (4) 1/2 turn clockwise using a Phillips head screwdriver (not included).

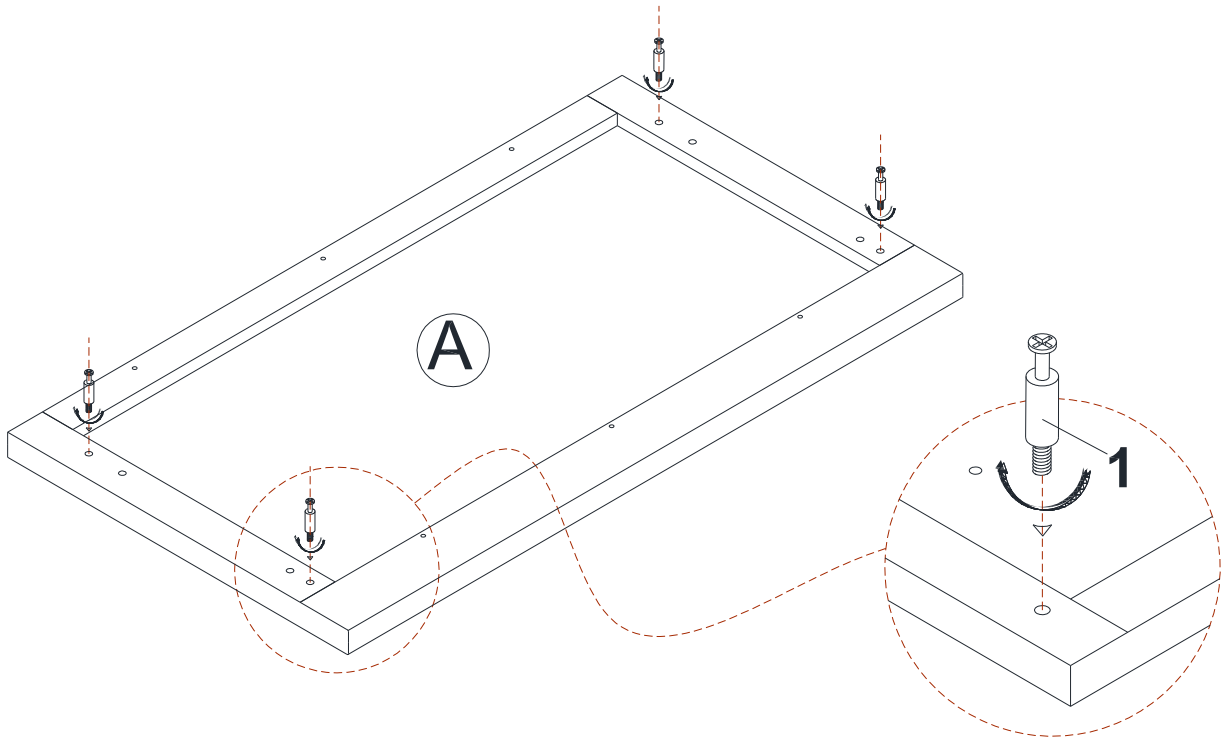 



|   |   |        |
|---|---|--------|
| 2 |  | 16 PCS |
| 4 |  | 16 PCS |

# 4-DRAWER CHEST DA1011-6

## STEP 3

Insert large cam bolts (1) into the top panel (A).



|   |   |       |
|---|---|-------|
| 1 |  | 4 PCS |
|---|---|-------|

# 4-DRAWER CHEST

## DA1011-6

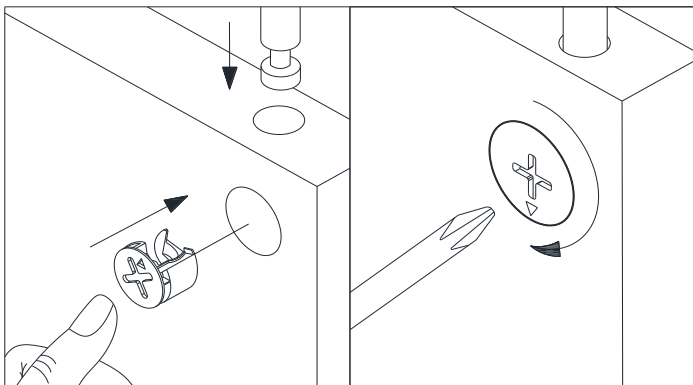 
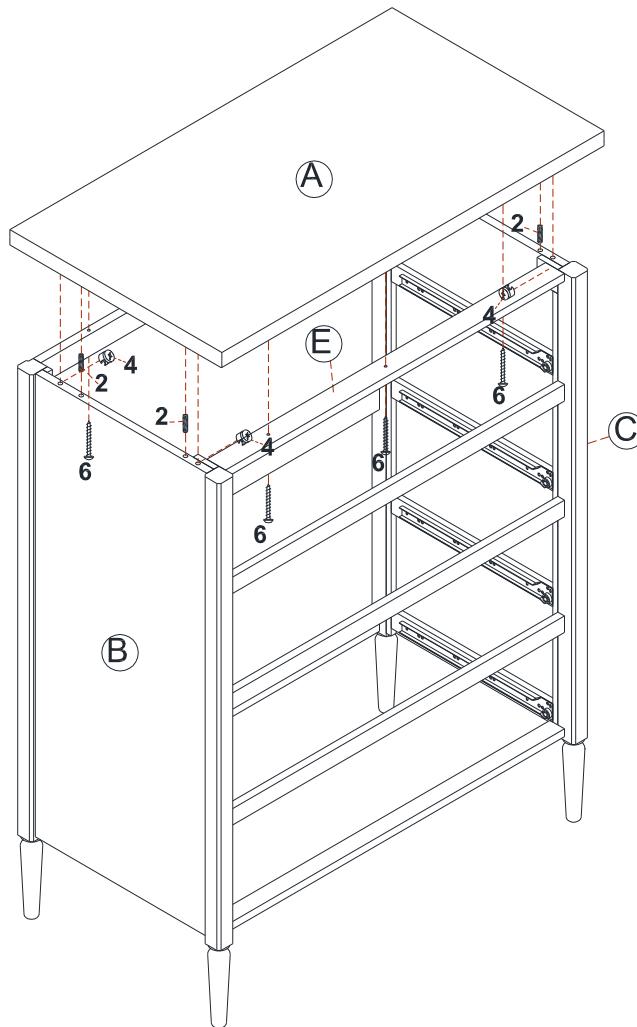 
### STEP 4


 

Insert wood dowels (2) and large cam locks (4) into the left side panel (B) and right side panel (C).

Place the top panel (A) on the assembled unit.

Rotate large cam locks (4) on the side panels (B & C) 1/2-turn clockwise to secure the top panel (A).

Further secure top panel (A) with screws (6) through the rails (E & G). Use a Phillips head screwdriver (not included) to tighten the screws.



|   |   |       |
|---|---|-------|
| 2 |  | 4 PCS |
| 4 |  | 4 PCS |
| 6 |  | 6 PCS |

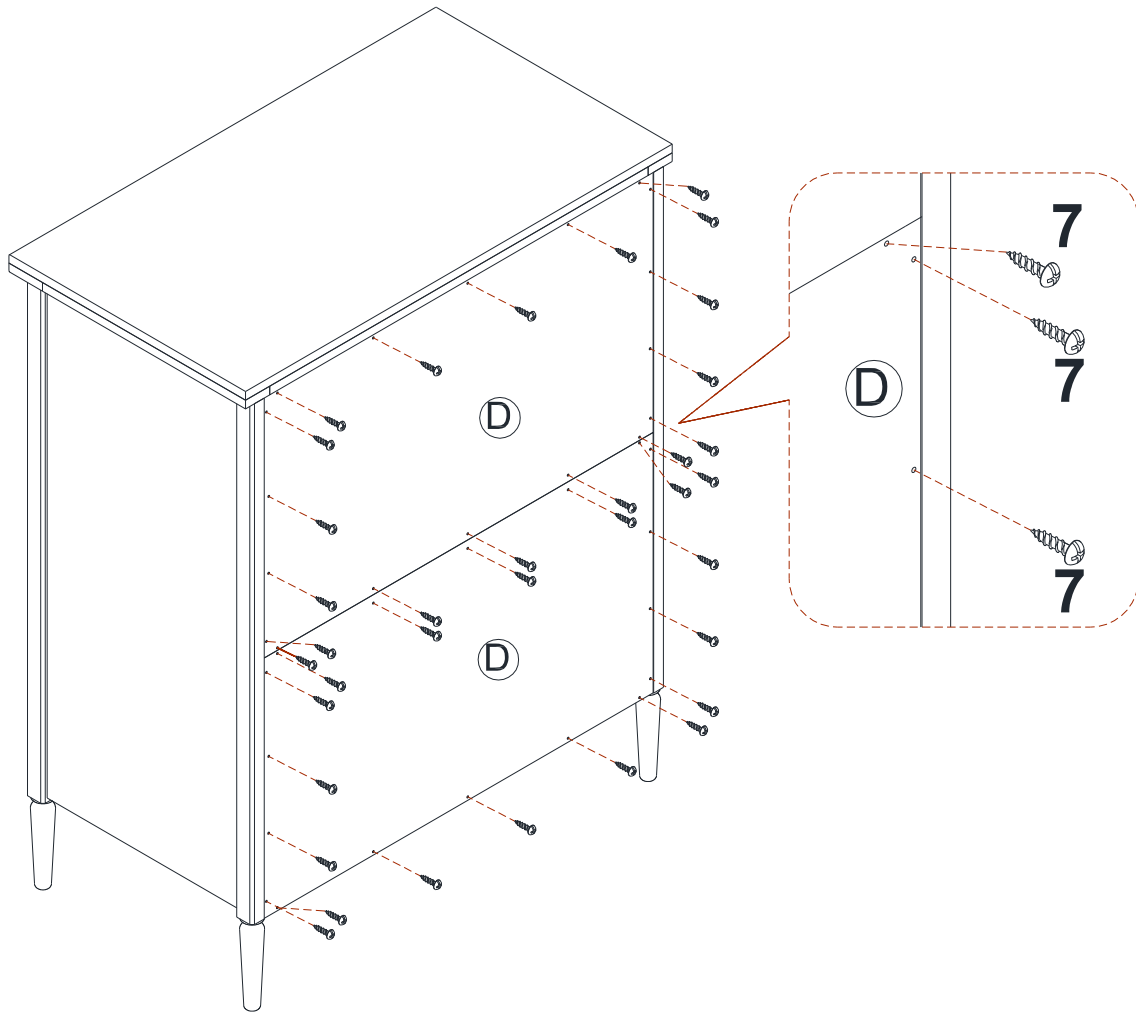 



# 4-DRAWER CHEST

## DA1011-6

### STEP 5

Attach back panels (D) to the assembled unit with screws (7).  
Use a Phillips head screwdriver (not included) to tighten the screws.



|   |   |        |
|---|---|--------|
| 7 |  | 36 PCS |
|---|---|--------|

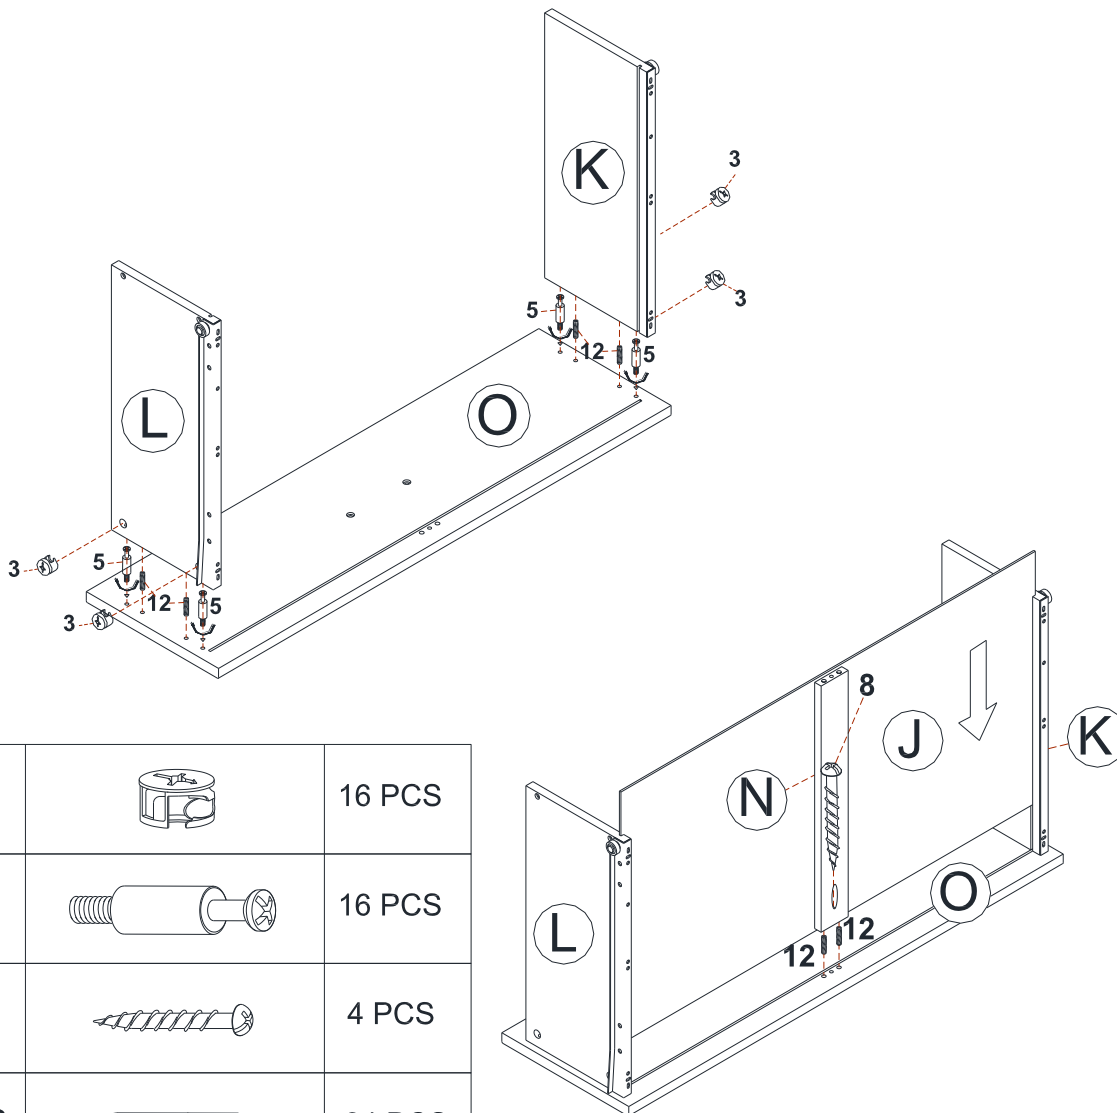 
# 4-DRAWER CHEST DA1011-6





## STEP 6

Insert small cam bolts (5) and wood dowels (12) into the drawer front (O).  
Insert small cam locks (3) into the left drawer side (K) and right drawer side (L).

Attach drawer sides (K & L) to the drawer front (O). Secure the drawer sides (K & L) by rotating small cam locks (3) 1/2-turn clockwise using a Phillips head screwdriver (not included).

Slide the drawer bottom (J) into the grooves of drawer sides (K & L) and drawer front (O).  
Attach drawer support rail (N) to the drawer front (O) using wood dowels (12) and screw (8) as shown below. Use a Phillips head screwdriver (not included) to tighten the screw.



|    |   |        |
|----|---|--------|
| 3  |  | 16 PCS |
| 5  |  | 16 PCS |
| 8  |  | 4 PCS  |
| 12 |  | 24 PCS |

# 4-DRAWER CHEST

## DA1011-6

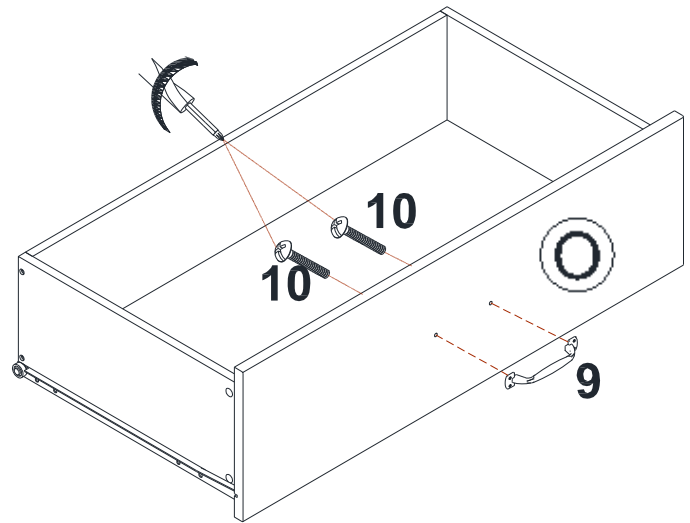 
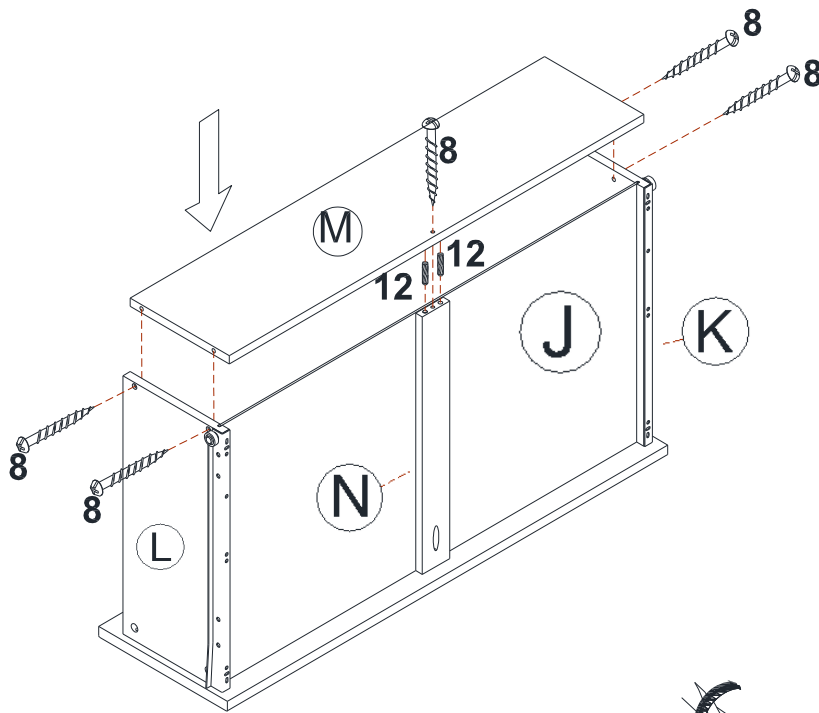 
### STEP 7


 


Insert wood dowels (12) into the drawer support rail (N).

Attach drawer back (M) to the drawer sides (K & L) and drawer support rail (N) with screws (8) using Phillips head screwdriver (not included).

Attach handle (9) to the drawer front (O) with bolts (10) using a Phillips head screwdriver (not included).

Repeat steps 6 and 7 to assemble the other drawers.



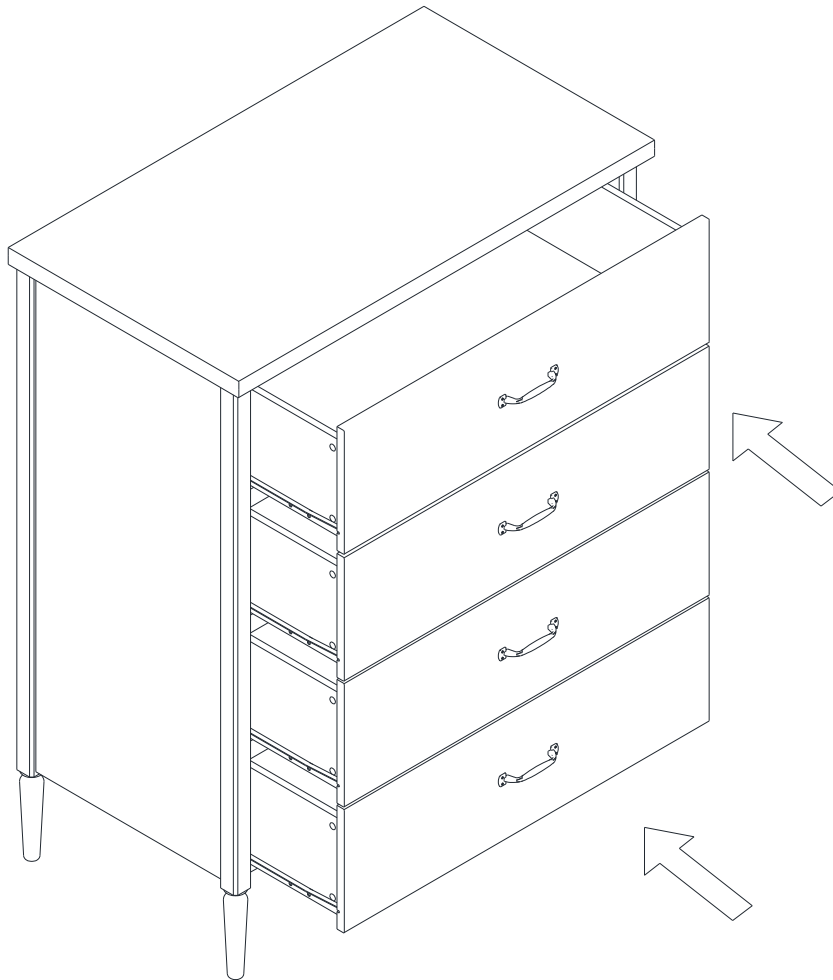 
|    |   |        |
|----|---|--------|
| 8  |  | 20 PCS |
| 9  |  | 4 PCS  |
| 10 |  | 8 PCS  |
| 12 |  | 8 PCS  |

# 4-DRAWER CHEST

## DA1011-6

### STEP 8

Insert the drawers into the assembled unit.

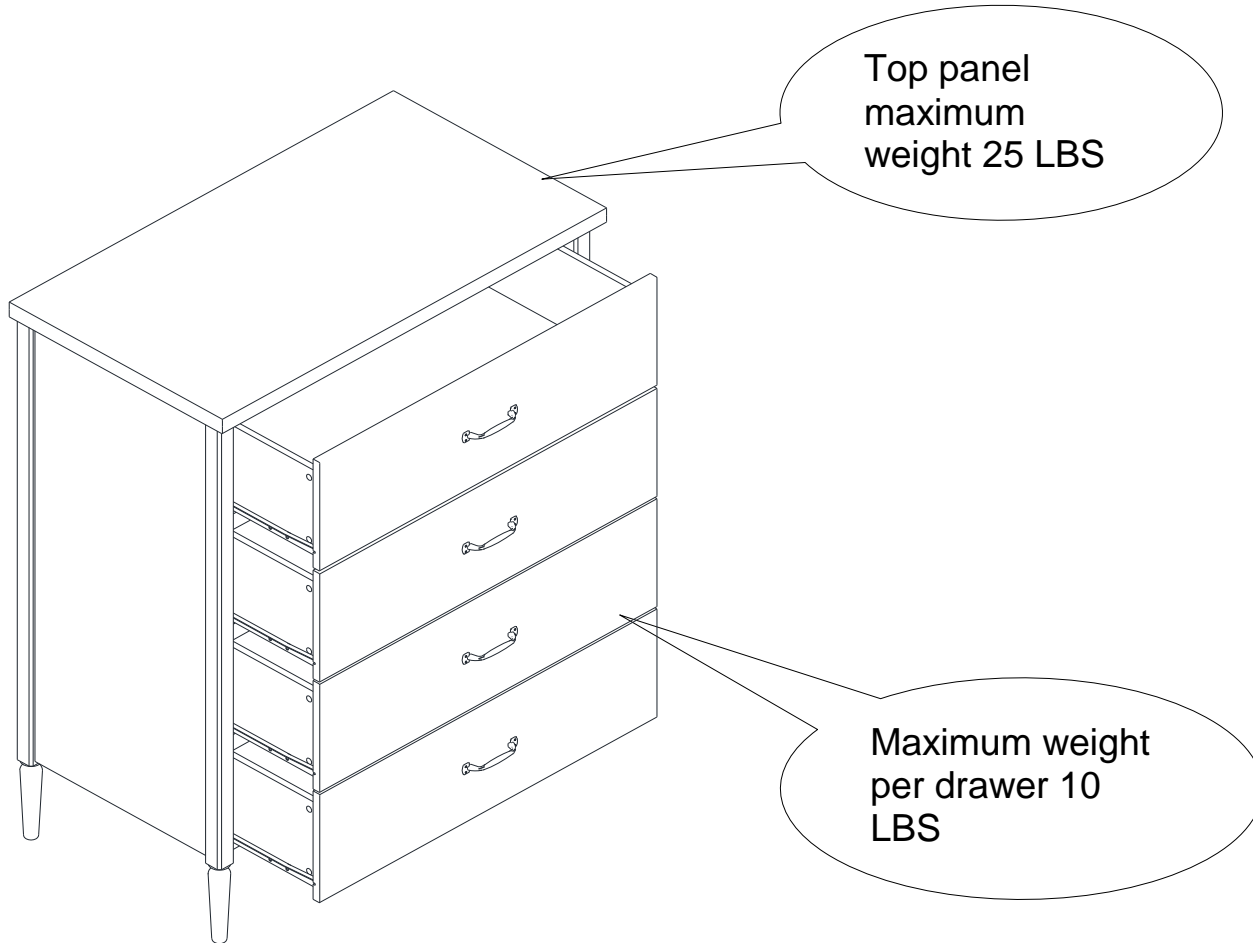 


# 4-DRAWER CHEST

## DA1011-6



**CAUTION:** This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.



That's it! You've finished assembling your 4-drawer chest.

**DO NOT RETURN PRODUCT TO THE STORE.**

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.

 
 
Tel #: 1-800-295-1980

E-Mail: [das@dorel.com](mailto:das@dorel.com)

Fax #: 514-353-7819

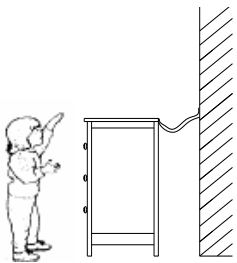 


# Furniture Wall Safety Strap

|   |   |   |   |   |  |
|---|---|---|---|---|--|
| A |  | B |  | C |  |
|   | MOUNTING BRACKET<br>4 PCS   |   | LONG SCREW<br>2 PCS   | D |  |
|   |   |   |   |   |  |

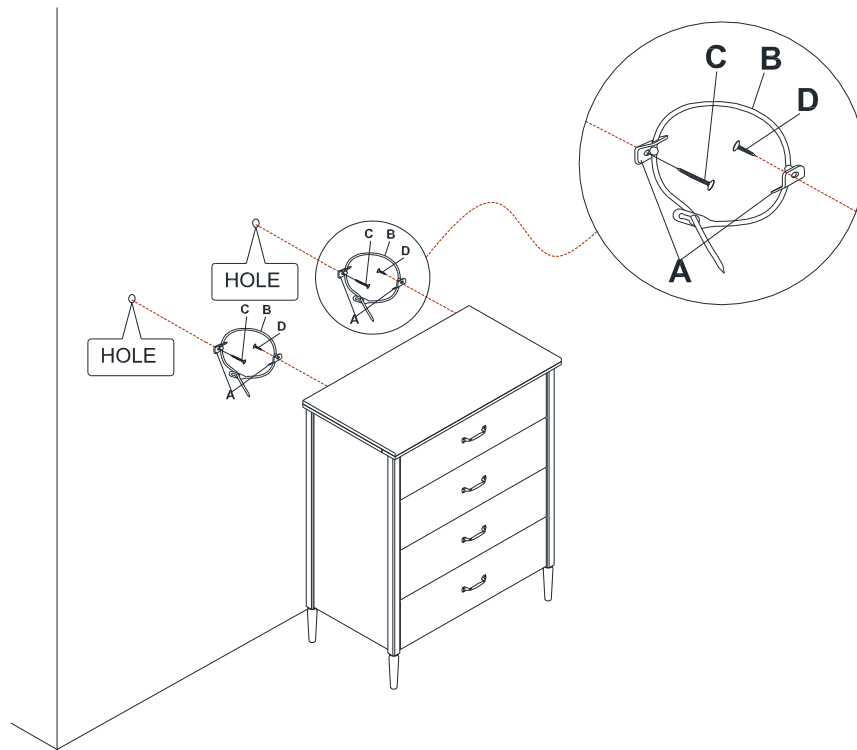 
**TOOLS NECESSARY: RUBBER Mallet AND PHILLIPS SCREW DRIVER ARE NOT INCLUDED.**

**NOTE: 3/8" DRILL BIT AND ELECTRIC DRILL ARE NOT PROVIDED.**



**WARNING: WHEN UPRIGHT, IT IS POSSIBLE THAT THE FURNITURE MAY TIP OVER. PLEASE INSTALL THE SAFETY WALL STRAP BEHIND THE FURNITURE TO ENSURE SAFETY.**

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT AND KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. IF YOU HAVE ANY QUESTIONS, PLEASE CALL OUR CUSTOMER SERVICE NUMBER: 1-800-295-1980.**



- Step 1:** ATTACH A MOUNTING BRACKET (A) SECURELY TO THE BACK EDGE OF THE FURNITURE USING THE SHORT SCREW (D), THROUGH THE SMALLER HOLE.
- Step 2:** LOCATE THE OTHER MOUNTING BRACKET (A) ON THE WALL OVER A WALL STUD AND 2 INCHES BELOW THE MOUNTING BRACKET SECURED TO THE BACK OF YOUR UNIT. ATTACH TO THE WALL STUD USING THE LONG SCREW (C) PROVIDED, THROUGH THE SMALLER HOLE.
- Step 3:** PLACE THE FURNITURE INTO POSITION SO BOTH MOUNTING BRACKETS ARE VERTICALLY IN LINE. LACE THE END OF THE SAFETY WALL STRAP (B) THROUGH THE LARGER HOLE IN EACH MOUNTING BRACKET (A). BRING BOTH ENDS TOGETHER AND SLIDE THE FLAT END THROUGH THE LOCKING END AND DRAW IT THROUGH UNTIL ALL SLACK IS REMOVED.
- Step 4:** CONFIRM THAT THE STRAP IS SECURELY LACED AND LOCKED.
- TO MOVE THE FURNITURE AFTER THE SAFETY WALL STRAP HAS BEEN INSTALLED, SIMPLY REMOVE THE SCREW FROM THE WALL TO LOOSEN THE SAFETY WALL STRAP.

# Customer Service

**PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE**

**PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).**

Customer Service Phone Number 1-800-295-1980

Email: [das@dorel.com](mailto:das@dorel.com)

Customer Service Fax Number 514-353-7819

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:  
(including area code)

Date & Place of Purchase:

Part(s) description and quantity (Please be sure to list model number or SKN number):

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1