


Bixby 3 piece bistro set, blue
ASSEMBLY INSTRUCTIONS
SM-K-153SET3B


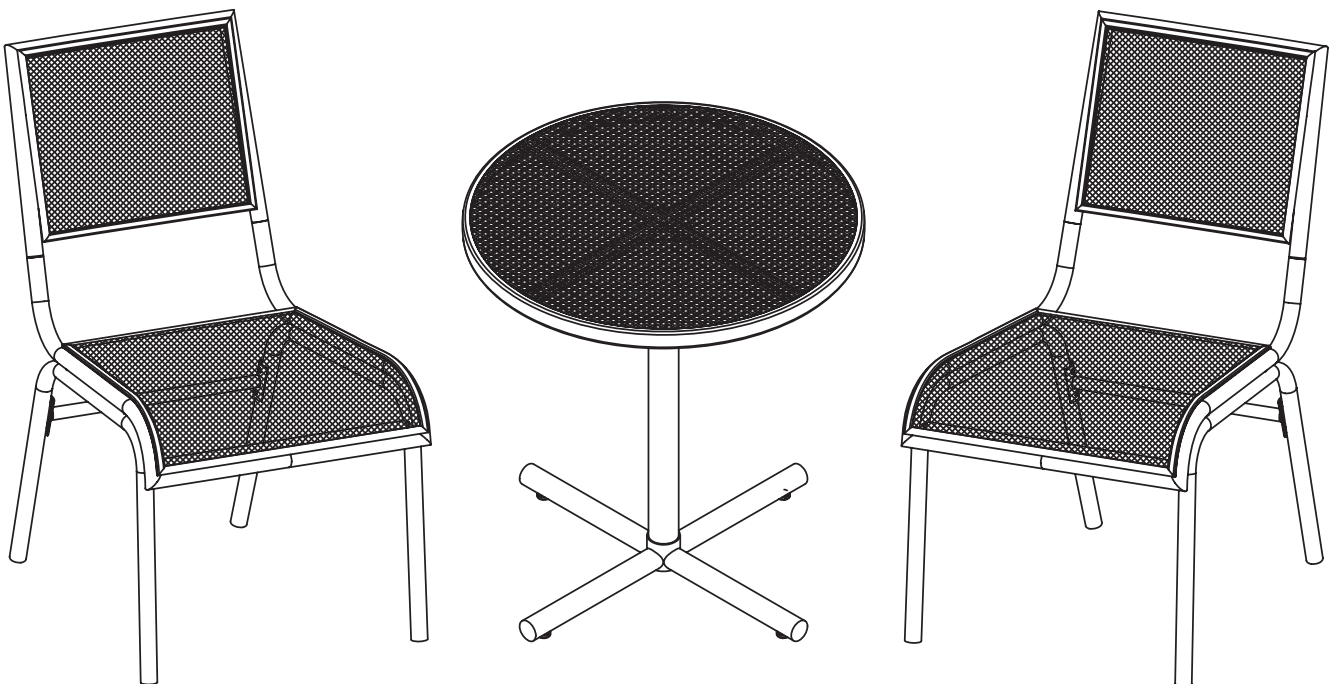


Questions, problems, missing parts with this product? Do not return to your retailer, please call our customer service department 9:00 a.m. to 5:00 p.m. Eastern Standard Time Monday through Friday Phone # 1-800-457-4652 or contact us at www.numarkcustomerservice.com

 
 




Parts

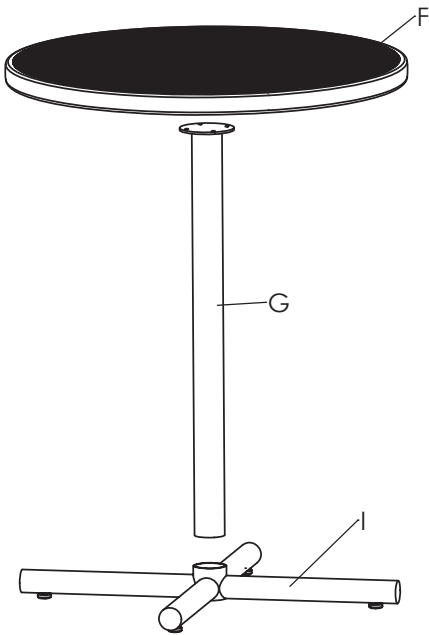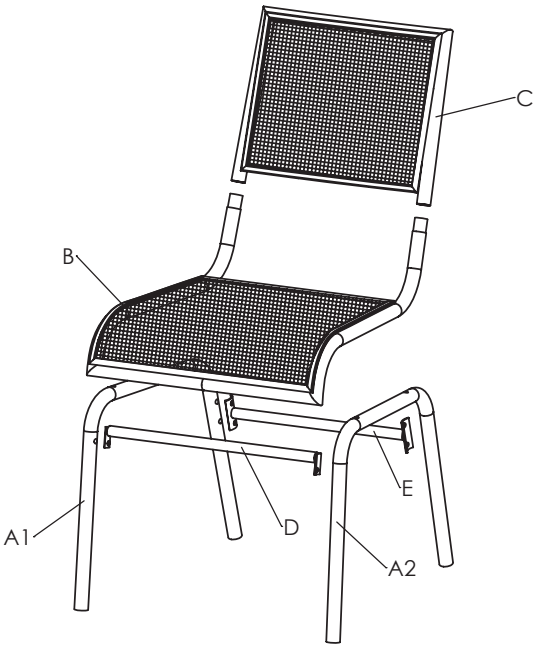
A1	right chair leg	2
A2	left chair leg	2
B	seat	2
C	back	2
D	front crossbar	2
E	rear crossbar	1
F	table top	1
G	center post	1
I	metal table leg	1



Hardware

H1 x 20 + 1 spare Short bolt	H2 x 8 + 1 spare Long bolt	H3 x 28 Metal washer	H4 x 1 Allen wrench
			

1

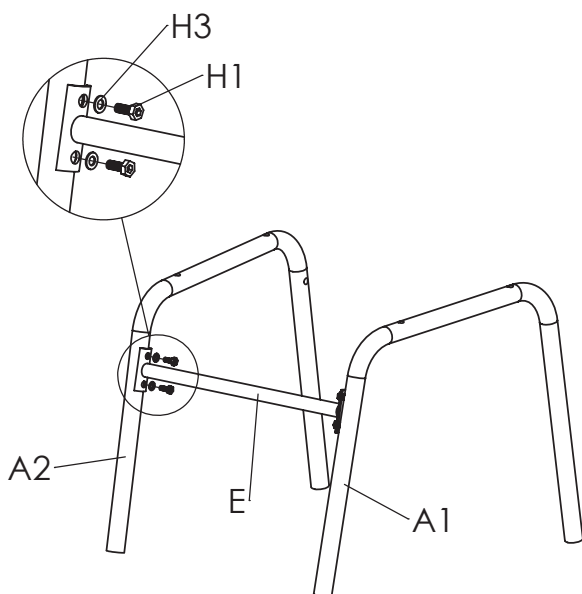

H1 x 4
Short bolt




H3 x 4
Metal washer



Do not tighten completely.
Repeat procedure for the other side.

2

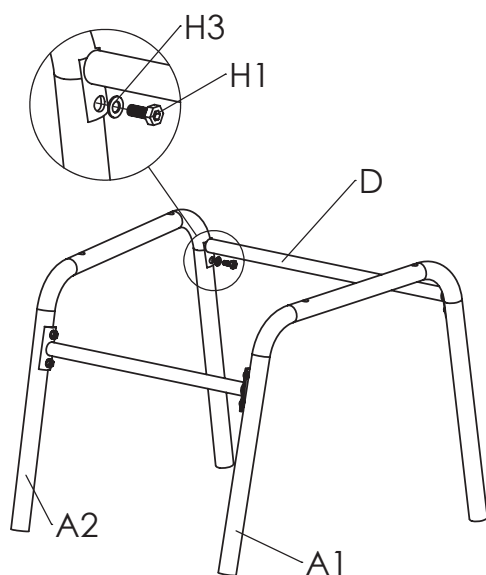

H1 x 2
Short bolt




H3 x 2
Metal washer



Do not tighten completely.
Repeat procedure for the other side.

3

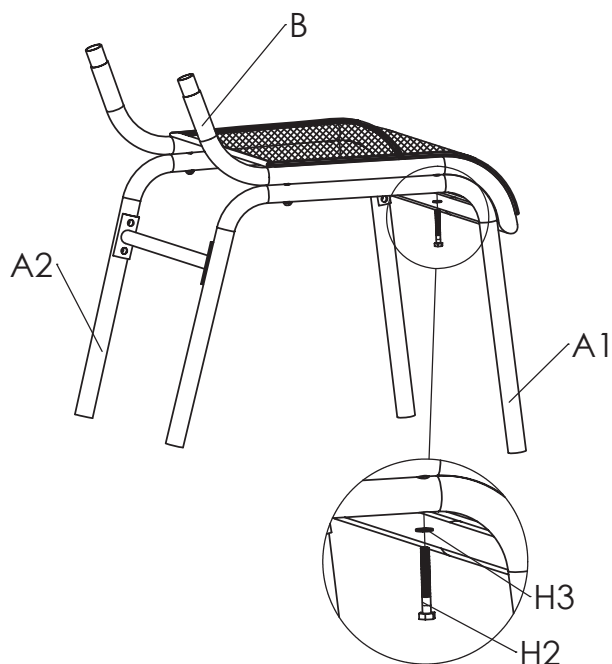

H2 x 4
Long bolt




H3 x 4
Metal washer



Do not tighten completely.
Repeat procedure for the other three holes.

4

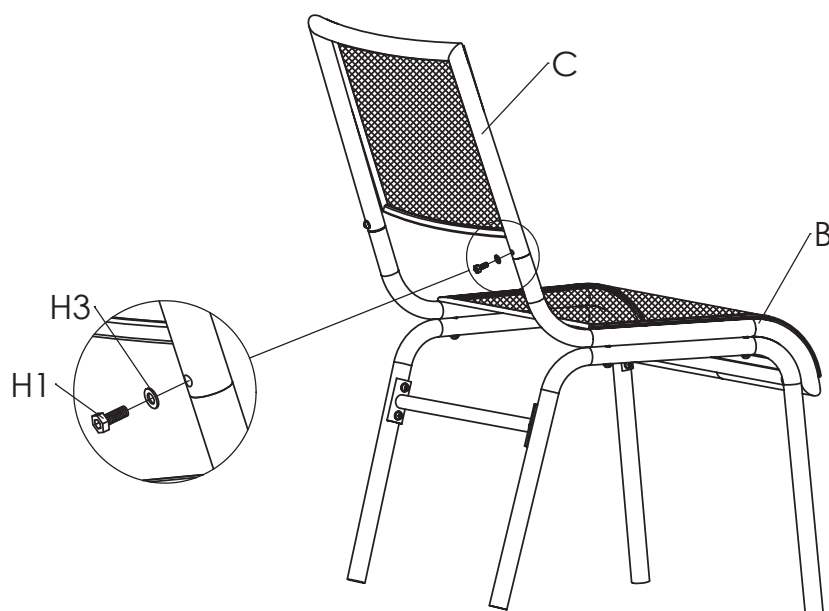

H1 x 2
Short bolt




H3 x 2
Metal washer



Once all bolts are in place, go back and tighten all bolts by using allen wrench (H4).
Repeat procedure for the other chair.

5

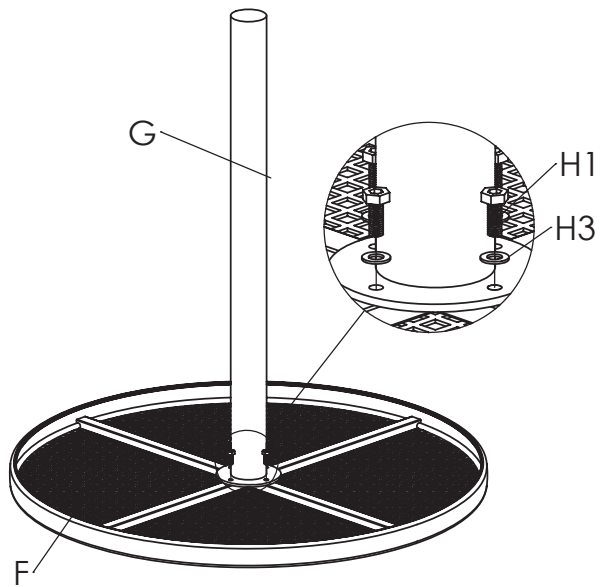

H1 x 4
Short bolt




H3 x 4
Metal washer



Do not tighten completely.

6

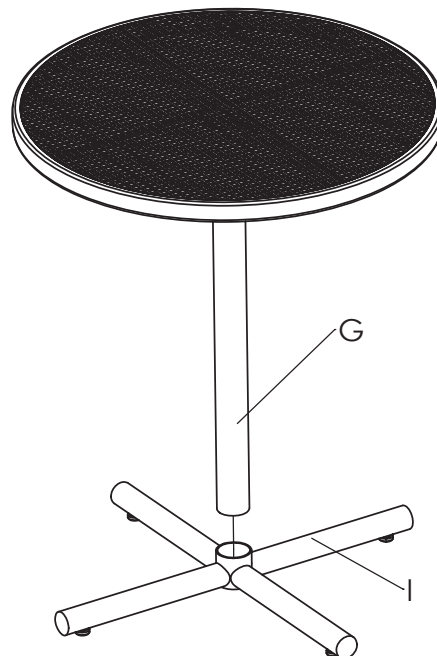

Once all bolts are in place, begin tightening bolts.
Alternate from one side to the other, until all are tightened.