



Quick Start Guide

Single Stage Sno-Tek (938022 s/n 101 & up)

- Step 1: Unfold Handlebar
- Step 2: Check/Add Oil
- Step 3: Add Fuel
- Step 4: Start Engine
- Step 5: Stop Engine



READ AND UNDERSTAND ALL INSTRUCTION, WARNING, AND DANGER LABELS.

IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE IMPORTANT SAFE OPERATION PRACTICES BEFORE OPERATING.



Step One: Unfold Handlebar



Loosen knobs on both sides of handle. Rotate the handlebar into operating position and tighten the knobs.



Step Two: Check/Add Oil



NOTE: The engine was shipped from the factory without oil. Before you start the engine, make sure you add oil according to the instructions in your Owners Manual. If you start the engine without oil, it will be damaged beyond repair and will not be covered under the warranty.



Step Three: Add Fuel



Fill the fuel tank with fuel. To allow for expansion of the fuel, do not fill above the bottom of the fuel tank neck. See Owners Manual for acceptable fuel.



Step Four: Starting the Engine





Start Engine / Step A: Auger



Make sure auger control is disengaged.



Starting Engine / Step B: Key



Insert the ON/OFF key and turn to the ON position.

Starting Engine / Step C: Choke



Turn the choke knob fully clockwise if engine is cold.

NOTE: Do not use the choke to start a warm engine.

Starting Engine / Step D: Prime



Push the primer button two times.

NOTE: Do not use the primer to start a warm engine.



Starting Engine / Step E: (Manual Start)



Firmly hold the starter cord handle. Pull the starter cord handle slowly until resistance is felt, then pull rapidly.




Starting Engine / Step F: (Electrical Start)



First connect the extension cord to the power cord receptacle and then into a wall receptacle. If additional extension cord is required, make sure it is three-wire.



Starting Engine / Step G: (Electrical Start)

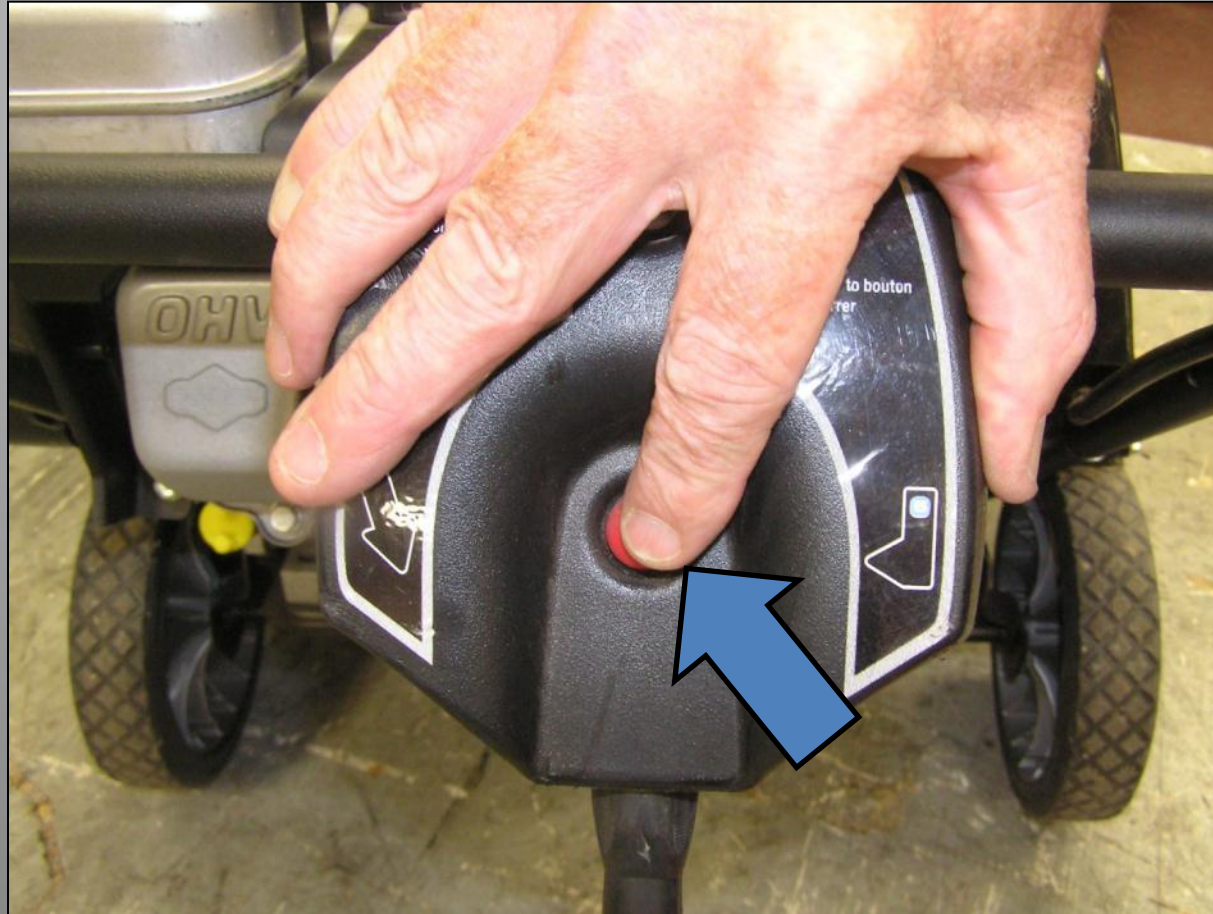

Depress the starter push button. After you start the engine, first disconnect the extension cord from the wall receptacle and then from the power cord receptacle.

Starting Engine / Step H: Warm up



Allow the engine to warm up for several minutes, Then, slowly move the choke control knob to the run position.



Step Five: Stopping Engine



Before stopping the engine, allow it to idle for a few minutes to help dry off any moisture. Turn the ON/OFF key to the OFF position and remove key.



Additional Resources

- Refer to Owners Manual and Engine Manual
- Contact Ariens Company
- For issues concerning engine, please contact Briggs and Stratton

www.ariens.com

Phone: 920-756-4688

E-mail: info@ariens.com

www.BRIGGSandSTRATTON.com

Phone: 800-233-3723