

Spring Clip (11-4003)

- 1: PUSH OPEN THE SPRING CLIP WITH ONE HAND AND CLIP IT ONTO THE SWING HANGER.
- 2: NOW CLIP THE SPRING CLIP ONTO THE SWING CHAIN.
- 3: ADJUST THE SWING CHAIN HIGHER OR LOWER BY CLIPPING ON LOWER OR HIGHER LINKS.



FOR RESIDENTIAL USE ONLY
FOR CHILDREN AGES 3-11