



# FRUIT & VEGETABLE SLICER

## USER INSTRUCTIONS

### SPECIFICATIONS

**Slice thickness:** EVS100: 3/16" / 4mm  
EVS200: 1/4" / 5.5mm

**Weight:** 11.5LB / 5.2KG

**Dimensions:** 17" L x 8" D x 8.3" H  
432mm L X 202mm D X 210mm H

#### WARNING

##### BLADES ARE SHARP

Extreme caution must be used when handling, operating, and cleaning this product. The blades are extremely sharp and improper use can lead to serious injuries. This device must not be used or handled by children.



Picture 1



Picture 2

### Operating the Slicer

1. Place the slicer on a flat and level surface.
2. Place a fruit or vegetable on the flat plate in front of the blades with the pusher behind the fruit or vegetable as shown in **Picture 1**.
3. Carefully use the handle to push the fruit or vegetable forward through the blades as shown in **Picture 2**.

**The unit can be cleaned using warm soapy water and a damp cloth. Extreme caution must be used during cleaning around blades.**

Excalibur

3355 Enterprise Ave., Suite 160, Fort Lauderdale, FL 33331, Ph: (877)368-2797 Fax: (954)202-7337

[www.excaliburdehydrator.com](http://www.excaliburdehydrator.com)