




**RAINTIGHT OUTDOOR TIMER**  
**PROGRAM REPEATS EVERY 24 HOURS**  
**TO SET TIMER: (SEE ILLUSTRATION)**

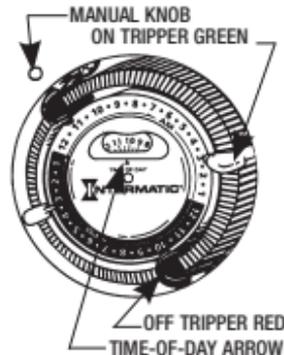

1. Insert **ON (GREEN)** and **OFF (RED)** trippers into dial at desired **ON** and **OFF** times.
2. Turn dial **CLOCKWISE**  one or more complete revolutions until the arrowhead is aligned with time-of-day (AM or PM) in window.
3. Turn lamp or appliance **ON**.
4. Plug extension cord, lamp or appliance into timers receptacle and plug timer cord into outlet, suitable for "wet locations" if outdoors.

**FOR EARLY ON OR OFF OPERATION,**

Turn manual knob counter clockwise  to desired **ON** or **OFF** position, Timer will follow next scheduled automatic operation.

**IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)**

**⚠ WARNING Risk of Electric Shock**

Do not permit children to operate the timer or pool/spa unless they are closely supervised at all times.

Install only on a **GROUND**ED 120VAC circuit protected by a GFCI.

Test **GROUND FAULT** protection regularly. If it fails to reset, **DO NOT USE** the pool or spa! Contact

a qualified service technician. Always disconnect electricity before servicing this timer or the

equipment connected to it. **THIS TIMER IS NOT TO BE USED AS A POWER DISCONNECT.**

Timer must be installed vertically at least 3 ft. above ground level and at least 5 Ft. away from edge of Pool or Spa.

Wattage of lamps or appliance being controlled should not exceed capacity of timer.

**MODEL: HB11K** 15 AMP (1800 WATT) RESISTIVE; 15 AMP (1800 WATT) TUNGSTEN; 1HP (15 FLA, 90 LRA) MOTOR-120 VOLT 60 HZ.

**INTERMATIC INCORPORATED**

**MADE IN MEXICO**



154--02012