

Item # DTIF Digital Tire Inflator Pressure Gauge Instruction Manual



- For testing, inflating or deflating tires. Backlit LCD screen has large numbers and is easy to read.
- Calibrated to return reading within 1% of exact pressure of your tire.

Features:

- Units: PSI, BAR, KPA,KG/CM2
- Display Off Time: 20 seconds
- Backlight Display Time: 15 seconds
- Working voltage: DC 3.1V
- Low voltage show function: LCD flash when under 2.5V
- Air Inlet: G 1/4"
- Hose Length: 12 inch
- Working Pressure: 0-255 PSI
- Package Contents:

- 1 x Tire Inflator Gauge (A)
- 1 x Twist-On Air Chuck (B)
- 4 x Valve Caps (C)
- 1 x Brass Closed Flow Lock On Chuck with Clip (D)
- 1 x 1/4" NPT Steel Fitting (F)
- 1 x 1/2" NPT Steel Fitting (G)
- 1 x Valve Core Tool (H)

(2 x AAA Batteries included)
Remove the rubber cover
and locate the panel on the
back of gauge to replace.

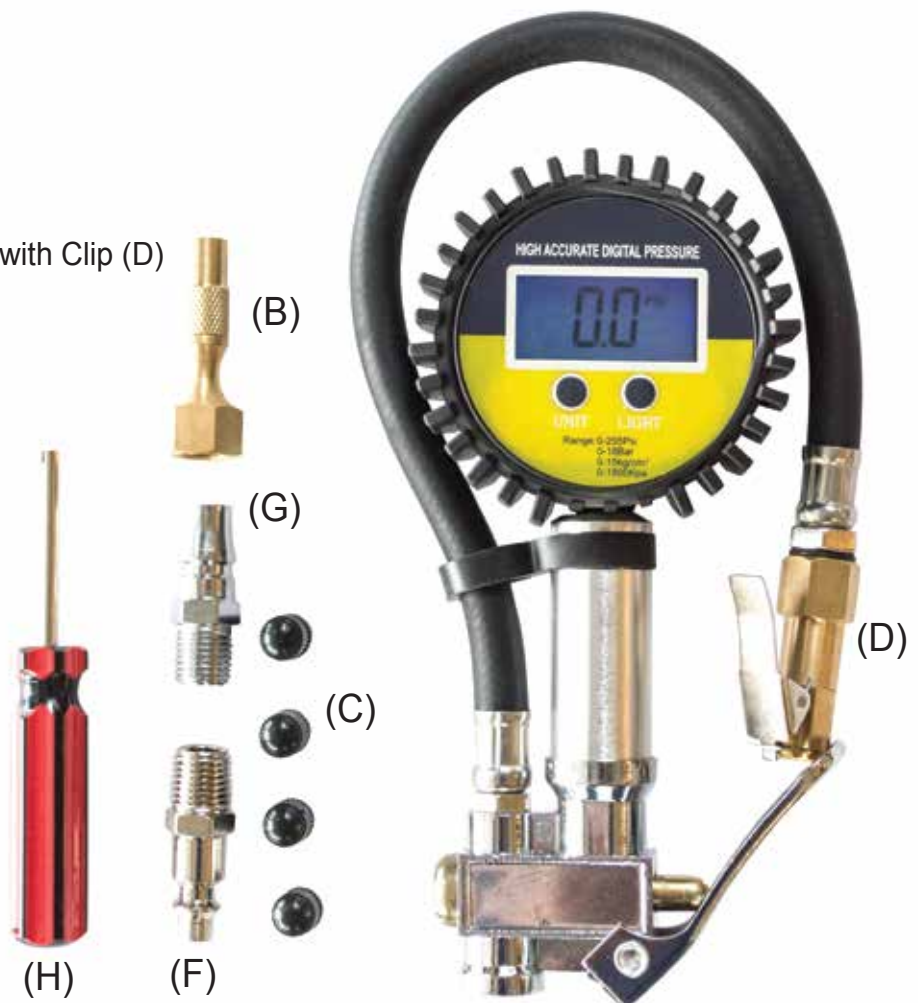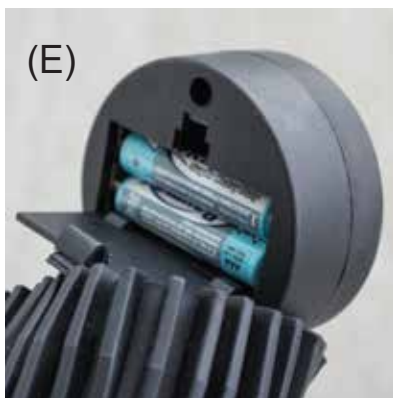

If you have questions regarding the use of this product, call Customer Service at 636-532-9888 Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.

Item # DTIF Digital Tire Inflator Pressure Gauge Instruction Manual



Use Thread Seal Tape Roll, then attach NPT Steel Fitting. (Tape not included)



Attach to the Quick connect coupler.



Use the Twist-On Air Chuck to inflate/deflate tires.



Use the Closed Flow Air Chuck to inflate/deflate tires. The closed flow design allows air to flow when the internal flow valve is open.



Press the Bleeder Valve to inflate. Releasing it will also reset the device.



Press the UNIT button to switch between modes.

If you have questions regarding the use of this product, call Customer Service at 636-532-9888 Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.