

• Top pattern indicator ensures easy adjustments

• Includes pre-installed 1.5 GPM nozzle

• Indicador superior del patrón asegura ajuste fácil

• Incluye boquilla pre-instalada de 1,5 GPM





Visible indicator points

to spray pattern



Model 53824

Installation Tip: The Mini-8 rotor should be installed with the cap at the finished grade. To ensure even coverage, always space sprinklers using head-to-head coverage so their spray patterns overlap. The adjustment screw can be used to reduce the distance by up to 25%.

Space sprinklers for head-to-head coverage



Setting the spray pattern: The Mini-8 rotor is pre-set at 180° half-circle pattern. To adjust, insert the adjustment tool (sold separately) or flathead screwdriver into the arc adjuster. Turn clockwise to increase the pattern until the indicator arrow points to the desired angle; turn it counterclockwise to decrease it.



P/N 118-4204 ©2015 The Toro Company. All Rights Reserved. Made in Dominican Republic

