

Insect Screen

for Andersen® 200 Series Tilt-Wash Double-Hung Windows



INSTALLER: Please leave this guide with the building owner to file for future reference.

For ease of installation and continued enjoyment of your Andersen® product, please read and follow this Instruction Guide completely. You may direct any questions about this or other products to your local Andersen dealer, found in the Yellow Pages under “Windows”, or call Andersen WindowCare® service center at 1-888-888-7020 Monday through Friday, 7 a.m. to 7 p.m. Central Time and Saturday, 8 a.m. to 4 p.m. Central Time. Assembly and installation of Andersen products is the sole responsibility of the architect, building owner, contractor and/or consumer and Andersen has no responsibility in this regard. Thank you for choosing Andersen.

⚠ WARNING

Use of ladders and/or scaffolding and working at elevated levels may be hazardous. Follow equipment manufacturer's instructions for safe operation. Use extreme caution when working around window and door openings. Falling from opening may result in personal injury or death.



⚠ WARNING

Screen will not stop child from falling out window. Keep child away from open window.

⚠ WARNING

Weight of window/door unit(s) and accessories will vary. Use a reasonable number of people with sufficient strength to lift, carry, and install window/door unit(s) and accessories. Always use appropriate lifting techniques.


Insect Screen

Parts Included

- (1) Insect Screen
- (2) Insect Screen Latches

Tools Required


None

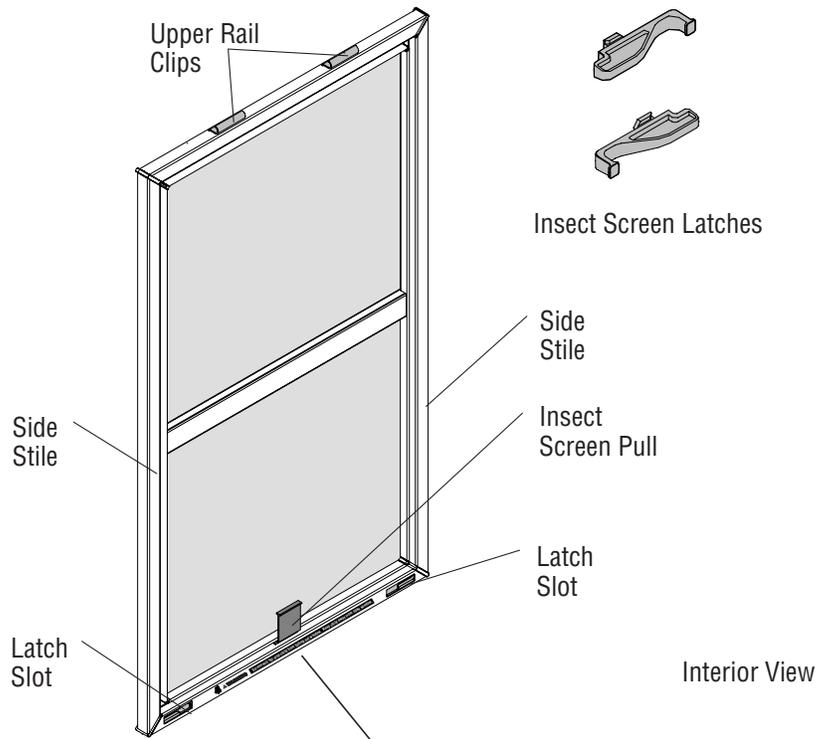

⚠ WARNING Screen will not stop child from falling out window. Keep child away from open window.

1. Prepare Insect Screen for Installation

- Carefully remove *Insect Screen* from carton. Place *Insect Screen* interior side up on a clean flat work surface. *Latch Slots* will be visible on *Insect Screen Bottom Rail*.
- Insert *Latch Tab* into *Latch Slot* on *Insect Screen Bottom Rail*. Slide *Latch* back and forth several times checking for smooth operation. Make sure *Insect Screen Latches* are pushed toward center of *Insect Screen* prior to installation.

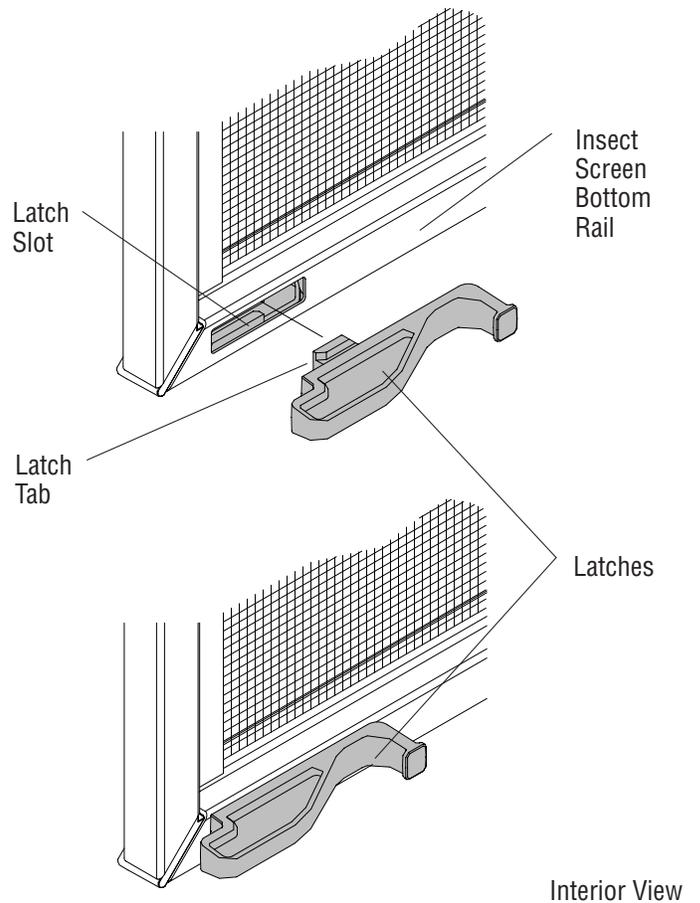

2. Open Lower Sash and Pass Insect Screen Through to Exterior


! WARNING

Use extreme care when working around window opening. Never leave a window opening unattended, especially when children are present. Falling from window opening may result in severe personal injury or death.

NOTICE

Insect Screen is installed from the interior side of window.


- Unlock and lift *Lower Sash* to full open position.
- Grasp *Insect Screen Side Stiles* near bottom of *Insect Screen* and pass *Insect Screen* through window opening.

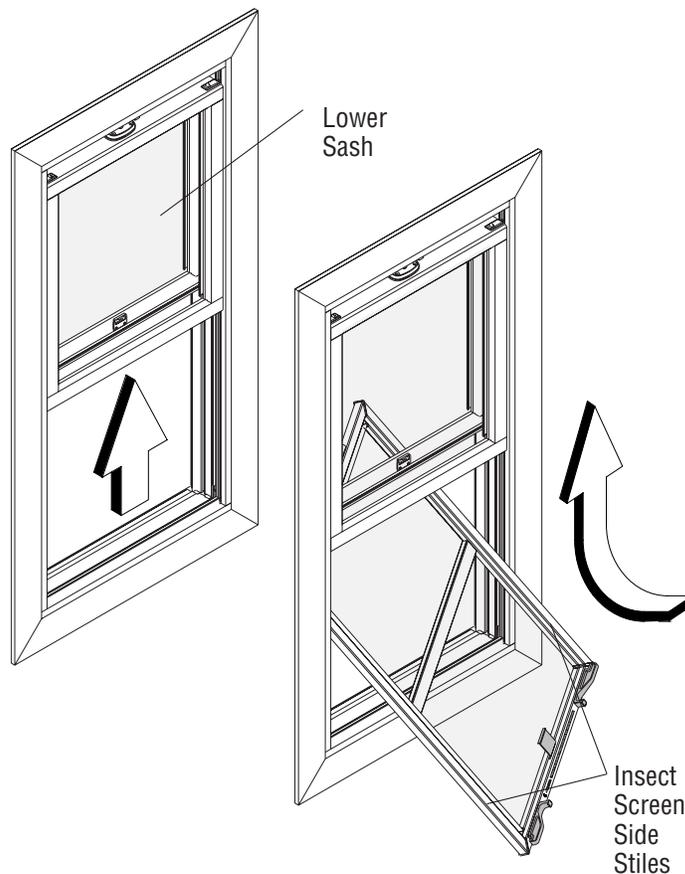

Interior View

3. Install Insect Screen in Frame

- Insert *Upper Rail Clips* of *Insect Screen* into *Insect Screen Groove* in frame. While maintaining grasp on one *Side Stile*, use other hand to grasp *Insect Screen Pull* and pull *Insect Screen* to the closed position in frame.

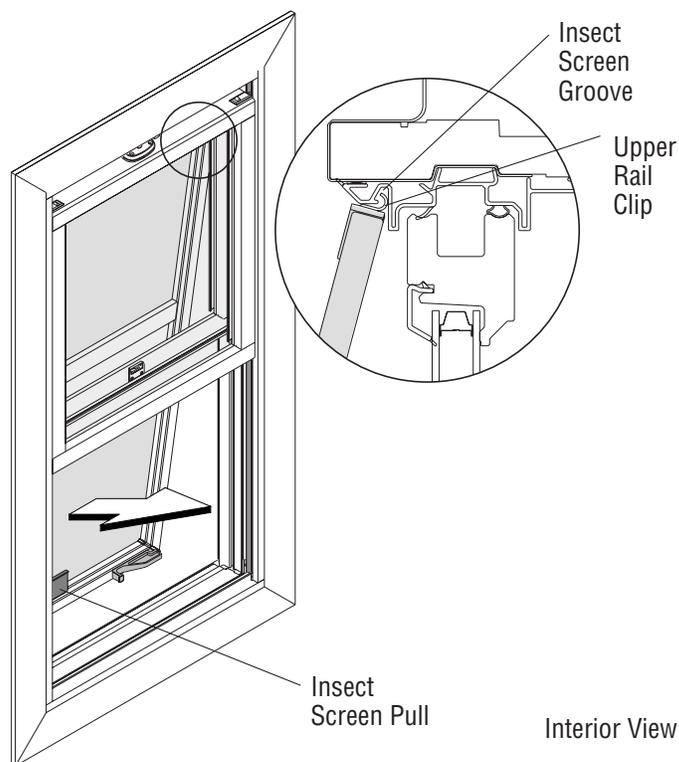

Interior View

4. Secure Insect Screen Latches

- Push *Insect Screen Latches* outward to secure *Insect Screen*.
- Make sure *Insect Screen* is secure by pushing and pulling on *Insect Screen Pull* several times.

