

**Commercial
Electric™**

Item #640816
Model #5018-WH

Installation Guide

Low Voltage Recessed Cable Plate

PACKAGE CONTENTS

- (1) Low Voltage Recessed Cable Plate

TOOLS NEEDED

- Drywall Saw
 - #2 Phillips head screwdriver
 - Pencil
- *The use of power tools is not recommended

Scan Me




For video information visit homedepot.com and search SKU 640816 or model number 5018-WH

Installation


1 PREPARING THE INSTALL LOCATION

- Use a drywall saw (not included) and the included template to cut a hole in your install location. Then route your cables through the opening in the wall.

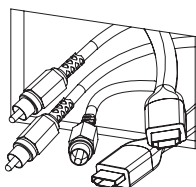


2 ROUTING THE CABLES

- Route your low voltage cables through the opening in the back of the Low Voltage Recessed Cable Plate and out through the front of the Plate.

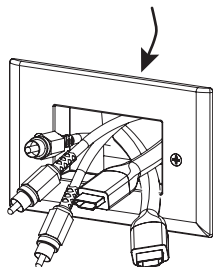


3 INSTALLING THE PLATE


- Secure the Low Voltage Recessed Cable Plate to the wall using a Phillips head screwdriver to tighten the attached screws with wings.

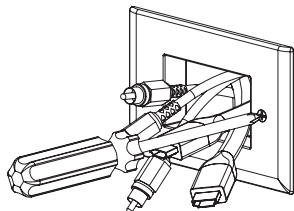

4 INSTALLATION COMPLETE

- Installation is complete. You can now connect your home theater devices and equipment.

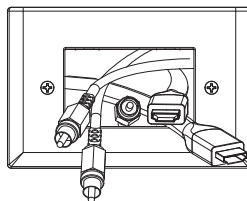

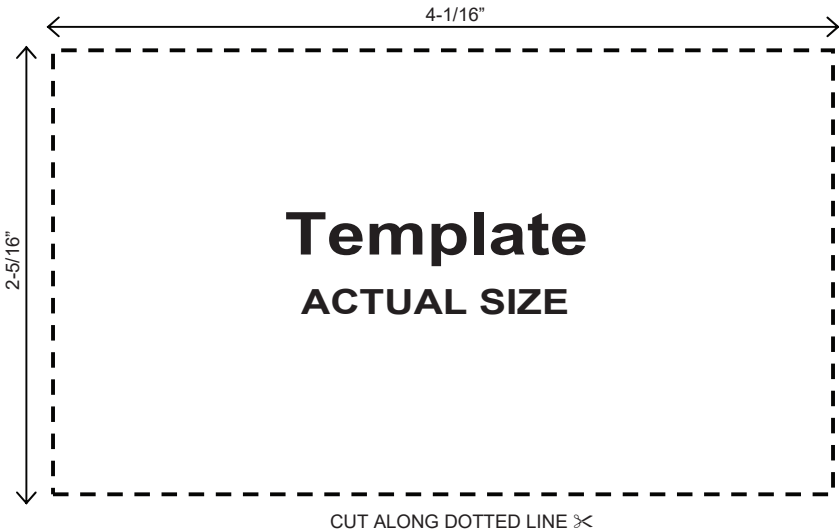

Please read all instructions and safety information before use.
Retain this manual for future reference.



CAUTION: When using tools always follow the manufacturer's safety guidelines.