



**GRAFTON LED WALL SCONCE
ASSEMBLY/INSTALLATION INSTRUCTIONS
SKU#578575**

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

TOOLS REQUIRED

Phillips Screwdriver.

ASSEMBLY AND INSTALLATION

Turn off the power at fuse or circuit breaker.

1. Before beginning the installation, carefully unpack and identify all parts.
2. Using (2) JUNCTION BOX SCREWS, securely fasten the CROSSBAR to the JUNCTION BOX.
3. **MAKE THE CONNECTIONS:** Attach the FIXTURE GROUND WIRE to the CROSS BAR with GREEN GROUND SCREW. Then connect it to the SUPPLY GROUND WIRE with a wire nut. Using WIRE NUTS, connect the SUPPLY WHITE WIRE(S) to the FIXTURE WHITE (or RIBBED) LEAD(S); Connect the SUPPLY BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH) LEAD(S). Wrap all connections with approved electrical tape.
4. Fit the heads of the FIXTURE SCREWS through the KEYHOLE SLOTS in the WALL PLATE. Pull down the WALL PLATE until the FIXTURE SCREW heads are seated at the small ends of the KEYHOLE SLOTS, and secure both FIXTURE SCREWS.
5. Place the ACRYLIC LENS over the NIPPLES and secure them with desired LOCK BALLS. Both Satin Nickel and Oil Rubbed Bronze LOCK BALLS are available.

Turn on the power at fuse or circuit breaker.

FIGURE 1.

 
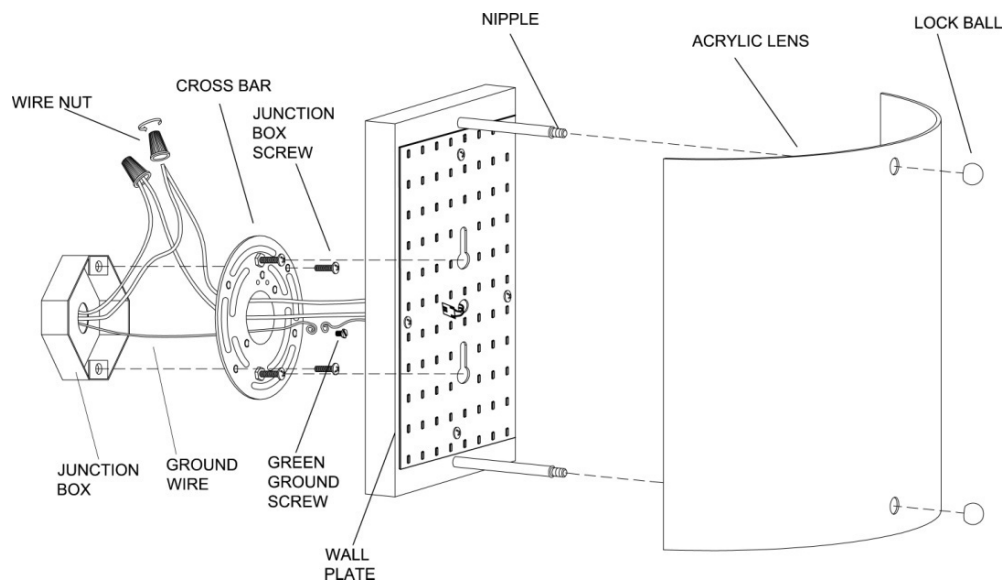 


FIGURE 2.

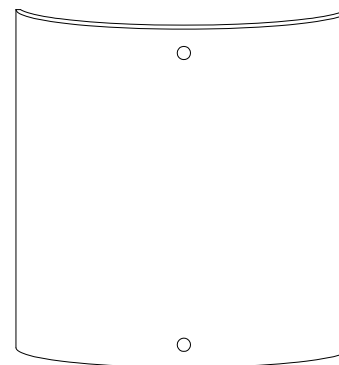

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN.**

Customer Service: 1-800-558-8700