




Item # 1001220894 Model # 6111-NDM

USE AND CARE GUIDE

CRYSTAL CUBE 3-LIGHT VANITY

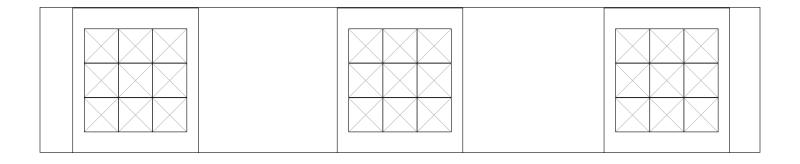

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	
Pre-Installation	
Planning Installation	

Package Contents	4
Installation	5
Operation	6
Care and Cleaning	
Troubleshooting	

Safety Information

 Consult a qualified electrician if you have any electrical questions.



CAUTION: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation. Please call our Customer Service Team at 1-800-986-3460.



WARNING: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

Warranty

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-800-986-3460 or visit www.homedepot.com/homedecorators.


Pre-Installation

PLANNING INSTALLATION


- Read all instructions before installation.
- To avoid damaging this product, assemble it on a soft, nonabrasive surface, such as carpet or cardboard.
- □ Keep your receipt and these instructions for proof of purchase.

Pre-Installation (continued)

TOOLS REQUIRED

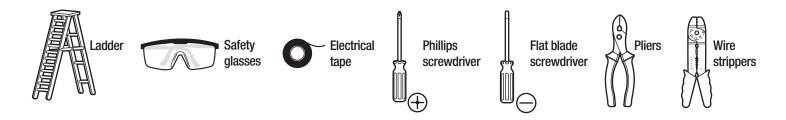


HARDWARE INCLUDED

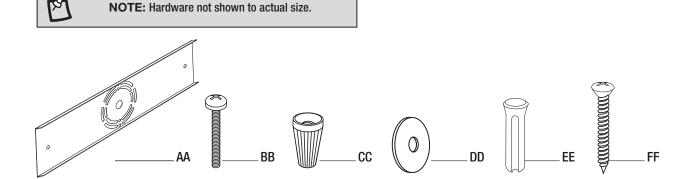


Part	Description	Quantity
AA	Mounting unit	1
BB	Mounting screw	2
CC	Wire nut	3
DD	Plastic washer	3
EE	Wall anchor	2
FF	Anchor screw	2

Pre-Installation (continued)

PACKAGE CONTENTS

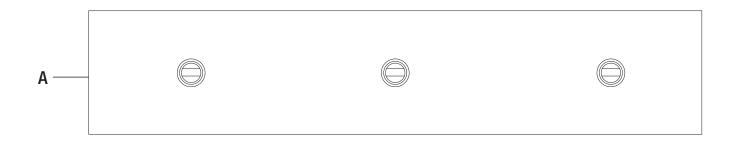

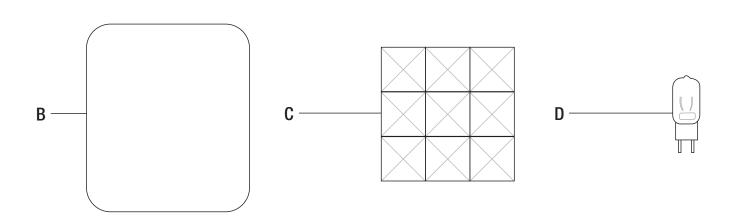

Part	Description	Quantity
Α	Light fixture	1
В	Glass shade	3
С	Crystal shade	3
D	G9 bulb	3

Attaching the mounting unit to the junction box


- ☐ Remove the preinstalled set screw to separate the light fixture (A) and the mounting unit (AA). Place the set screw in a safe location.
- ☐ Attach mounting unit (AA) to the junction box (not included) with mounting screws (BB).




NOTE: Anchors (EE) may be required depending on the type of construction.



NOTE: The pre-installed set screw on the mounting unit (AA) should protrude out away from the junction box.

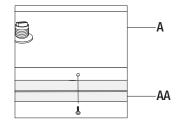

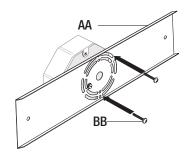



2 Making the electrical connections

- Connect the copper wire on the light fixture (A) to the mounting unit (AA) by securing it with the preinstalled ground screw.
- Connect the black to black (power), the white to white (neutral) and copper wire to ground wire with the wire nuts (CC) and secure with electrical tape (not included).




NOTE: If the wires from the fixture are the same color, attach the side with markings or letters to the black (positive) wire and the other to the white (neutral) wire.

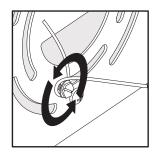

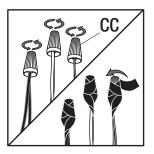


3 Installing the light bulbs

 
 $\hfill\Box$ Install the G9 40 watt bulbs (D) (included).



4 Installing the shade

 - ☐ Insert the crystal shade (C) into the glass shade (B) and seperate them with the plastic washer (DD).
- Attach the shade assembly to the light fixture (A) by screwing them together.




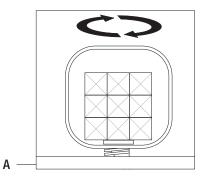

Installation (continued)

5 Securing the light fixture

☐ Secure the light fixture (A) to the junction box by placing it over the mounting unit (AA) and securing it with the previously removed set screw.

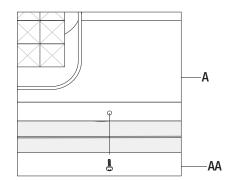

Operation

Turning the light on

☐ Turn the light switch on to activate the fixture.

Care and Cleaning

- ☐ Clean the lamp with a soft, dry cloth.
- □ Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	Replace the light bulb.
	The power is off.	Ensure the power supply is On.
	There is a faulty wire connection.	Check the wiring.
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.
The fuse blows or circuit breaker trips when the light is turned on.	There are crossed wires or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or call the Customer Service Team at 1-800-986-3460.



Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.