




Replacement Parts List

Touchless Single-Handle Pull-Down Sprayer Kitchen Faucet
with LED Light in Bronze

MODEL	SKU #	FINISH
67536-1027H2	205591733	Bronze

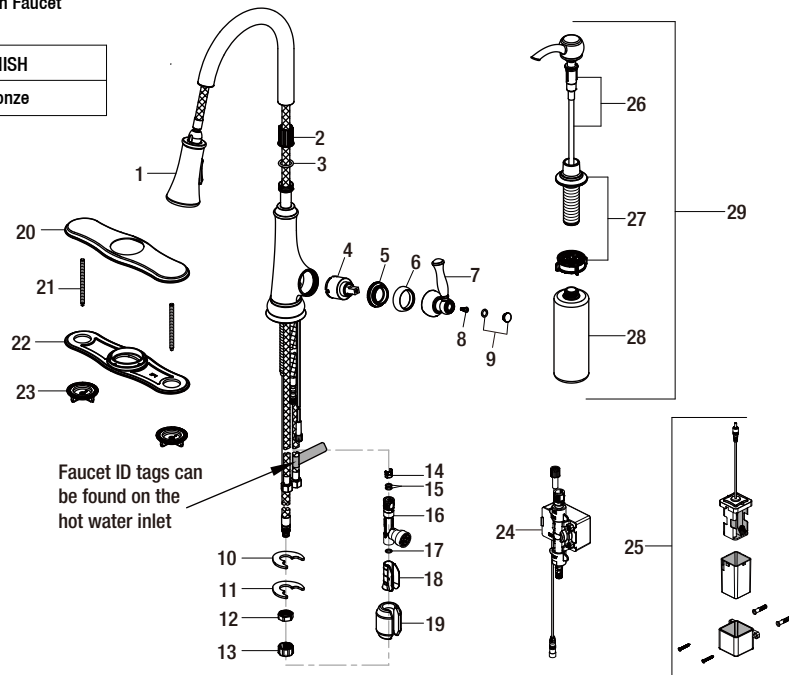

Many replacement parts can be purchased online or at your local store. Please use the table below to identify the part SKU number needed, go to HOMEDEPOT.COM, and check for online and store availability. If you can't find the part you are looking for, please call 1-855-HD-GLACIER.

Part	Description	Part #	Internet SKU #	Store SKU #
1	Spray head and Hose	RP3822327H2		
2	Wearable ring	RP70380		
3	O-ring	RP60071		
4	Cartridge	RP20005	207093806	
5	Bonnet	RP70394		
6	Cap	RP8002827H2		
7	Handle	RP1336827H2		
8	Screw	RP50015		
9	Index & O-ring	RP8044027H2		
10	Rubber washer	RP64087		
11	Metal washer	RP64088		
12	Nut	RP56098		
13	Protective cap	RP70448		
14	Block	RP70421	207093811	
15	O-ring	RP60002		

Part	Description	Part #	Internet SKU #	Store SKU #
16	Quick connect assembly	RP70482	207093811	
17	O-ring	RP60089		
18	Weight clip	RP64204	207093823	
19	Weights	RP70441		
20	Escutcheon	RP8044127H2		
21	Bolt	RP50071		
22	Base plate	RP80442		
23	Mounting nut	RP56036		
24	Control box	RP70515	207093817	
25	Battery pack	RP70514	207113905	
26	Pump kit	RP46022		
27	Flange kit	RP4606627H2		
28	Bottle	RP46060		
29	Soap dispenser	RP4606527H2		