

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

5124513 Headless Horseman

USA/ États-Unis 1004189206
Canada 1001122744
YOW 1004126180



Please follow the step by step guide and enjoy your Headless Horseman!

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in it's original packing. Keep away from heat and moisture.

TROUBLE SHOOTING:

- Ensure that the item's adapter is plugged in at the Function Control Box and in the wall.
- Ensure that the switch on the function control box is on the desired setting.
- If not functioning properly, ensure that cables are connected to their corresponding cable as shown in the instruction sheet .
- Be sure nothing is blocking movement or caught in moving parts.
- Ensure that the floor or surface that the item sits on is flat and level.
- Be sure nothing is blocking the sensor.

WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the transformer supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the transformer, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST

- A. Base x1
- B. Lower Support Poles x2
- C. Back Horse Legs x2
- D. Horse Torso Frame x1
- E. Horse Head x1
(A fog hose is attached to inside of Horse Head)
- F. Front Horse Legs x2
- G. Horse Blanket x1
- H. Horse Tail x1
- I. Horseman's Pants x1
- J. Horseman's Frame x1
- K. Horseman's Legs x2
- L. Horseman's Boots x2
- M. Horseman's Coatx1
(Remove fabric from hook Loop closures before assembling)
- N. Horseman's Right Arm x1
- O. Horseman's Left Arm and Jack O' Lantern Head x1
- P. Horseman's Cape x1
- Q. Fog Machine Adapter x1
- R. Cotter Pins/Cable Ties
(Attached to the D. Horse Torso Frame)
- S. Adapter (Included)
Input: 100 - 240VAC 50/60Hz
Output: 5.9V 1.5A

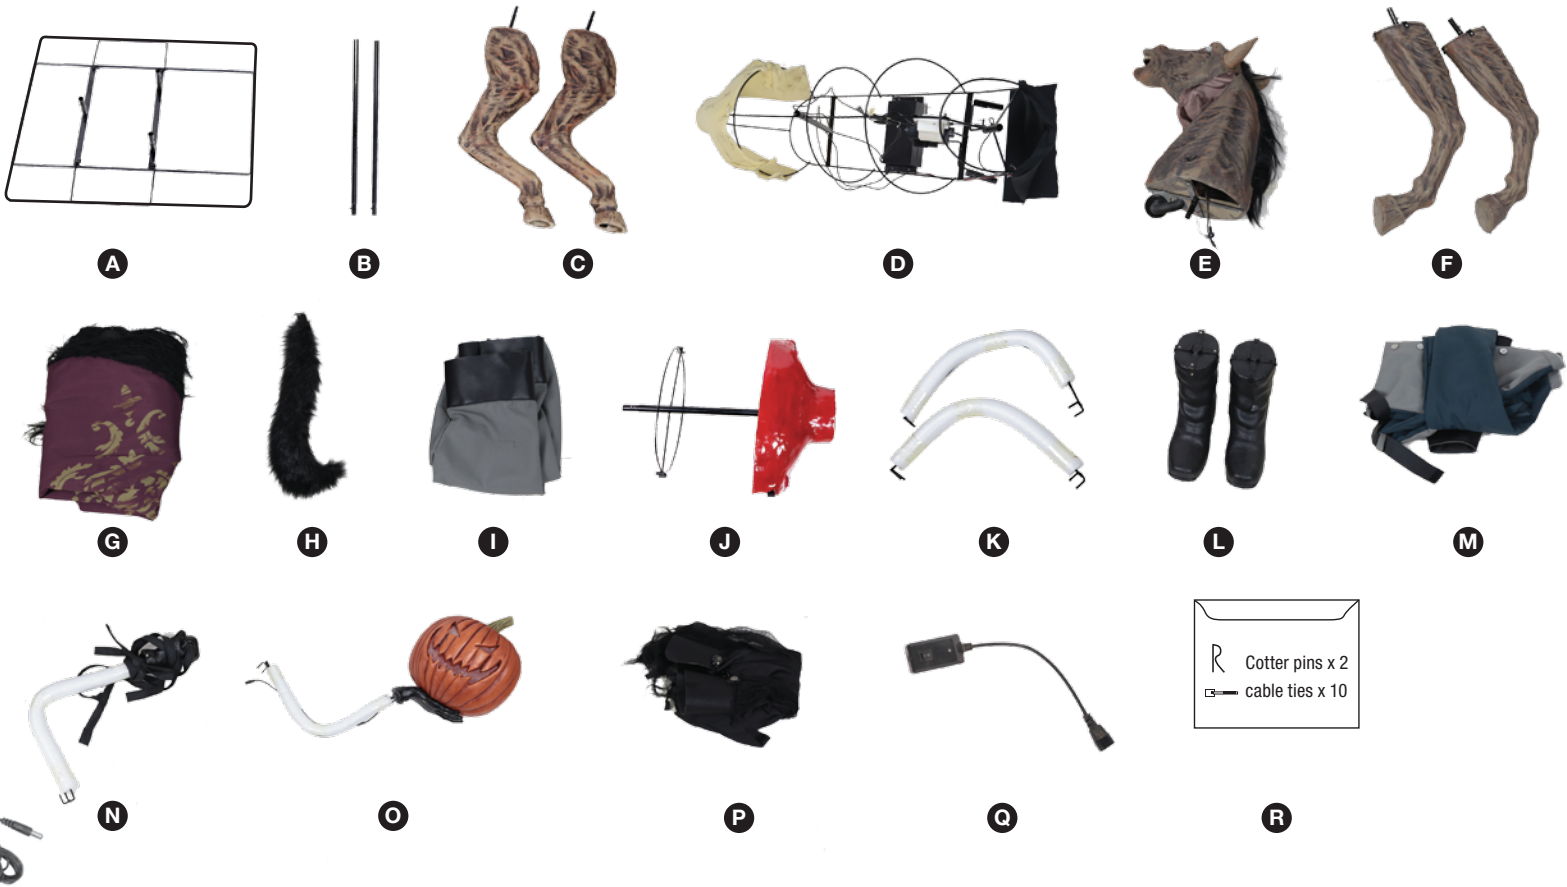

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE FROM 8:30AM TO 5:30PM PST AT 1-877-527-0313.

Right and left are relevant to the character's sensor position.



1.1


1.2

Note: The 2 rear poles of the (D) Horse Torso Frame must be assembled to the (C) Back Horse Legs at the same time before connecting the (D) Horse Torso Frame to the (B) Lower Support Pole.

2.1


2.2

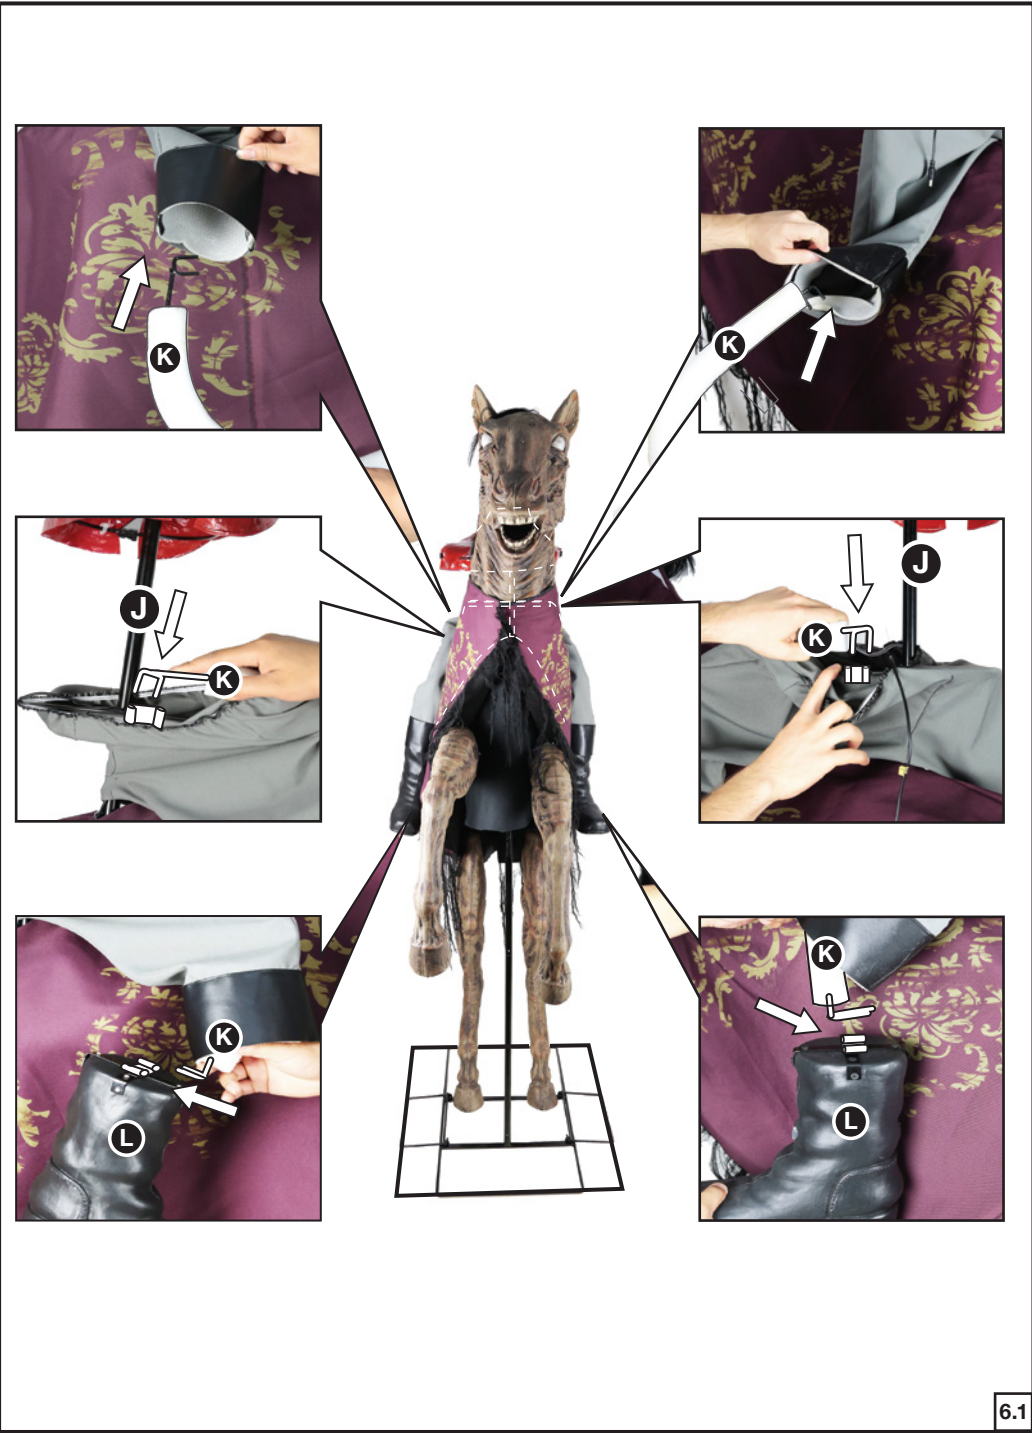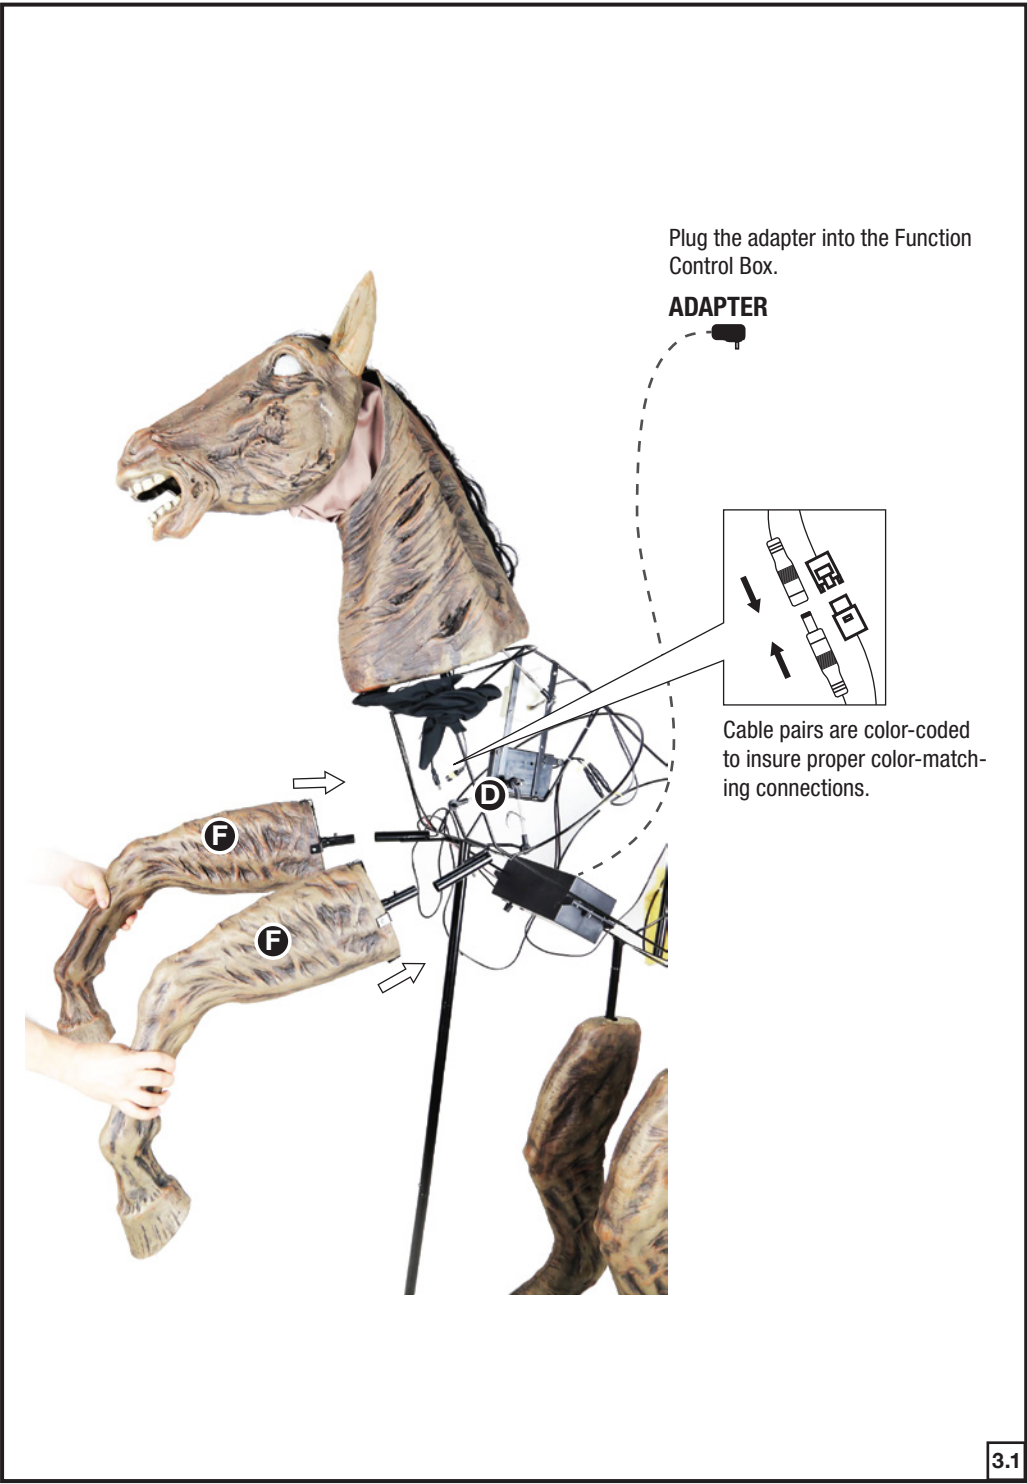


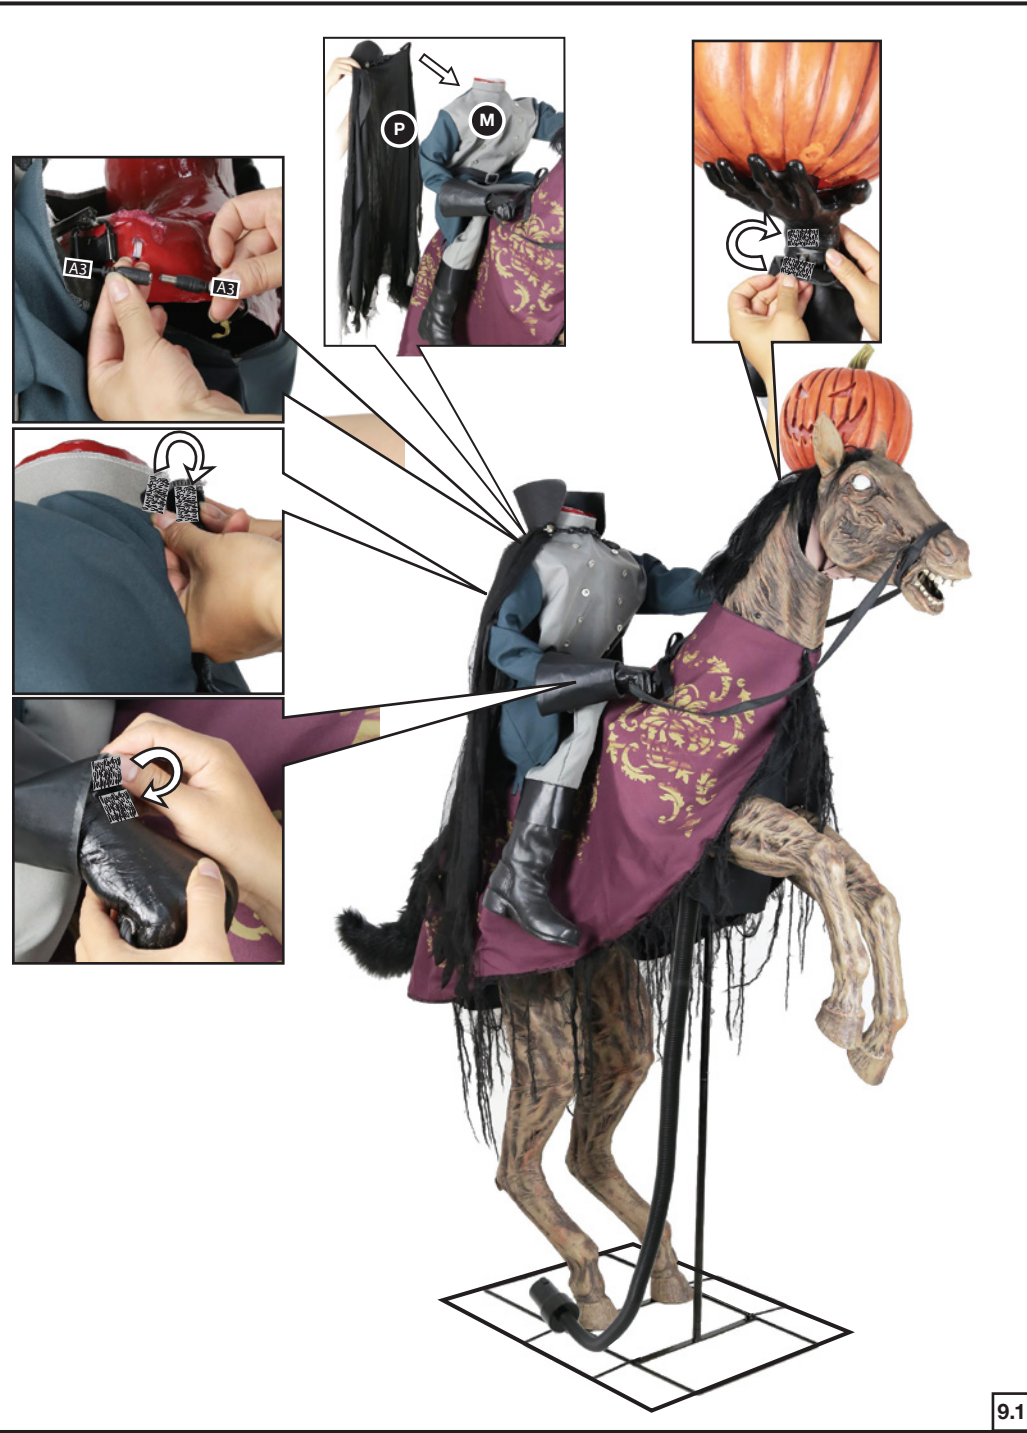




OPERATION INSTRUCTIONS:

1. Plug the AC adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (D) Horse Torso Frame, as desired.
2. Settings:
- Sensor - This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
- O (OFF/Try Me) - This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Sold Separately). The item will operate for one audio cycle with each Try Me activation.
- I (ON) - This switch mode will continually operate the lights, sound, and animation of the item.
-  - Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

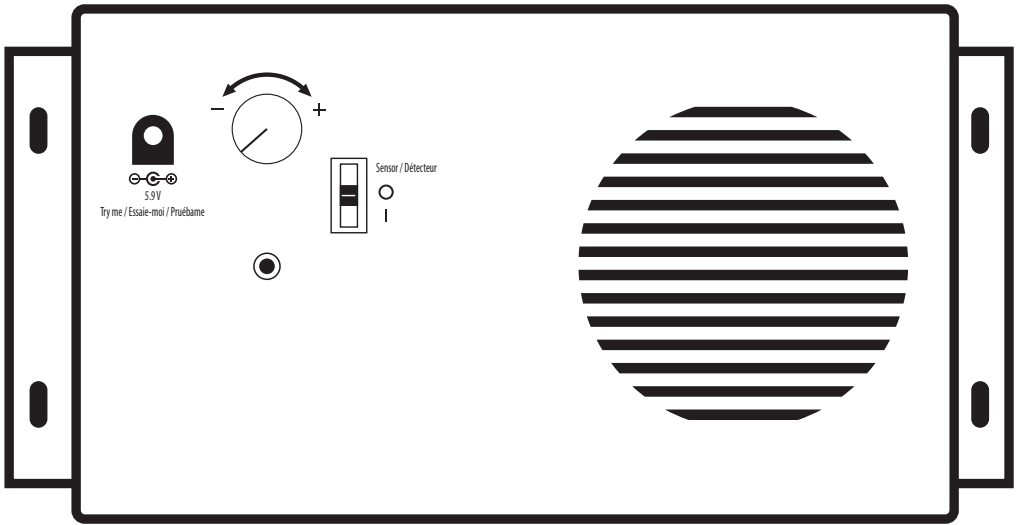

FOG MACHINE ADAPTER INSTRUCTION:

- Use the (Q) Fog Machine Adapter only with SVI 400 Watt Fog Machine(sold separately).
- Connect the 3-prong plug of the (Q) Fog Machine Adapter into the jack at the back of the Fog Machine.
- Connect the power cord of the Fog Machine into a power outlet.
- Turn the power switch of the Fog Machine to the “ON” position.
- After the Fog Machine warms up (approx. 5 minutes), the light on the (Q) Fog Machine Adapter will turn on.
- When switched “ON,” the fog machine will produce fog only when the Horse’s Legs move.
- When switched “OFF,” the fog machine will not produce fog.
- Be sure to follow all safety precautions included with the Fog Machine during operation.

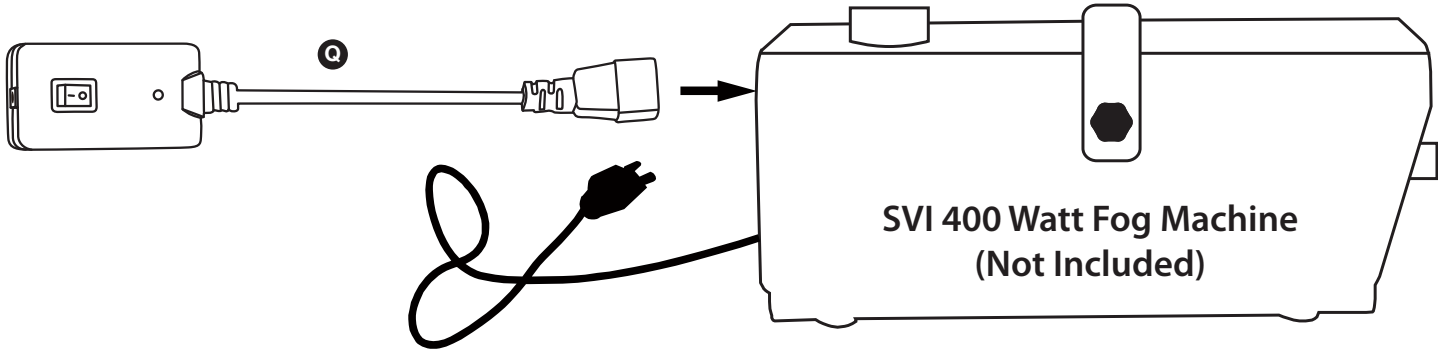

CLEANING
Residual fog liquid build up in the Fog Machine and Fog Machine Components is normal after continuous use. After 1.5 Hours of continuous use, please turn off the power and unplug the Fog Machine and the Headless Horseman allowing a few minutes to cool. First, disconnect the Fog Hose from the Fog Machine and from the Horseman and empty any excessive fog fluid trapped inside. After all residual fog liquid is removed from all fog machine components, re-assemble the components according to the original instructions and continue operation. For the 400W Fog Machine (Sold Separately), refer to its Instructions Manual for Operation, Cleaning, and Storage.

IMPORTANT SAFETY INSTRUCTIONS
Read all instructions carefully before using the Fog Machine Adapter.
Open the package and check for obvious damage during shipping. If found, discontinue use and contact the distributor.

WARNING:
To avoid electric shock, do not open.
Do not expose to rain or moisture.
For indoor use only.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3 (B)
Distributed by Home Depot
2455 Paces Ferry Road Atlanta, GA 30339
1-877-527-0313