


USE AND CARE GUIDE

1-LIGHT MINI PENDANT

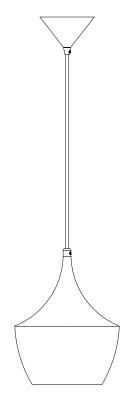

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

Table of Contents

Table of Contents2	Hardware
Safety Information2	Package (
Warranty 2	Installation
Pre-Installation3	Care and Cle
Planning Installation3	Troubleshoot
Tools Required3	

Hardware Included	3
Package Contents	4
Installation	
Care and Cleaning	7
Troubleshooting	

Safety Information

- Read all instructions before installing.
- Consult a qualified electrician for installation of this fixture.
- If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-800-986-3460 or visit www.homedepot.com/homedecorators
- Please reference your SKU 1001599711 or UPC 773546256025.
- Save these instructions for future reference.



DANGER: Risk of electrical shock. Disconnect power before installation



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that have occurred during shipping. If there is a defect in the wire, do not continue the installation process. Please call our Customer Service Team at 1-800-986-3460.

Warranty

LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alteration, neglect, or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact Customer Care at 1-800-986-3460 or visit www.homedepot.com/homedecorators.

Pre-Installation

PLANNING INSTALLATION

Read all instructions before assembly and installation. To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping. Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED



Safety goggles



Phillips screwdriver



Flathead screwdriver



Wire strippers



Wire cutters



HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.














Part	Description	Quantity
AA	Wire nut	3
BB	Single crossbar	1
CC	Outlet box screw	2
DD	Ground screw	1
EE	Hex nut	1
FF	Washer	1

Pre-Installation (continued)


PACKAGE CONTENTS

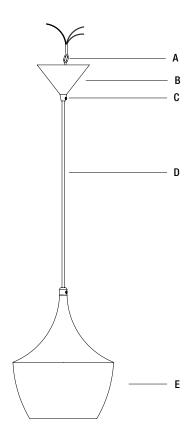

Part	Description	Quantity
Α	Strain relief	1
В	Canopy	1
С	Set Screw	2
D	Cable	1
E	Lampshade	1


Adjusting the cable length

 Loosen the set screw (C) and re-locate the strain relief (A) to adjust the length of the cable (D).

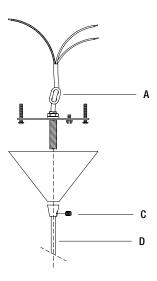

2 Installing the single crossbar

  Attach the single crossbar (BB) to the junction box (not included) with the two outlet box screws (CC) provided.





3 Making the electrical connections and installing the canopy



NOTE: Always use wire nuts (AA) or marrettes (included) to connect wires and push all excess wires and connections back into the junction box.

- Connect the ground wire from the branch circuit to the green ground screw (DD) on the single crossbar (BB).
- Connect the fixture wires as this diagram shows:
- Push the canopy (B) to cover the junction box and secure it by the set screw (C).

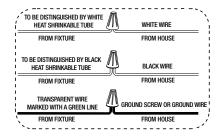


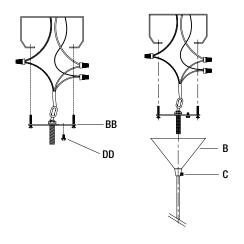

Installation (continued)

Installing the bulbs

□ Install 60W max. A19 bulbs (not included) into the socket of the lampshade (E).

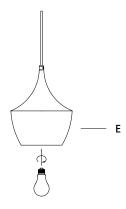

Care and Cleaning

 Clean the light fixture carefully with a soft, dry cloth. Do not use any cleaner with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
	□ The bulb is burned out.	□ Replace the light bulb.
□ The bulb will not light.	□ The power is off.	☐ Ensure that the power supply is turned on.
	□ The circuit breaker is off.	☐ Ensure that the circuit breaker is set to the ON position.
☐ The fuse blows or the circuit breaker trips when the light is turned on.	□ There are too many items on one circuit.	□ Unplug the other items on the circuit. □ Contact a qualified electrician or call the Customer Service Team at 1-800-986-3460.



Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.