

SE-0101C DOOR AND WINDOW DEFENDER W/CHIME

Ultra-slim magnetic/vibration alarm and chime

PACKAGE INCLUDES:

- Door and Window Defender w/Chime...1PC
- Magnetic sensor switch...1PC
- AG13 (LR44) button cells...3PCS

INSTALLATION:

- Peel and stick the tape on the back of the Door and Window Defender w/ Chime and attach it on any door/window frame.
- Affix the magnetic sensor switch close to the Door and Window Defender w/ Chime, keeping the three-line marker aligned with the ► on the product (see drawing I).
- For best performance, please keep the distance between the Door and Window Defender w/ Chime and magnetic sensor switch no wider than 0.5 inches.

BATTERY INSTALLATION/REPLACEMENT:

- Slide down the battery cover in the lower part of the front panel.
- Follow the polarity instructions (see drawing II), and install 3 fresh AG13 (LR44) button cells (included).
- Gently slide the battery cover back up.

OPERATION:

- Make sure the magnetic sensor switch is properly affixed.
- Slide the switch to "Chime" if you want to use it as an indicator that someone has entered or left through the door.
- Slide the switch to "Alarm" if you want to use it as a security device/alarm.
- After 5 seconds of LED flashing, a short beep will sound to indicate the Door and Window Defender w/ Chime is ARMED.
- An immediate alarm sound will go off continuously for 30 seconds once the door or window is opened or upon detecting vibration or shaking if in "Alarm" mode.
- The Chime will sound twice when the door/window is opened when in "Chime" mode.
- The alarm will return to the ARMED mode after the alarm has gone off for 30 seconds or the chime has sounded twice.
- You can stop the alarm or chime at any time by sliding the switch to the OFF position.
- If the LED stays ON when the Door and Window Defender w/ Chime is ARMED, this indicates that battery power is low. Please replace the batteries promptly.

NOTES:

- **To ensure proper performance, check the battery power periodically.**
- **Not certified for use as a pool alarm.**
- The unit is not considered to be waterproof, so please do not expose the unit to rain.
- It is suggested that the unit be mounted at a height of 5 feet or more to keep away from children.
- Do Not Mix Old and New Batteries.
- Do Not Mix Alkaline, Standard, or Rechargeable Batteries.

DISCLAIMER:

All Doberman Security items are strenuously tested by our experienced R&D teams. Doberman, however, does not guarantee that this item will prevent all theft and/or attacks from occurring. This item is only meant to act as an alarm and alert the user of an entry opening inside your home.

LIMITED WARRANTY COVERAGE:

If your product does not work properly because of a defect in materials or workmanship, Doberman will, for the length of the period as follows, which starts with the date of original purchase ("warranty period"), replace it with a new or a refurbished product.

Product	Parts	Services
All Doberman Brand Products	Ninety (90) Days	Mail-in

During the parts warranty period, there will be no charge for Parts. You must first email acquiring a RMA number, and then mail-in your product during the warranty period. This warranty only applies to products purchased and serviced in U.S.A./CANADA

The warranty is extended only to the original purchaser of a new product, which was not sold "as is". A purchase receipt or other proof of the original purchase is required for warranty service.

For assistance in U.S.A./CANADA, please visit our Website at: <http://www.dobermanproducts.com> or, send your request by E-Mail to: sales@dobermanproducts.com

LIMITED WARRANTY LIMITS AND EXCLUSIONS:

The Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by Doberman, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, miss-adjustment of consumer controls, improper maintenance, power line surge, lighting damage, modification, rental use of the product, serviced by anyone other than a factory service center or other unauthorized service, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". DOBERMAN IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, LOSS OF GOODWILL, PROFITS OR REVENUE, LOSS OF USE OF THIS PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF SUBSTITUTE EQUIPMENT, DOWNTIME COSTS, OR CLAIMS OF ANY PARTY DEALING WITH BUYER FOR SUCH DAMAGES.

(As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the service provider. The items listed are not exclusive, but are for illustration only.)

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.


Some states and/or provinces do not allow the exclusions or limitations of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have others rights which vary from state to state and from province to province. If a problem with this product develops during or after the warranty period, you may contact your dealer or service center. If the problem is not handled to your satisfaction, then write to Doberman's Customer Services Department

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.



Drawing I

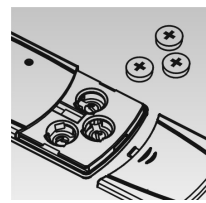

Drawing II

©2009, Doberman Security Products, Inc.

3002 Dow Avenue, Suite #408

Tustin, CA 92780 USA

Email: customerservice@dobermanproducts.com

Internet: www.dobermanproducts.com

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SE-0101C DOOR AND WINDOW DEFENDER W/CHIME

Ultra-delgada alarma de vibracion/magnetico con carillón

PAQUETE CONTIENE:

- Door and Window Defender W/Chime...1 pieza
- Interruptor magnético del sensor...1 pieza
- Baterías celulares AG13 (LR44)...3 piezas

INSTALACIÓN:

- Pele y pegue la cinta colocada atrás de la alarma y coloquela en el marco de cualquier puerta o ventana.
- Pegue el interruptor magnético del sensor cerca de la alarma, dejando la marca de tres líneas alineado con el símbolo ▶ marcado en el producto. (vea dibujo I)
- Para el mejor resultado deje la distancia entre la alarma y el interruptor magnético del sensor no mas de 0.5 pulgadas.

INSTALACIÓN O RÉPLICA DE BATERÍAS:

- Desliza abajo la cubierta de batería localizado abajo en frente del panel.
- Siga las instrucciones de polaridad (vea dibujo II) instale tres baterías AG13 (LR44) celulares nuevas (incluidas).
- Suavemente cierre la cubierta.

OPERACIÓN:

- Asegúrese que el interruptor magnético del sensor este correctamente localizado.
- Deslizar el interruptor a la posición "Chime" si quiere usarlo como indicador que alguien ha entrado o salido por la puerta.
- Deslizar el interruptor a la posición "Alarm" si quiere usarlo como alarma.
- Coloque el interruptor en "On".
- Después de 5 segundos del alumbramiento del LED, recibira un sonido corto indicando que la "Door and Window Defender" esta activada.
- El carillon suena dos veces cuando la puerta o ventana se abre cuando esta la posición de "Chime".
- Habra un sonido inmediato continuo durando 30 segundos al abrir la puerta o ventana o al detecta vibracion o movimiento si esta en modo "Alarm".
- La alarma se reactiva despues de los 30 segundos o el carillon ha sonado dos veces.
- Puedes desactivar la alarma o el carillon colocando el interruptor en "Off".
- Cuando la LED se mantiene alumbrada estando la "Door and Window Defender w/ Chime" activada indica que la batería esta baja. Por favor reemplace las baterías.

NOTAS:

- Unidad no es protegida contra el clima, por favor no la exponga a la lluvia.
- Asegúrese que la baterías de la unidad tenga suficiente energía para servir como guarda de seguridad.
- Para prohibir acceso a niños se recomienda colocar la unidad a 5 pies o mas de altura.

NEGACIÓN:

Todos los productos de "Doberman Security" están aprobados por nuestro equipo de investigación y desarrollo. Doberman no garantiza que este producto prevendrá intrusos. Este producto solamente es para avisar cuando puertas o ventanas estén abiertas.

GARANTÍA LIMITADA:

Si este producto no funciona correctamente por algún defecto material o de fabrica, Doberman le repone el producto con uno nuevo o restaurado, por el tiempo marcado al empezar de la fecha de compra original.

Productos	Piezas	Servicios
Todos productos Doberman	Noventa (90) días	Vía correo

Durante el tiempo de garantía en las piezas, no habrá cobro por las piezas. Tiene que requerir el numero de "RMA" por correo electrónico (email) después enví su producto durante el tiempo de garantía. Garantía aplica solamente a productos comprados o reparados en USA y Canadá. Garantía es extendida al comprador original de un nuevo producto, no producto usado. Recibo de compra original se requiere para validar la garantía.

Para asistencia en USA y Canadá por favor visite nuestro correo electrónico a: <http://www.dobermanproducts.com> o mande su pregunta a: sales@dobermanproducts.com

GARANTÍA LIMITADA EXCLUSIONES Y LIMITES:

La garantía es valida solamente en defectos materiales o de fabrica, y no cubre uso normal o daño cosméticos. La garantía no es valida sobre daños hechos en transito o si el producto no es proveído por Doberman, o fallos resultados por accidentes, abuso, negligencia, mal aplicación, alteración, fallos en instalación, impropio mantenimiento, daño de electricidad, modificación, rento de producto, servicio por otra factoría o servicios sin autorización de Doberman, o daño por acto de Dios.

NO HAY GARANTÍA EXPRESA EXCEPTO LAS QUE ESTÁN MENCIONADAS EN GARANTÍA LIMITADA. DOBERMAN NO ES RESPONSABLE POR DAÑOS INCIDENTAL O CONSECUENTE RESULTANDO POR EL USO DE ESTE PRODUCTO O POR VIOLACIÓN DE ESTA GARANTÍA. SIN LIMITE DE BENEFICIOS Y RECURSOS, COSTO DE REPLICAR EL PRODUCTO, RECURSOS POR TIEMPO PERDIDO, O RECLAMOS DE OTRA PERSONA POR PARTE DEL COMPRADOR ORIGINAL.

(Ejemplo: Daños por tiempo perdido, costo de remover o reinstalar una unidad instalada, y si aplica trasladar la unidad a un centro de servicios.)

TODAS GARANTÍAS IMPLICADAS, INCLUYENDO LAS GARANTÍAS DE MERCANCÍA, ESTÁN LIMITADAS POR EL TIEMPO DE LA GARANTÍA LIMITADA.

Algunos estados y provincias no permiten las exclusiones o limitaciones de daños incidentales o consecuente, o limitaciones en el tiempo implicado de la garantía, en tal caso las exclusiones no aplican.

Esta garantía le da derechos legales especifico y otros derechos que varian de estado a estado o provincia a provincia. Si algún problema ocurre mientras o despues del tiempo limitado comuníquese con el centro de servicios. Si no estas satisfecho escriba a Doberman's Centro de Servicio al Cliente.

PIEZAS Y SERVICIOS QUE NO ESTÁN VALIDOS EN ESTA GARANTÍA LIMITADA ES SU RESPONSABILIDAD.

©2009, Doberman Security Products, Inc.

3002 Dow Avenue, Suite #408


Tustin, CA 92780 USA

Email: customerservice@dobermanproducts.com

Internet: www.dobermanproducts.com



Dibujo I

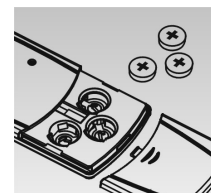

Dibujo II