

# OWNER'S MANUAL

## **⚠️ WARNINGS:**


- This fire bowl is intended for outdoor use only. **Do not** use on wooden decks.
- This fire bowl is intended for burning wood logs only. Do not burn coal, leaves, or other combustible materials in the bowl.
- Not for use by children. Keep children and pets away from this fire bowl.
- When in use, the fire bowl will be hot. Use with caution. Do not touch the hot fire bowl with bare hands.
- Never leave the burning fire bowl unattended, and always extinguish the fire completely before leaving the fire bowl.
- Do not use near flammable or combustible objects or materials.
- When the fire bowl is in use, the handle on the mesh screen can reach extremely high temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when using the handle.
- DO NOT use this fire bowl as a cooking appliance. This fire bowl is not designed for grilling food.
- Check local fire regulations and municipal by-laws for information regarding the safe use of this product.
- Read all safety guidelines, warnings, instructions, and operating rules carefully before assembling and using this product.
- Some parts may contain sharp edges—especially as noted in the manual. Wear protective gloves if necessary.

## PARTS LIST

No.	PARTS	Qty
A	Lift Handle	1
B	Screen	1
C	Grill	1
D	Fire Bowl	1
E	Leg	4
F	Connection Ring	1
G	Fire Poker	1

## HARDWARE LIST

No.	Hardware	Qty
H	M6*12 Bolt	12
I	M6 Nut	1

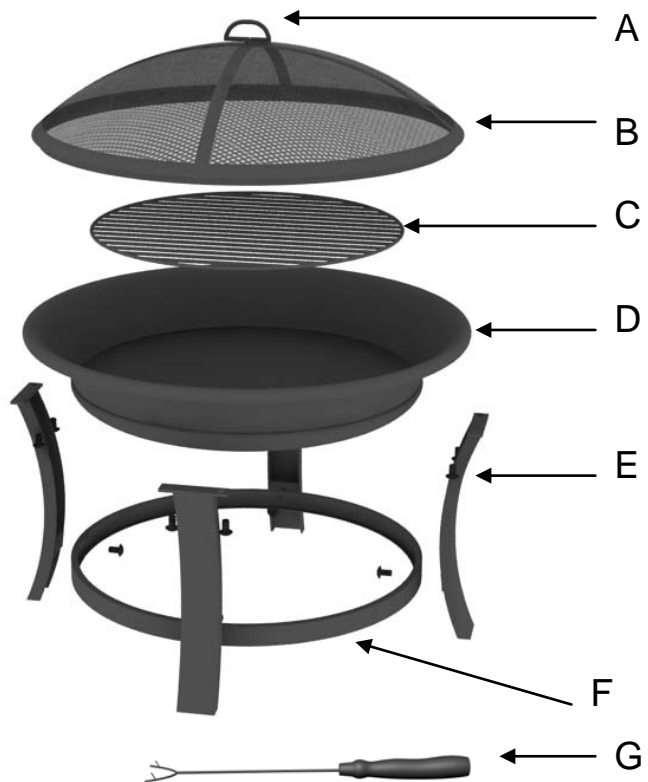


Note: You will need a screwdriver to complete the assembly.

**Step 1:** Attach Lift Handle (A) to Screen (B); tighten with Nut M6 (J);



**Step 2:** Attach Leg (E) to Fire Bowl (D) using Bolts (H). Do not fully tighten the bolts.

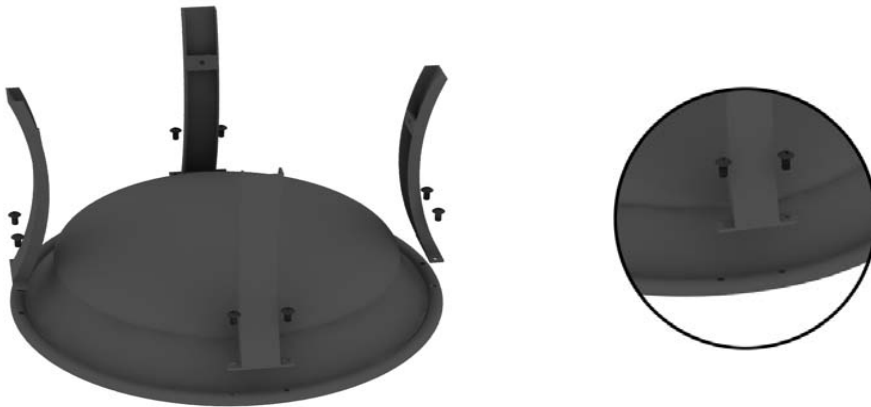

**Step 3:** Connect Connection Ring (F) to Leg (E) using Bolts (H). Fully tighten all bolts.



**Step 4:** Place C and B on the assembled frame. The fire bowl is now ready for use.

