



Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

- b) This product is for indoor use only. The electrical rating 0.6 A 120 V 60 Hz.
- c) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- d) This seasonal use product is not intended for permanent installation or use.
- e) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- f) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- g) Do not let lamps rest on the supply cord or on any wire.
- h) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- i) This is an electric product – not a toy! To avoid risk of fire, burns personal injury and electric shock it should not be played with or placed where small children can reach it.
- j) Do not use this product for other than its intended use.
- k) Do not hang ornaments or other objects from cord, wire, or light string.
- l) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- m) Do not cover the product with cloth, paper or any material not part of the product when in use.
- n) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the User Serving instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- o) Read and follow all instructions that are on the product or provided with the product.

p) **SAVE THESE INSTRUCTIONS.**

 
Pre-Assembly

Package Contents

Part	Description	Quantity
A	Tree top	1
B	Upper middle section	1
C	Lower middle section	1
D	Tree bottom	1
E	Tree stand	1
F	Power cord	1
G	Remote control	1

7.5' Elegant Natural Fir LED Pre-Lit Tree with Timer

SKU# 1003144370

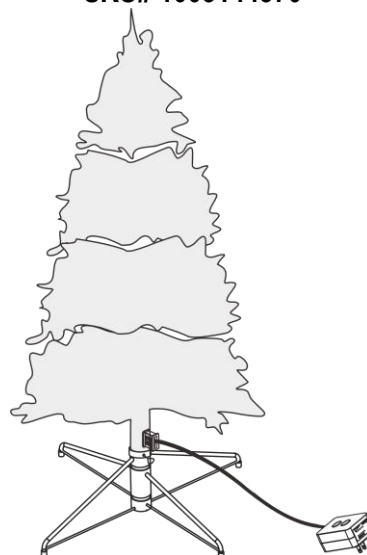

Assembly

Assembling the tree stand

- Step 1. Choose a location near a wall outlet.
- Step 2. Open the stand to a 90 degree angle until the hole lines up with the hole on the tube.
- Step 3. Screw an eye bolt into the hole.



CAUTION! – ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ASSEMBLING OR DISASSEMBLING.

Assembling the tree

 
Please remove protective covers from the base of the pole for each tree section before assembling.

- Step 1. Insert tree bottom (D) into the tree stand and tighten the screw. (See Fig. 1)
- Step 2. Insert lower middle section (C) into the tree bottom (D). (See Fig. 2)
- Step 3. Insert upper middle section (B) into the lower middle section (C). (See Fig. 3)
- Step 4. Insert tree top (A) into the upper middle section (B). (See Fig. 4)

Warning: There is a tree top connector on the tree top (A). Do not overload. Connect other lighting strings or tree toppers end-to-end up to a maximum of 216 Watts (1.8 Amps). Do not interconnect low-voltage products.

- Step 5. Insert the provided power cord into the connector on the tree bottom (D) in right direction properly and tightly (always match the protuberance of the end connector of power cord to the concave of the connector found on the tree bottom (D) according to the magnified drawing on fig. 5.)
- Step 6. Allow branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges. (See Fig. 6)
- Step 7. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem. Repeat pattern for each branch. (See Fig. 7)
- Step 8. Plug the power cord into a proper outlet. This tree comes with a control box and a remote control. You can change the lighting patterns of the tree by using control box or remote control.

Please see **Instructions of control box and remote control** as below.

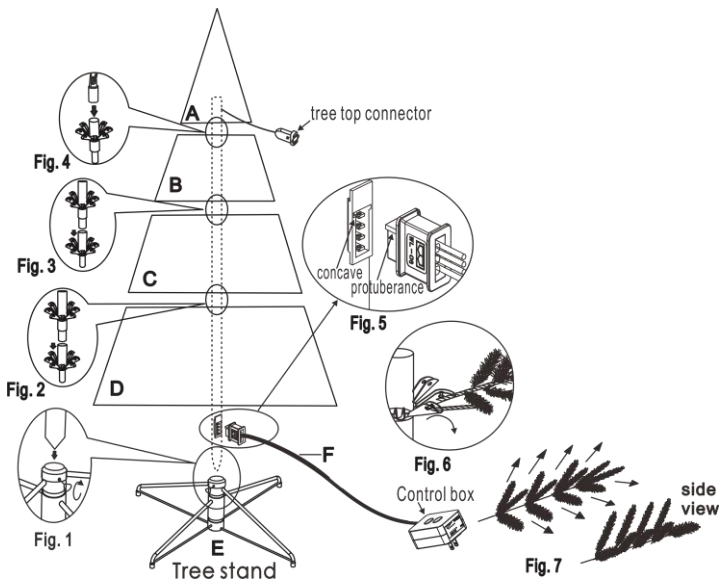

Operation

 
Turning on the tree

Step 1. Connect each tree section well and plug the power cord into a wall outlet.

Instruction of control box and remote control

Instruction of control box

1. Press the ON/OFF Timer button on control box more than 1 second to turn on and off timer function.
2. Press the ON/OFF Timer button on control box for more than 2 seconds to select below timer hours:
 - i. Indicator lights of timer on control box turn on red:
The tree lights will automatically run through a 2-hours ON, 22-hours OFF cycle.
 - ii. Indicator lights of timer on control box turn on green:
The tree lights will automatically run through a 4-hours ON, 20-hours OFF cycle.
 - iii. Indicator lights of timer on control box turn on blue:
The tree lights will automatically run through a 6-hours ON, 18-hours OFF cycle.
 - iv. Indicator lights of timer on control box turn on yellow:
The tree lights will automatically run through an 8-hours ON, 16-hours OFF cycle.

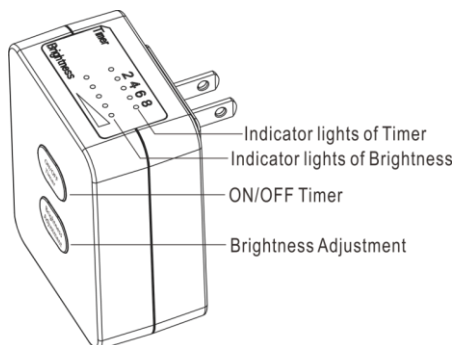

No memory mode on timer whether the tree or the timer is re-started.

 
3. Press the Brightness Adjustment button more than 1 second to select the brightness of tree lights as indicator lights of brightness indicate.

There is memory mode on brightness adjustment.

Instruction of remote control

Please note this tree has a remote control.

Please pull out the insulation tape from the remote control, before starting to use it.

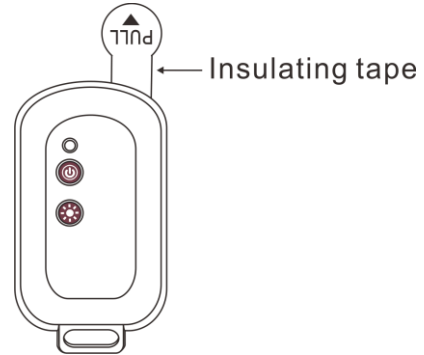


1. The first button is for the on/off power switch for the lights.
2. Press the second button to select the brightness of tree lights as indicator lights of brightness indicate on the control box.

There is memory mode on brightness adjustment.

If the remote control does not work, check whether the battery of the remote control is out of power.

To replace the remote control battery:

 1. Use cross screwdriver to open the back cover of the remote control.
2. Replace with a new alkaline "A23G" (12 volt) battery into the compartment.

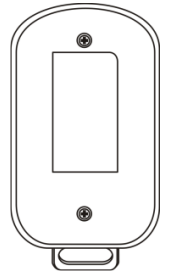


WARNING: This is not a toy and is not intended for use by children.

- (A) Do not dispose of the battery in fire as the battery may leak and explode.
- (B) Do not mix old and new batteries and do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- (C) Always purchase the correct size and grade of battery most suitable for the intended use.
- (D) Replace all batteries of a set at the same time.
- (E) Clean the battery contacts and also those of the device prior to battery installation.
- (F) Ensure the batteries are installed correctly with regard to polarity (+ and -).
- (G) Remove batteries from equipment which is not to be used for an extended period of time.
- (H) Remove used batteries promptly.
- (I) Exhausted batteries are to be removed from the product.
- (J) Use type "A23G" (12 volt) batteries.

Maintenance

Replace the fuse.

 1. Power cord fuse replacement (replaceable 3 amp, 125 volt fuse is located in spare parts bag):
2. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
3. Open fuse cover. Slide open the fuse access cover on back of control box.
4. Remove fuse carefully.
5. Risk of fire. Replace fuse only with 3 Amp, 125 Volt fuse (provided with product).
6. Close fuse cover. Slide closed the fuse access cover.
7. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

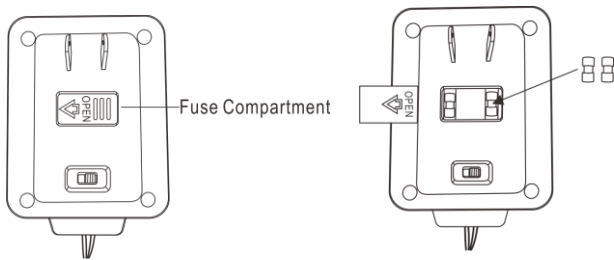

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

UL Model No. LTW36C-12V1C

CAUTION! — ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ATTEMPTING FUSE REPLACEMENT.

CAUTION: To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.

Care and Cleaning

- Step 1. Remove all ornaments and decorations.
- Step 2. Unplug the power cord from the wall outlet. And remove your power cord from tree bottom (D) and save them.
- Step 3. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Step 4. Repeat this step for the center and bottom tree sections.
- Step 5. Carefully place all tree sections into a shipping box and tape it shut.
- Step 6. Store your tree in a cool, dry place away from sunlight.

Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are connected well and that the tree is plugged into the wall outlet. Make sure the power cord is well connected to the tree bottom (D).
	Check for blown fuses at the power cord plug. Replace as needed with the replacement fuses provided.
	If you are still experiencing problems with the tree please call 1-877-527-0313 for instructions.

Warning: Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.