


PRODUCT OVERVIEW

Parts

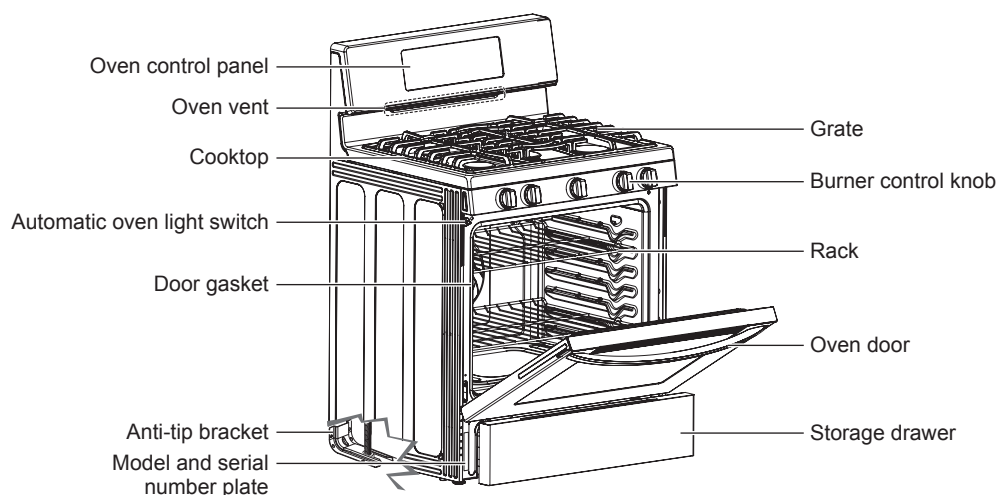

Accessories

Included Accessories



Standard rack (2ea)

 


Griddle (1ea)



Owner's manual (1ea)

Anti-tip kit




Anti-tip (1ea)



Screws (4ea)



 Anchors (4ea)



Template (1ea)

LP nozzle conversion kit



Cooktop Nozzles (5ea)

 
 


Oven Nozzles (2ea)

EasyClean® kit



Spray bottle (1ea)


Non-scratch
scouring pad (1ea)

Scraper (1ea)

Optional Accessories



 Grid



Broiler pan

NOTE

- Contact LG Customer Service at 1-800-243-0000 (1-888-542-2623 in Canada) if any accessories are missing.
- For your safety and for extended product life, only use authorized components.
- The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased, unauthorized components or parts.
- The images in this guide may be different from the actual components and accessories, which are subject to change by the manufacturer without prior notice for product improvement purposes.