


## USE AND CARE GUIDE

---

### PEDESTAL DINING TABLE

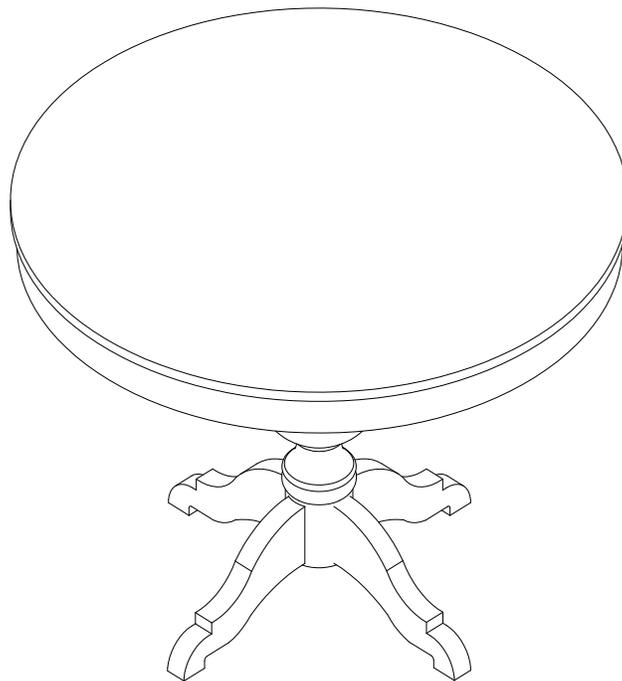

Questions, problems, missing parts?  
Before returning to the store, call Customer Service.  
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-877-527-0313**

**HOMEDEPOT.COM**

---

#### **THANK YOU**

*We appreciate the trust and confidence you have placed in StyleWell through the purchase of this Pedestal Dining Table. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!*

# Table of Contents

Table of Contents.....	2	Tools Required.....	3
Safety Information.....	2	Hardware Included.....	3
Warranty.....	2	Pre-assembly (continued).....	4
3 Year Warranty.....	2	Package Contents.....	4
What is Covered.....	2	Assembly.....	5
What is Not Covered.....	2	Maintenance.....	7
Pre-assembly.....	3	Care and Cleaning.....	7
Planning Assembly.....	3		

# Safety Information



## DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



## WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.



## CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as severe injury may result if the glass or mirror breaks.
- Never handle large pieces of glass or mirrors by yourself.
- Assembly requires two people; assembly alone may cause injury.

# Warranty

## 1 YEAR WARRANTY

### WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for three years.

### WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

# Pre-assembly

## PLANNING ASSEMBLY

This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to ensure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defects. If a part is missing or defective, please contact the store where purchased.

## TOOLS REQUIRED



Safety goggles



Level

## HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



—AA



—BB



—CC



—DD



—EE




—FF

Part	Description	Quantity
AA	Nut	8
BB	Spring Washer	8
CC	Flat Washer	8
DD	Allen Wrench	1
EE	Hexagon Wrench	1
FF	Wood Dowel	4

# Pre-assembly (continued)

## PACKAGE CONTENTS

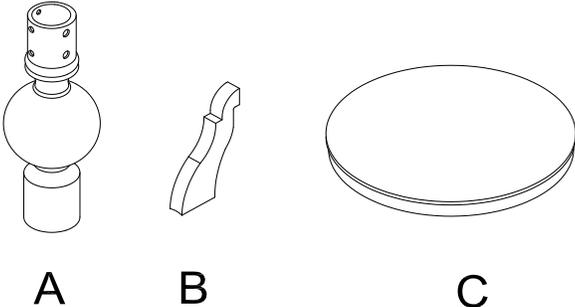


Part	Description	Quantity
A	Wood Post	1
B	Feet	4
C	Table Top	1

# Assembly


## 1 Assemble Feet with Wood Post

- Insert Wood Dowel (FF) to Feet (B).
- Attach Flat Washer (CC), Spring Washer (BB), and Nut (AA) with pre-installed screw. Use Hexagon Wrench (EE) to tighten and assemble Wood Post (A) and Feet (B) together. **Apply four times.**

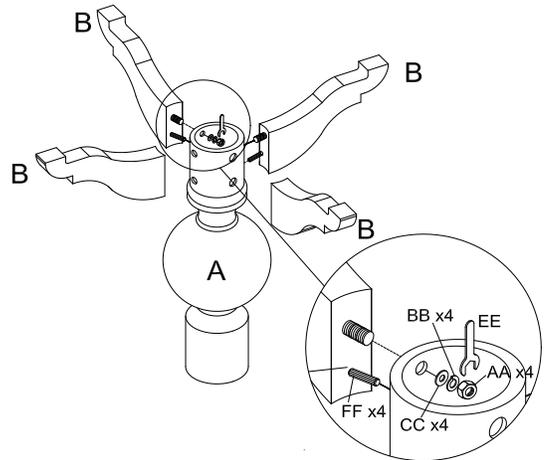


## 2 Uninstall Square Board and Pre-installed Hardware

- Use Allen Wrench (DD) to uninstall the pre-installed hardware from the center, bottom side of Table Top (C).
- **Apply four times.**
- Remove the square board from Table Top (C).
- Keep the square board and the pre-installed hardware for step 3 and step 4.

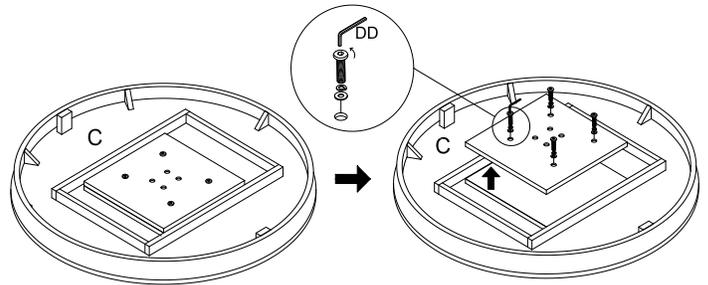

## 3 Assemble Square Board with Wood Post and Feet


- Place the square board from step 2 onto the top side of Wood Post (A).
- Attach Spring Washer (CC), Flat Washer (BB), and Nut (AA) with the pre-installed screw on Wood Post (A). Use Hexagon Wrench (EE) to tighten and assemble Wood Post (A) and square board together. **Apply four times.**

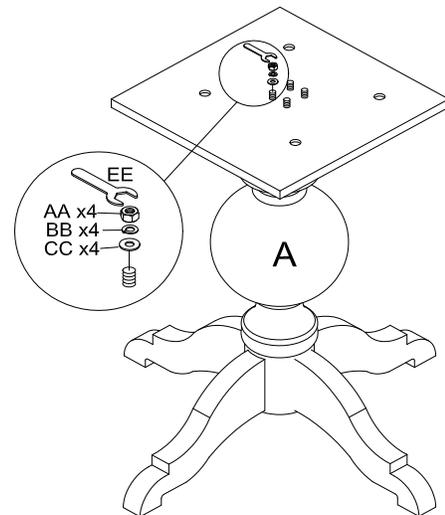

# Assembly


## 4 Assemble Table Base with Table Top

- Attach the pre-installed hardware from step 2 onto the square board. Use Allen Wrench (DD) to tighten and assemble Wood Post (A) and Table Top (C) together. **Apply four times.**

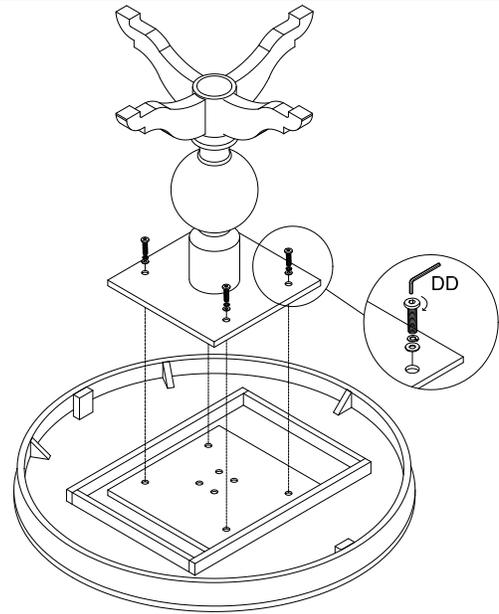

## 5 Adjust Height of Table

- Twist the Adjustable Leveler (black hardware pre-installed in both legs) to adjust the height of the table.

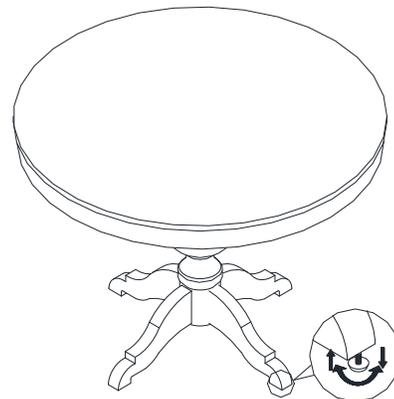

## Maintenance

---

- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

## Care and Cleaning

---

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Using solvents of any kind on your furniture may damage the finish.
- Use of furniture polishes is not necessary.
- Never use water to clean your furniture, as it may cause damage to the finish.
- Liquid spills should be removed immediately. Use a soft and clean cloth to blot the spill gently. Avoid rubbing.
- Use of furniture polishes is not necessary.
- Avoid placing furniture directly under windows.

# **StyleWell™**

Questions, problems, missing parts?  
Before returning to the store, call Customer Service  
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-877-527-0313**

**HOMEDEPOT.COM**

Retain this manual for future use.