CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE


- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

PIECE PICTURE QUANTITY DESCRIPTION Leg Frame А 2X Seat frame 1X B **Back Frame** 1X С Screw 4X D Allen bolt -) 4X Е F Allen key 1X LG5 Н 2X Allen key LG4

Part List and Hardware List

Model# PAT7030

Product Dimensions:50.39" W x 28.74" D x 28.54" H

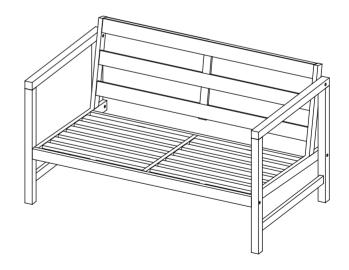

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 20 minutes.

Tools Required for Assembly (included): Allen Key

3 2 Ē \bigcirc Step 3 Step 1 Step 2 Attached Leg frame (A) to (B),(C).Using Attached Leg frame (A) to (B),(C).Using Attached seat frame (B) to (C). Using Screw (E) Screw(D) tighten by (F), and Bolt (E) Screw(D) tighten by (F), and Bolt (E) tighten by (F). tighten by (H). tighten by (H).

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Leg Frame		2X
В	Seat frame		1X
С	Back Frame		1X
D	Screw	Ø M7x70	4X
E	Allen bolt) 	4X
F	Allen key	LG5	1X
н	Allen key	LG4	2X

Part List and Hardware List

Model# PAT7030 Product Dimensions:26.8" W x 32.3" D x 34.7" H




PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 20 minutes.

Tools Required for Assembly (included): Allen Key

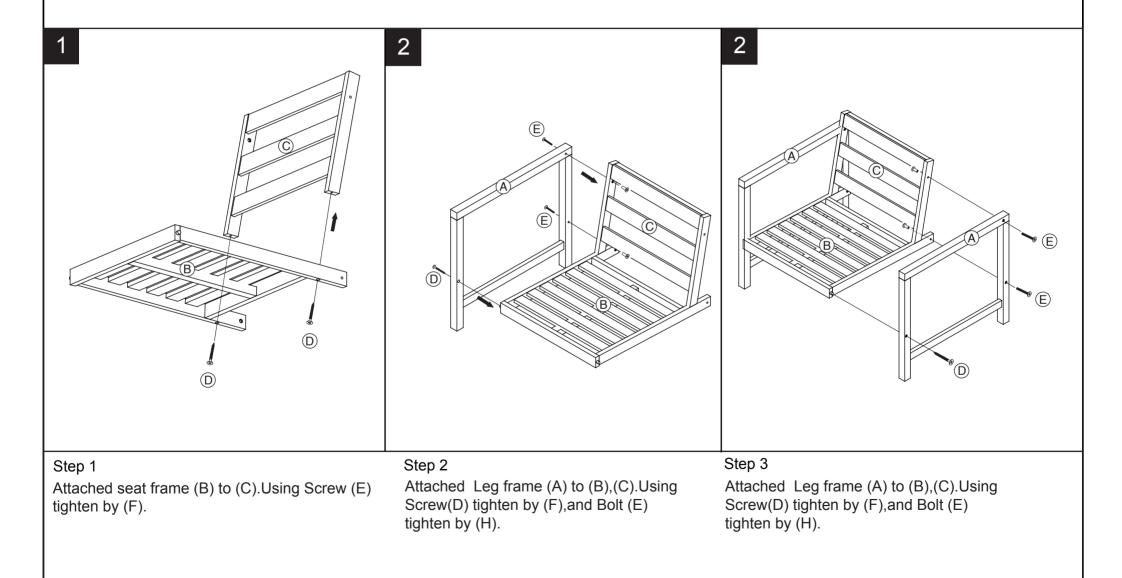

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH

NOTICE


- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top Frame table		1X
В	Leg		4X
С	Allen bolt L	၍ <u></u> M8X60	4X
D	Washer	M8.5/20X2	4X
E	Allen key	LG4	1X

Model# PAT7030

Product Dimensions:23,6" W x 39.37" D x 16.92" H

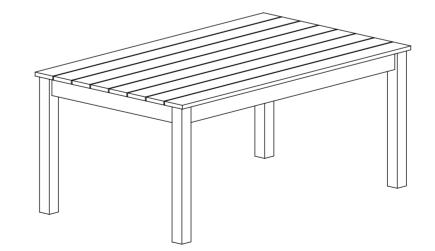


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

1

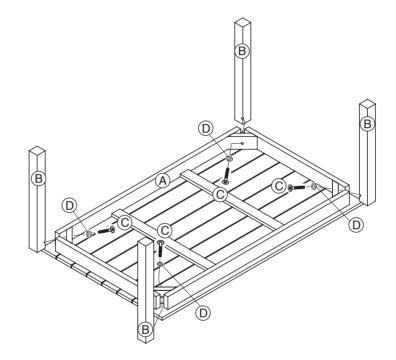

Step 1

Attach legs (B) to top frame table (A).Using allen bolts (C) and insert washer (D) tighten with allen key (E).