


PREPARATION FOR INSTALLATION

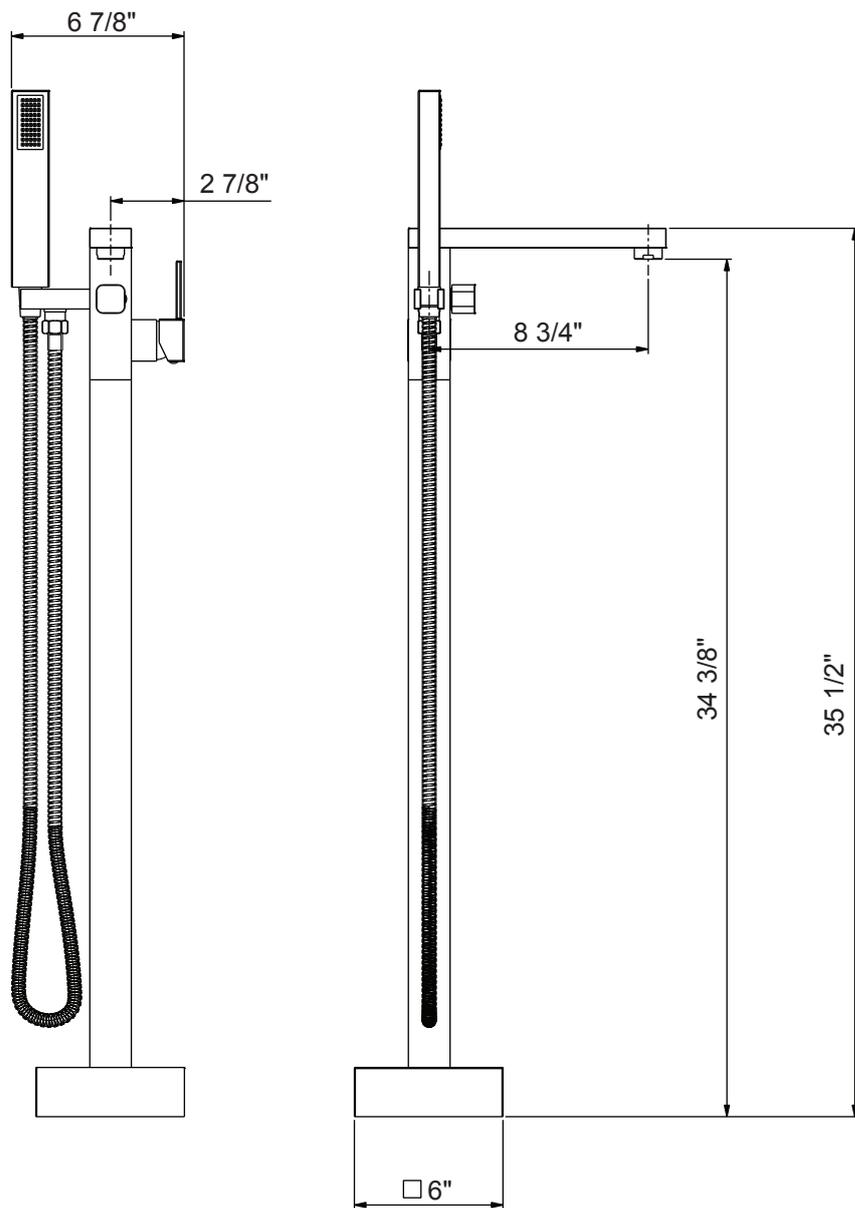

ATTENTION! Dimensions may vary by up to 3/8". It is highly recommended to pull all dimensions of actual model for installation and measuring purposes.


ATTENTION! Measurements in inches are rounded to the nearest 1/8".

TECHNICAL DATA


Max flow rate 2.5 GMP at 60 PSI

PARTS & COMPONENTS


No	Component
1	Body
2	Screw
3	Canopy
4	Screw
5	Handle
6	Cap
7	Press Hat
8	Cartridge
9	Cartridge
10	Handle
11	Spray Head
12	Washer
13	Aerator
14	Aerator House
15	Flexible Hose
16	Flexible Hose
17	Take Over
18	Cover
19	Screw
20	Triangle Plank

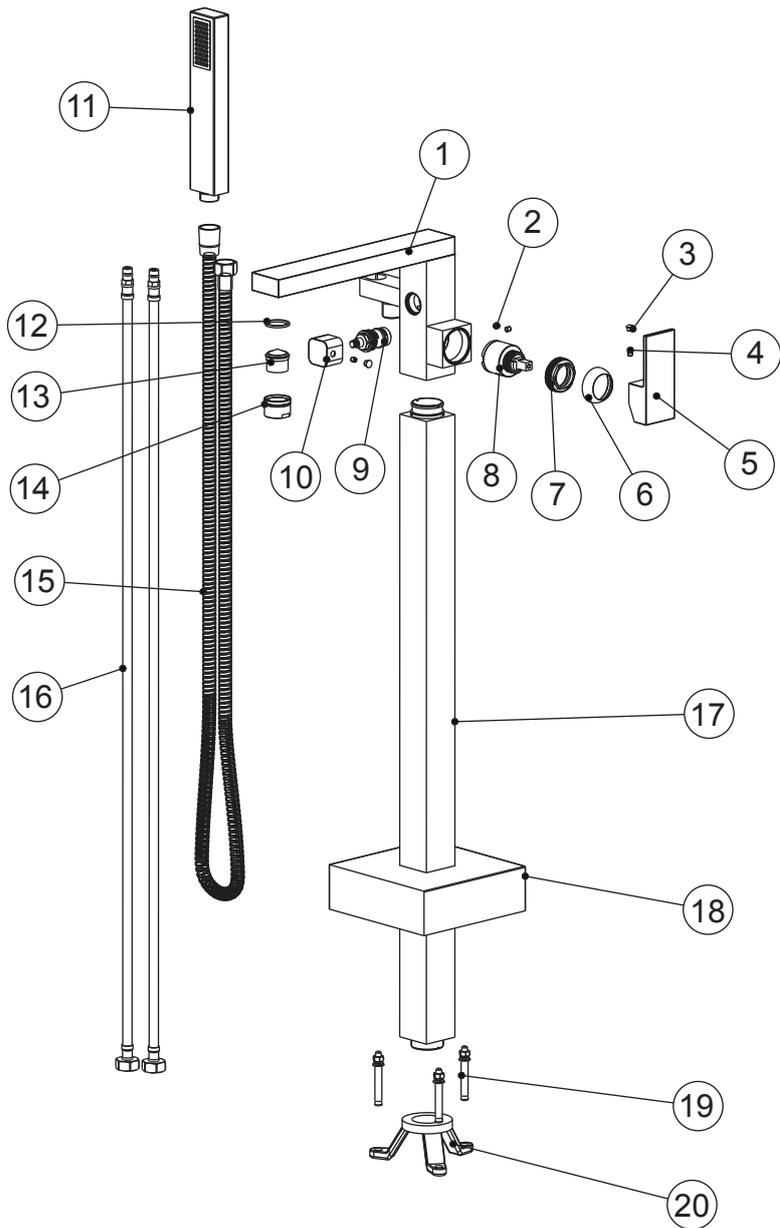

TOOLS REQUIRED FOR INSTALLATION

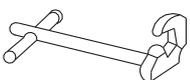


Basin Wrench

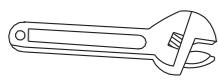

Adjustable Wrench



Teflon Tape

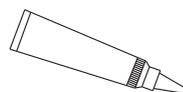


Silicone Sealant



Screwdriver


OTHER TOOLS MAY BE REQUIRED

INSTALLATION INSTRUCTIONS

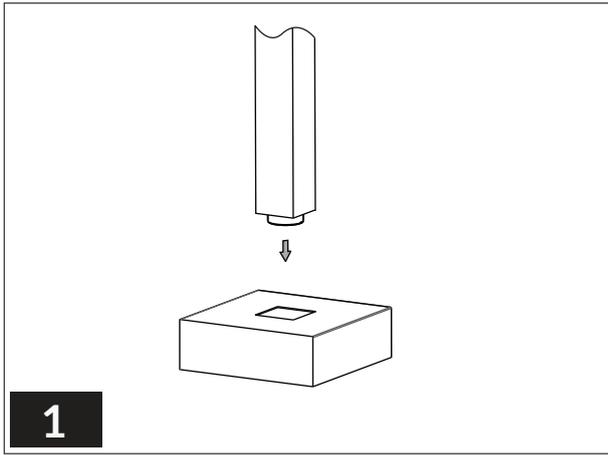


1

Put the base cover over the pipe.

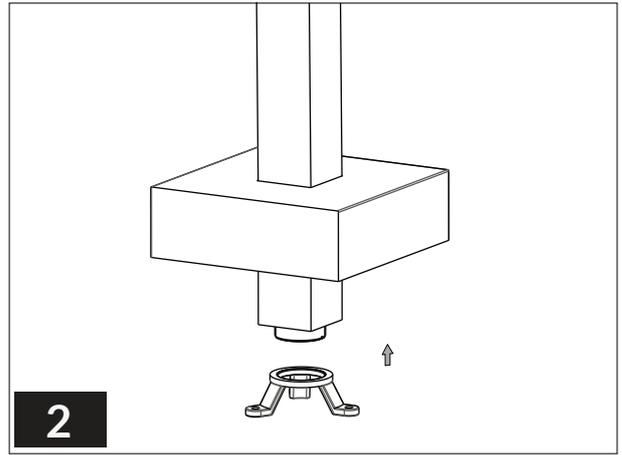


2

Screw the pipe to the base.

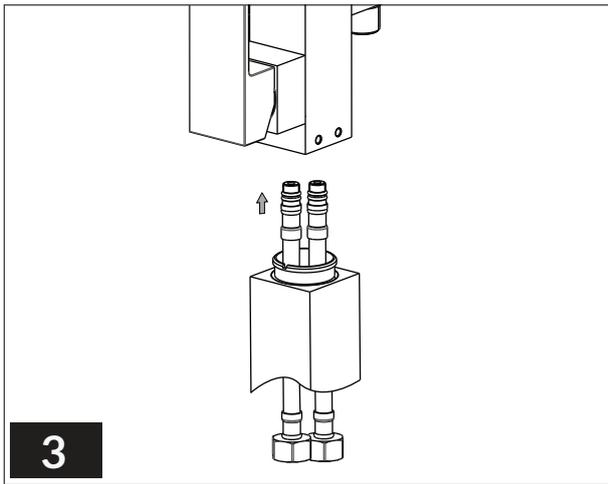


3

Install the flexible hose now and ensure the flexible hoses are hand tightened into place. (DO NOT USE SPANNER TO TIGHTEN AS IT CAN DAMAGE THE O-RING). The flexible hoses are to be fitted into the correct inlets for hot water and for cold water.

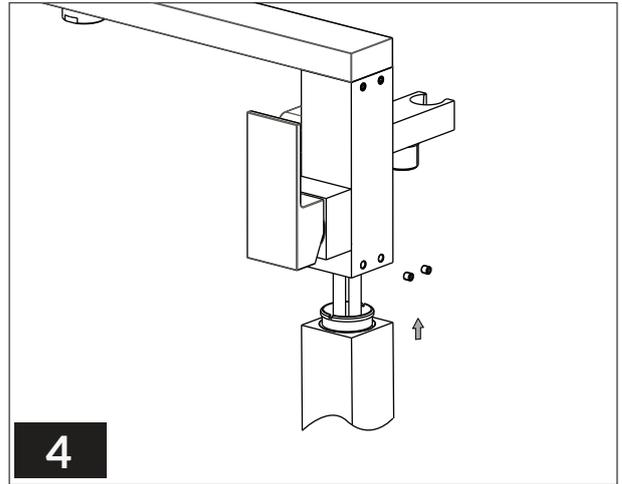


4

Fix the faucet body to the pipe.

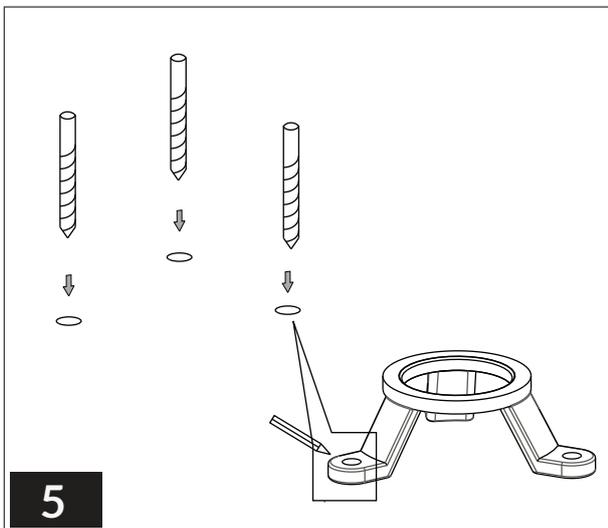


5

Fix the screw position

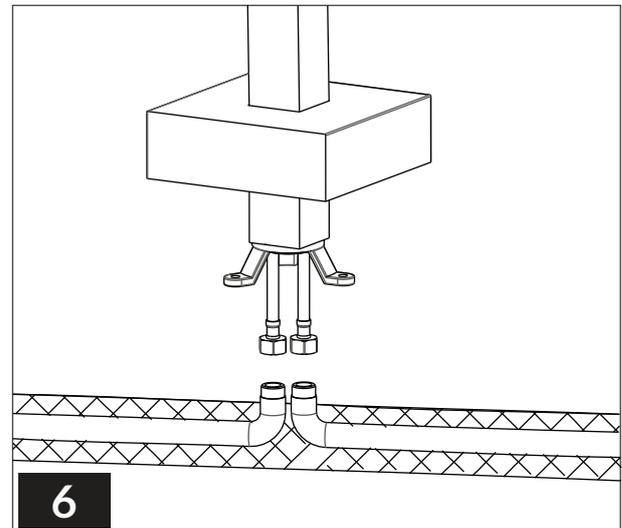


6


Connect another side of the flexible hose to the water supply pipe. Make sure they are to be fitted into the correct outlets for hot water and cold water.

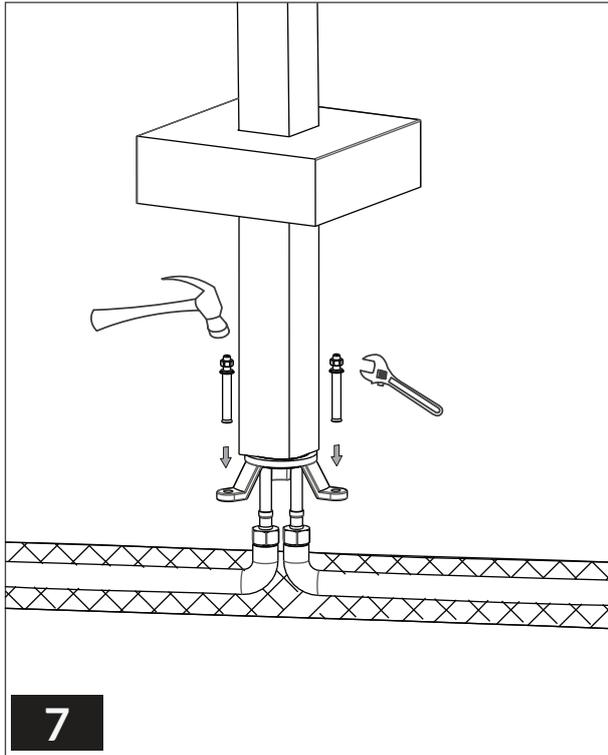


7
Use the explosion screw to fix the base on the ground, and put the base cover over the base.

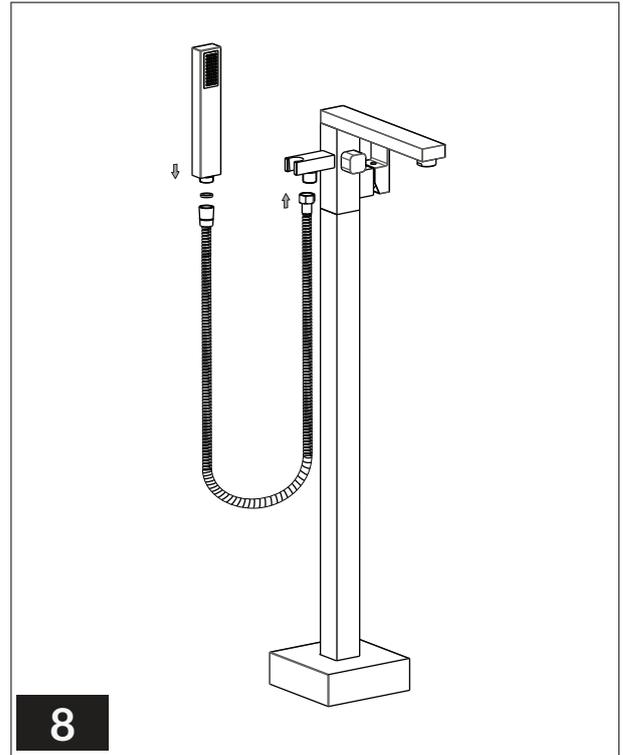

8
Connect the shower hose and hand shower.

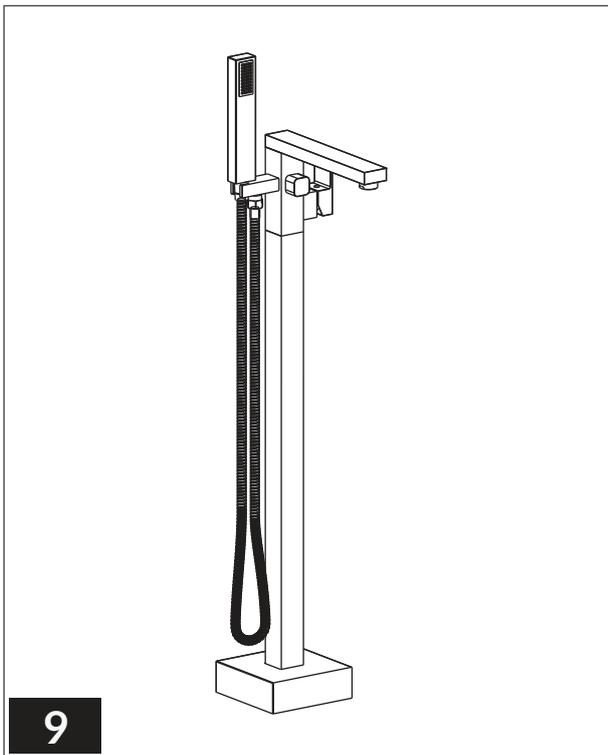

9
The installation is completed.

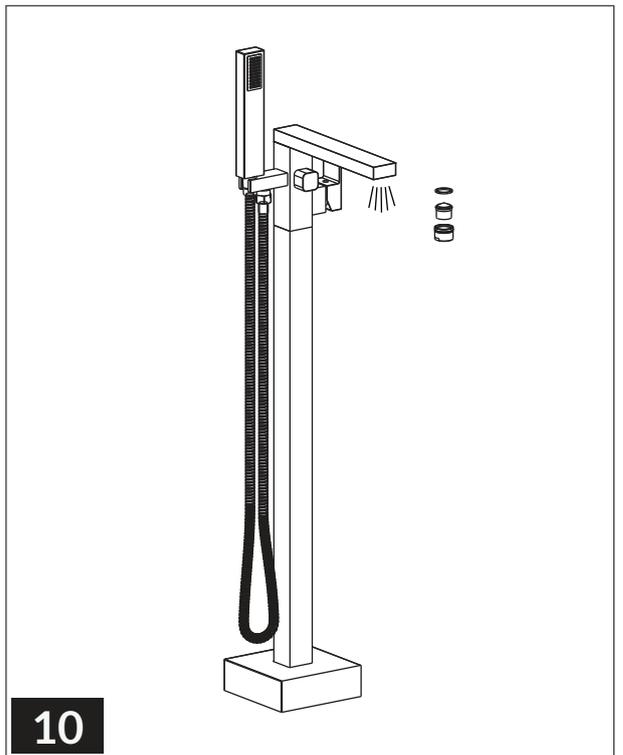

10
After installation is complete, remove Spray head and rotate handle to the close position. Turn Water Supply Valves on, and check all connections for leak. Flush faucet by running hot and cold water in full position for one minute. Re tighten the Aerator.