




Outdoor Wicker Loveseat CO7164

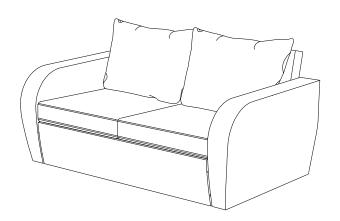

PART LIST

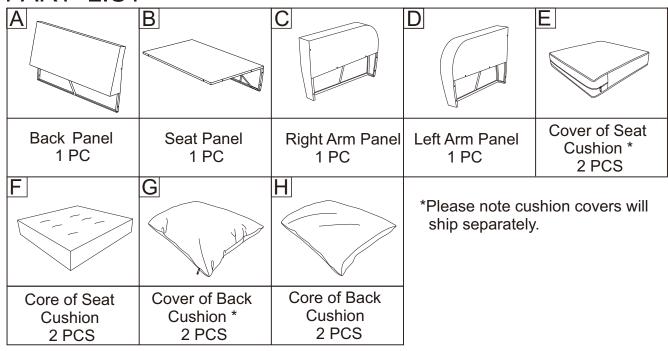

HARDWARE LIST

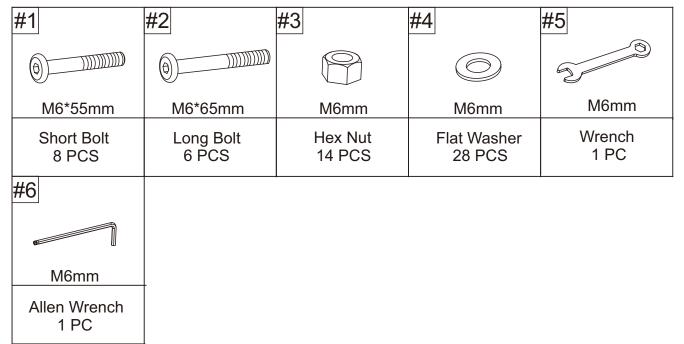


EXTRA HARDWARE LIST

#1	#2	#3	#4
	(1)		
M6*55mm	M6*65mm	M6mm	M6mm
Short Bolt 1 PC	Long Bolt 1 PC	Hex Nut 1 PC	Flat Washer 1 PC

Step 1. Lay left arm panel (part D) down on a soft flat surface, such as carpet, as shown below.


Attach back panel (part A) to left arm panel (part D) using short bolts (part #1), flat washers (part #4), hex nuts (part #3), wrench (part #5) and allen wrench (part #6).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

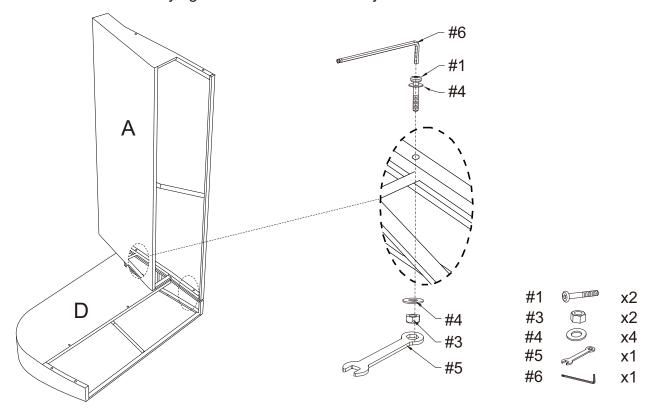


Step 2. Attach seat panel (part B) to back panel (part A) and left arm panel (part D) using short bolts (part #1), long bolts (part #2), flat washers (part #4), hex nuts (part #3), wrench (part #5) and allen wrench (part #6).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

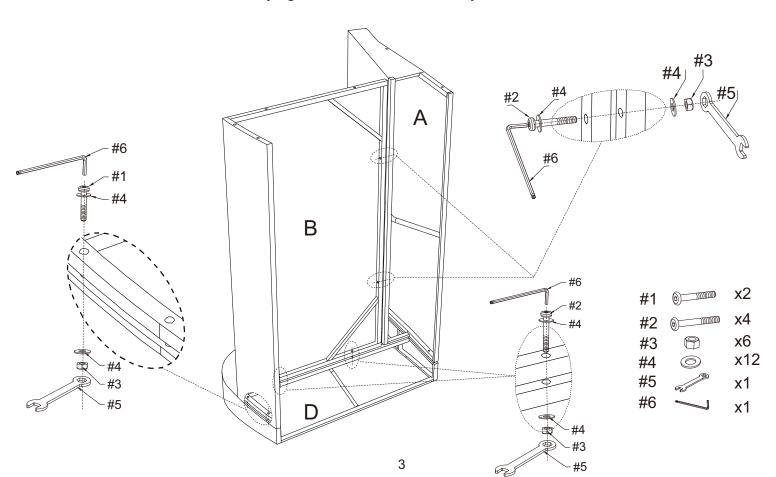

Step 3. Attach right arm panel (part C) to seat panel (part B) and back panel (part A) using short bolts (part #1), long bolts (part #2), flat washers (part #4), hex nuts (part #3), wrench (part #5) and allen wrench (part #6).

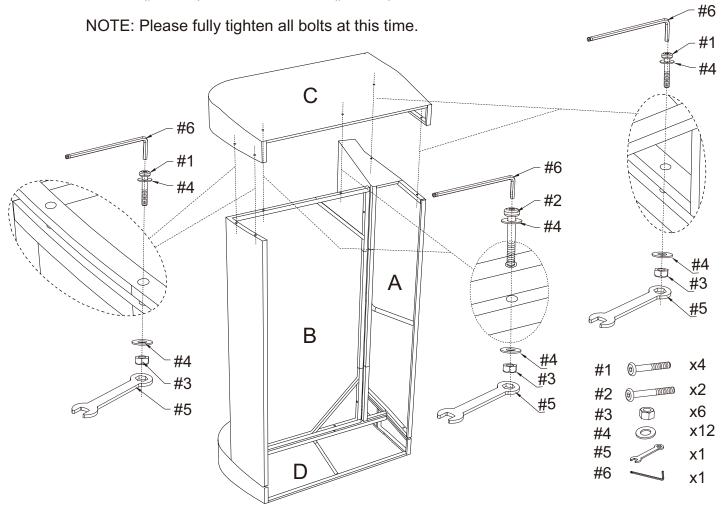

Step 4. Insert core of seat cushion (part F)) into cover of seat cushion (part E). Insert core of back cushion (part H) into cover of back cushion (part G).

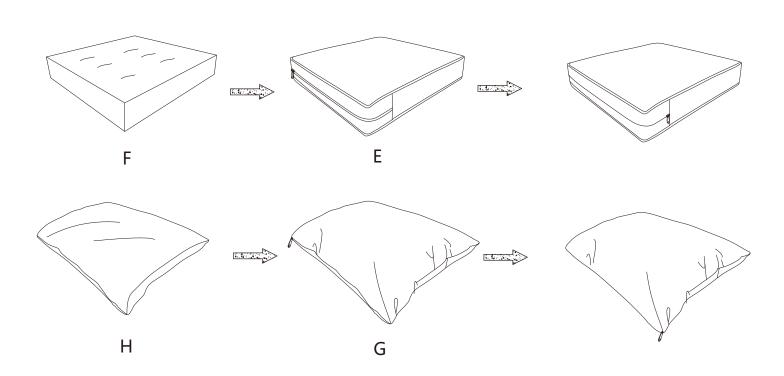

Step 5. Carefully turn the assembled loveseat upright and add cushions as shown below.

