

LIFETIME AFTER FIRE REPLACEMENT GUARANTEE

If your First Alert® Firesafe is ever damaged by a fire, BRK will replace it with a comparable model at no charge to the consumer. Freight on the replacement unit is not included in the guarantee and must be paid by the consumer.

For claims, submit your name and address, a photo of the damaged safe along with its Model Number, and a copy of the Fire Department report to BRK Consumer Affairs as proof of loss. Once the information is received, Consumer Affairs will contact you with further instructions.

LIMITED WARRANTY

BRK Brands, Inc., ("BRK") warrants that for a period of five (5) years from the date of purchase, this product will be free from defects in material and workmanship. BRK, at its sole option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. You must keep the original sales receipt. Proof of purchase is required to obtain warranty performance. BRK dealers, service centers, or retail stores selling this product do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not apply to the finish on the product. This warranty does not cover normal wear and tear of parts or damage resulting from any of the following: negligent use or misuse of the product, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than BRK or an authorized service center, improper installation, or exposure to extremes of heat or humidity. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

BRK shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. BRK is also not responsible for: costs associated with removing or installing the product; damage or loss of the contents of the product; nor for the unauthorized removal of the contents; or damages incurred during shipment.

Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above Warranty Period. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province, or jurisdiction to jurisdiction.

If you have any questions that cannot be answered by reading this manual, call Consumer Affairs at 1-800-323-9005

© 2010 BRK Brands, Inc., a Jarden Corporation company (NYSE: JAH)
3901 Liberty Street Road, Aurora, IL 60504-8122
All rights reserved.

www.FirstAlert.com

First Alert®



Model **2054F**

Model **2084F**

COMBINATION FIRE THEFT SAFE™

Read These Instructions Very Carefully!

Overview of Your Safe Page **1**

Opening & Closing Your Safe..... Page **2**

 Opening The First Time

 Your Combination

 Opening With Combination Dial

 Closing & Locking The Safe

Additional Features: Shelves..... Page **3**

Additional Features: Bolt-Down Kit Page **4**

Consumer Affairs Page **6**

 Your Safe’s Unique Identification #’s

 How To Contact Us

 Ordering Replacement Keys

 Recovering Lost Combinations

Use, Care and Maintenance Page **8**

Model Number _____

Serial Number _____

Key Number _____

Number Combination

RIGHT FOUR (4) turns stopping
on the fifth turn to: _____

LEFT TWO (2) turns stopping
on the third turn to: _____

RIGHT ONE (1) turn stopping
on the second turn to: _____

LEFT turn stopping to: _____

For Your Protection

- Do not remove the Serial Number tag from the safe.
- Store Emergency Companion Key away from (NEVER INSIDE) safe.
- Record all Safe Identification Numbers on Safe Identification Record (last page).
- Save this manual and NEVER keep it inside the safe.

Appropriate Use of Your Safe

First Alert® fire safes protect paper records and many other valuables.

Verified fire protection for:
Memory sticks, CDs & DVDs, USB Drives.

This product is NOT INTENDED to protect audio or video cassettes, floppy discs, data cartridges, film and photos or photo negatives

Testing shows that the interior temperature of the safe remains below 350°F (177°C) for 1 hour during a fire up to 1700°F (927°C) when used properly. Your safe must be closed and latched in order to properly protect the contents from fire.

Moisture Warning

We recommend that you place delicate items such as pictures or intricate jewelry into an air-tight container **before** storing them in your safe. Avoid placing your safe in areas of high humidity. For optimum performance, the safe should be opened and aired out for at least 20 minutes every two weeks.

Firearms Warning

This safe is **not** designed to store medication, items with combustible content, guns or other weapons. Please contact BRK at 800-323-9005 or shop www.FirstAlert.com for information about safes that can securely store your firearms or medication.

Pearls

Because pearls sustain heat damage at temperatures below 350° F, we advise that you **DO NOT** store pearls in this fire safe.

Safe Care and Maintenance

When properly maintained, your safe will continue to provide protection for many years. In order to ensure optimum performance of your safe, please follow these simple precautions:

Clean Hands - Do not attempt to operate combination dial if your hands have excessive dirt, debris, or liquids on them. Under normal circumstances, it is not necessary to wash your hands before using the safe.

Clean Safe – To clean the outside surface of your safe, it is recommended that you use a mild cleaner (e.g., window cleaner) to avoid scratching or discoloring the surface. Do not use abrasive cleansers.

For future reference, store this Operation and Installation Guide in a secure area away from the safe. **DO NOT DISCARD!**

WELCOME!

Your new First Alert® Fire Theft Safe™ will provide years of safe and secure protection for your valuables, important documents and other personal items. All First Alert® safes are designed and built using the highest manufacturing standards to ensure maximum user satisfaction under a variety of conditions. With proper care, your First Alert® safe will provide “Peace of Mind” for many years to come.

 
Thank you and Enjoy!

The following list outlines the items and quantities of each included with your new safe. Please carefully check the list to confirm all items have been received. If any item is missing, then please contact Consumer Affairs @ 1-800-323-9005.

Package Contents


All Models

- 1 First Alert® Firesafe
- 1 Operation & Installation Guide
- 2 Companion Entry Keys

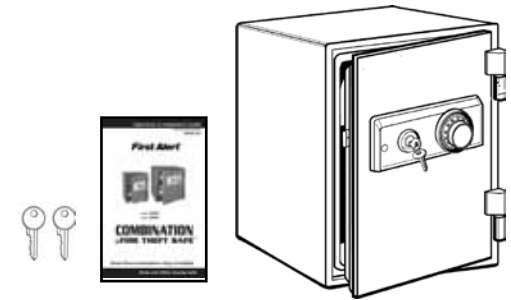

Models 2054F (only)

 - 1 Bolt-Down Kit Including:
 - 1 Mounting Template
 - 4 Break-off Bolts
 - 4 Washers
 - 1 Removable Shelf

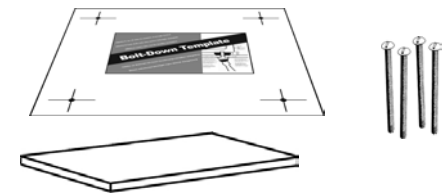

Models 2084F (only)

- 1 Adjustable Shelf
- 4 Shelf Support Clips



Important: DO NOT RETURN SAFE TO STORE

If you are missing parts, have difficulty programming your safe or have any other questions pertaining to its proper use and care, **DO NOT RETURN** your safe to the store. Please contact Consumer Affairs at 1-800-323-9005, 7:30 am – 5:00 pm Central Standard Time, Monday through Friday. To assist us in serving you, please have the model number and date of purchase available when calling.

Opening The First Time

The dial is preset to the fourth (last) number in the combination. The safe door should open when you insert the Companion Entry Key (round top), turn to the right and pull the door open. The dial may move in transit, making it necessary to dial the combination before opening the first time. We recommend trying the following combination procedure with the safe door open first.

Your Combination

The combination for your safe can be found imprinted on the inside back cover of this Operation and Installation Guide. It is a pre-set 4 number sequence that is unique to your safe and cannot be changed. It is recommended that you keep this Operation and Installation Guide in a secure place. NEVER store this Guide inside the safe.

Opening Safe with Combination Dial

1. Turn dial **RIGHT** (clockwise) three times to clear settings.
2. Start the dial on **0** (zero) to dial combination.
3. Turn dial **RIGHT**, passing first combination number **FOUR** (4) times and stop at number on fifth time around.
4. Turn dial **LEFT**, passing second combination number **TWO** (2) times and stop at number on third time around.
5. Turn dial **RIGHT**, passing third combination number **ONE** (1) time and stop at number on the second time around.
6. Turn dial **LEFT**, to the last combination number and **STOP**.
7. Insert the Entry Key into the key lock, turn to the right, and pull the door open.

Closing & Locking The Safe

1. When open, the key is turned right (the unlocked position).
2. Close the safe door and turn the key to the left.
3. Remove the key and spin the combination dial twice.

Frequent Key-Only Access

When circumstances require frequent, quick and convenient access for limited periods during the day, you may choose to keep the combination positioned on the last number and lock only the keylock. However, the safe is not fully locked until spinning the dial.

Important: REDUCED LEVEL OF SECURITY

The safe is **ONLY FULLY LOCKED** after turning key to the locked position and spinning the dial. For your security, we recommend always locking both the combination dial and key lock for the highest level of protection & security.

How to Obtain Warranty Service

If service is required, do not return the product to your retailer. In order to obtain warranty service, contact the Consumer Affairs Division at 1-800-323-9005, 7:30 am – 5:00 pm Central Standard Time, Monday through Friday. To assist us in serving you, please have the model number and date of purchase available when calling.

For Warranty Service return to:

First Alert, Inc.
Attn: Warranty Safe Returns
23610 So. Banning Blvd.
Carson, CA 90745

Please call us at 1-800-323-9005 to establish a warranty return set-up

Misplaced Combinations or Keys

If you lose or forget the combination or lose the safe key, you can obtain a copy of the combination or a replacement key from BRK Brands, Inc. You must supply the following information to assure accurate processing:

- Name / Address / Telephone.
- Safe Model Number / Serial Number.
- Key Number (located on the key and on the Emergency Override Key lock).
- Notarized statement of ownership.
- For replacement keys, indicate number of keys requested. Please ignore if recovering a lost combination.
- Method for how you would like to receive the combination or keys.

Please send all the information via fax at 630-851-7995
or mail BRK Brands, Inc., 3901 Liberty Street Road, Aurora, IL 60504-8122.

Your Safe's Unique Identification Numbers

When contacting Consumer Affairs, you should be prepared to supply some important information that specifically identifies your safe. This information is extremely important to assuring prompt and accurate customer assistance.

It is strongly recommended that you identify and record the following information in the "Safe Identification Record" form located on the inside back cover of this manual:

Model Number

Serial Number

Key Number

Locating Model and Serial Numbers

Most First Alert® safes include a small metallic silver or gray tag affixed to one of the surfaces. This tag is usually located on the front or right side of the safe. This tag contains the Serial Number, and on selected models a similar tag is attached containing the Model Number. If a Model Number tag is not attached to the safe, then it can be located on the front or side panel of the box that the safe was packaged in. Write this number down for future reference.

Key Number

The Key Number is located on the key. If you do not have the key, the number is also imprinted on the Emergency Override Key lock.

Important: DO NOT REMOVE TAGS!

In case your safe becomes inoperable or you lose your keys, these identification numbers will be needed to correct the problem. It is recommended that the number tags remain in place on the safe. If removal is necessary, then they should be attached to the inside back cover of the Operation and Installation Guide. Store in a safe and secure place for future reference.

Shelves

Removable Shelf (Model 2054F only)

To remove the shelf, simply lift it up and tilt it on a sufficient angle to provide clearance for removal.

Adjustable & Removable Shelves (Model 2084F)

These models are designed with 5 position adjustable shelves to allow greater flexibility and further accommodate your particular security storage needs.

 
To Install:

Your Shelf and Shelf Support Clips have been shipped inside your safe and wrapped for protection from damage during shipping.

1. Remove Shelf and (4) Shelf Support Clips from protective wrapping.
2. Determine the desired position of your shelf and note the corresponding Support Guide Slots (2 on each side of interior walls) that are best suited to support the shelf in that position.
3. Install the (4) Shelf Support Clips in the same position on all four support guides.
4. Install shelf into position by placing it inside the safe (tilting if necessary) at a point above the desired position.
5. Once inside, lower it into position until resting on Shelf Support Clips.

To change the position of the shelf:

Simply remove the shelf and reposition the (4) shelf support clips by sliding them up and out of the support slots and reinstalling them into the new positions. Then reinstall shelf as described above.

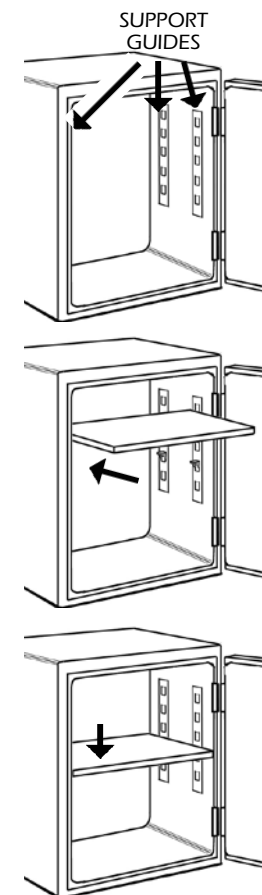

Important: REMOVING SHELF

If you remove the shelf, it is strongly recommended that you DO NOT DISCARD it. You may lay the shelf flat in the bottom of the safe to assure full flexibility in the future.

Additional Features: Bolt-Down Kit

Additional Features: Bolt-Down Kit

Model 2054F (only)

 
 
 
Model 2054F (only)

Installing Your Safe

Certain models include a Bolt-Down kit with break-off bolts and a mounting template for permanent mounting to a flat surface. Once the safe is installed using the break-off bolts, it is permanent and cannot be easily removed.

Tools Required

- 4 Break-off Bolts (Supplied)
- 4 Washers (Supplied)
- 1 Mounting Template (Supplied)
- 1 Drill
- 1 Screwdriver

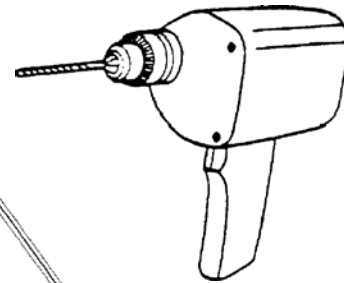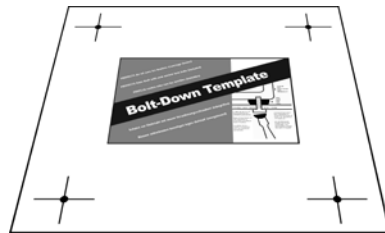

Important: SECURING TO FLOOR

Many consumers prefer to bolt their safe to the floor to increase protection from theft and resistance to tipping. If your safe was manufactured with bolt down holes pre-drilled in the floor of the safe, bolting your safe to the floor may provide additional theft deterrence.

If you have **ANY QUESTIONS** about how to accomplish this, or are uncomfortable using the tools necessary to complete this project, please check with your local retailer, home center, or independent contractor.

Installation Procedure

1. Choose a mounting location that is easily accessible from both above and below.
2. Carefully position the template on the location that you want to mount the safe.
3. Create the guide marks by pressing a sharp tool through the circles at the four corners of the template and into the mounting location.
4. Drill a hole (the diameter of the break-off bolt shaft) through each guide mark.

Important: DON'T DRILL SAFE

Do not drill into the feet, bottom or any other part of safe! Doing so will **ELIMINATE THE FIRE PROTECTION** that has been designed into your safe and invalidate all stated warranties.

5. Before attaching the safe, you should check carefully that the 4 holes you have drilled match up precisely with the holes that have been pre-drilled in the bottom of the safe.

Note: On certain models, It may be necessary to remove the rubber foot pads that are screwed into the bolt-down holes at the factory.

6. Once you have confirmed that the holes are aligned and in the location you desire, install the break-off bolts and washers from underneath the mounting location (through the furniture or shelf), and into the pre-drilled holes in the safe.
7. Turn bolts until the screw heads break off.

