



Insert the rod connector to one rod and
loosen the connector tightening screw.

Adjust connector to desired angles.

Tighten screw on the connector to lock
angle in place. Slide the other rod onto
the open end of rod connector.