


REPLACEMENT PARTS - MODEL TB4HB EC

4-CYCLE HAND HELD BLOWER

PPN 41DS4SCG966 and 41BS4ESG766

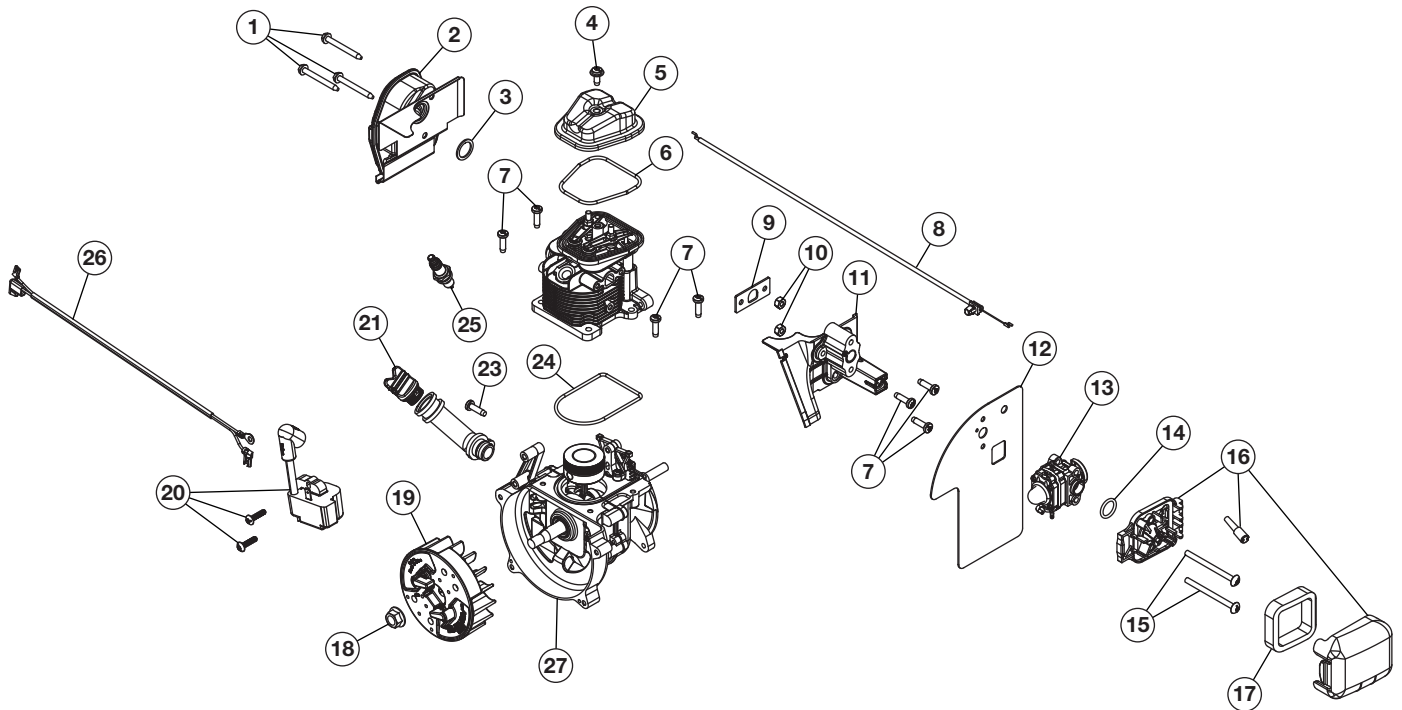


Item	Part No.	Description
1	753-05246	Muffler Screws
2	753-05900	Muffler Assembly (includes 1 & 3)
3	753-05244	Muffler Gasket
4	791-181025	Screw
5	753-05901	Rocker Cover
6	753-05902	O-Ring
7	791-181003	Screw
8	753-05903	Throttle Cable
9	753-05673	Insulator Gasket
10	753-05248	Nut
11	753-05904	Insulator
12	753-05905	Carburetor Gasket
13	753-05908	Carburetor
14	791-181751	Carburetor O-Ring
15	753-05253	Screw
16	753-04223	Air Cleaner Assembly (includes 17)
17	791-181757	Air Filter
18	753-05687	Nut

Item	Part No.	Description
19	753-05906	Flywheel Assembly
20	753-05907	Module
21	753-05400	Oil Plug
22	753-05682	Oil Fill Tube (includes 23)
23	753-05377	Screw
24	753-05910	O-Ring
25	753-05784	Spark Plug
26	753-05911	Lead Wire
27	753-06677	Short Block Assembly (includes 4-7 & 21-25)

REPLACEMENT PARTS - MODEL TB4HB EC

4-CYCLE HAND HELD BLOWER

PPN 41DS4SCG966 and 41BS4ESG766

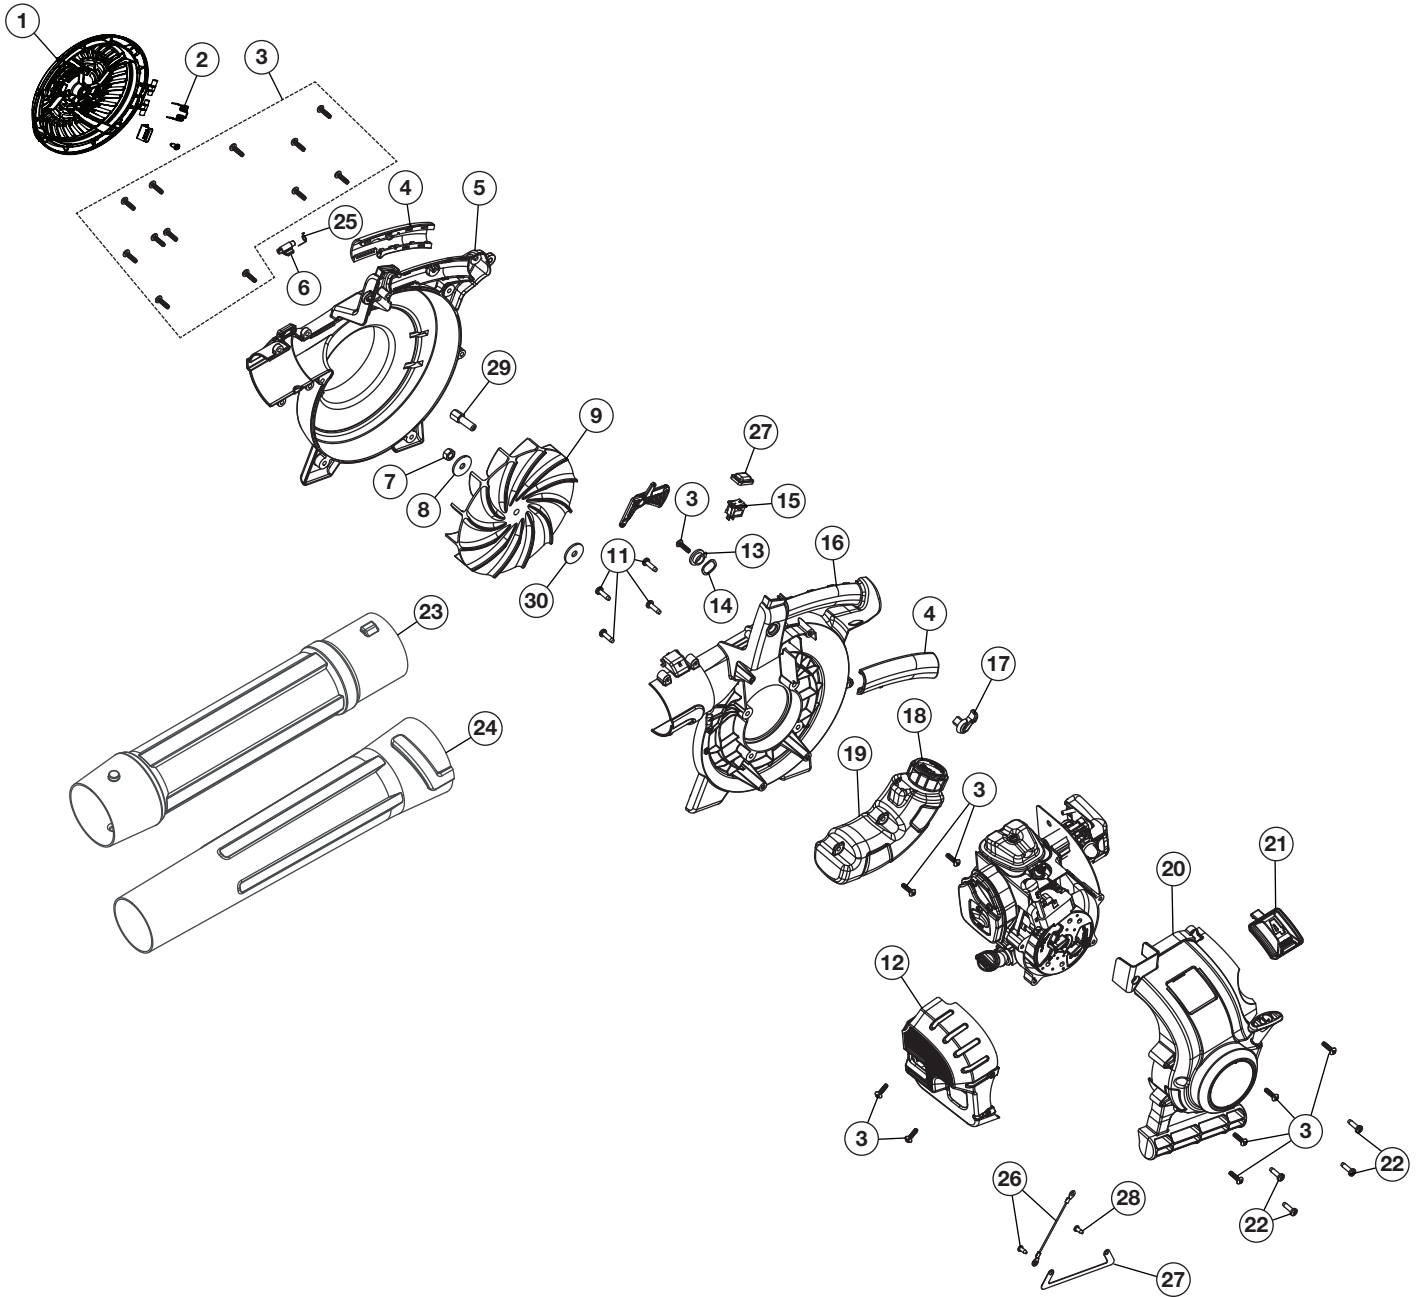

Item	Part No.	Description
1	753-06719	Intake Cover Assembly
2	753-05918	Spring
3	753-04595	Screw
4	753-05919	Handle Grips
5	753-06679	Impeller Housing (includes 4)
6	753-05926	Latch Tube
7	912-0237	Nut
8	753-06444	Washer
9	753-05929	Impeller
10	753-05930	Throttle Trigger
11	791-181003	Screw
12	753-05931	Muffer Cover (includes 3)
13	753-05924	Inner Trigger Lock
14	753-05925	Wavey Washer
15	791-182405	Switch

Item	Part No.	Description
16	753-05921	Impeller Housing (includes 4)
17	753-05932	Outer Trigger Lock
18	753-05289	Fuel Cap
19	753-05933	Fuel Tank Assembly (includes 18)
20	753-05941	Engine Cover Assembly (includes 3, 21 & 22)
21	753-05935	Spark Plug Cover
22	753-05377	Screw
23	753-05936	Upper Tube
24	753-05937	Lower Tube
25	753-05939	Latch Spring
26	753-05964	Wire Ground
27	753-05965	Strap Ground
28	753-1202	Screw
29	753-06700	Adapter
30	753-06806	Spacer