 



**(EN) Parts List**  
**(ES) La Lista de partes**  
**(FR) Liste des pièces**

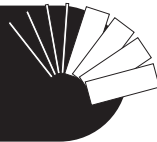

(EN)CODE (ES)CODE (FR)CODE	(EN)QTY (ES)QTY (FR)QTÉ
B1LQ	1
B1RQ	1
B21Q	2
B22Q	2
B3LQ	1
B3RQ	1
CB1Q	2
CB2Q	4
CB3Q	2
CB4Q	2
RS1LQ	2
RS1RQ	2
RS3LQ	2
RS3SQ	2
RS2LQ	2
RS2RQ	2
RS4Q	4
RS12Q	2
RS13LQ	2
RS13RQ	2
RS5Q	2
RS5JQ	1
RS15Q	2

(EN)CODE (ES)CODE (FR)CODE	(EN)QTY (ES)QTY (FR)QTÉ
MJ	4
RS6Q2	2
RS7Q2	2
RS8Q	4
RS9Q	4
RS14Q	6
DSHQ	1
CMA↑	7
CCQ↑	4
CDLQ	1
CDRQ	1
SP↑	9
SPAW↑	3
R1LQ	1
R2LQ	1
R3LQ	1
R1RQ	1
R2RQ	1
R3RQ	1
FPLA1	2
FPRA1	2
DL	1
DR	1

(EN) ACCESSORIES (ES) ACCESORIOS (FR) ACCESSOIRES	
(EN)CODE (ES)CODE (FR)CODE	(EN)QTY (ES)QTY (FR)QTÉ
FDCL	1
FDCR	1
FCC	4
FMC	7
CCF	4
RJ	4
CMF	3
L	1
R	1
LH	2
RH	2
EC	2
PPG	80
PPGL	2
PIN	80
PINL	2
S1	272
S2	15
S7	34
S6	16

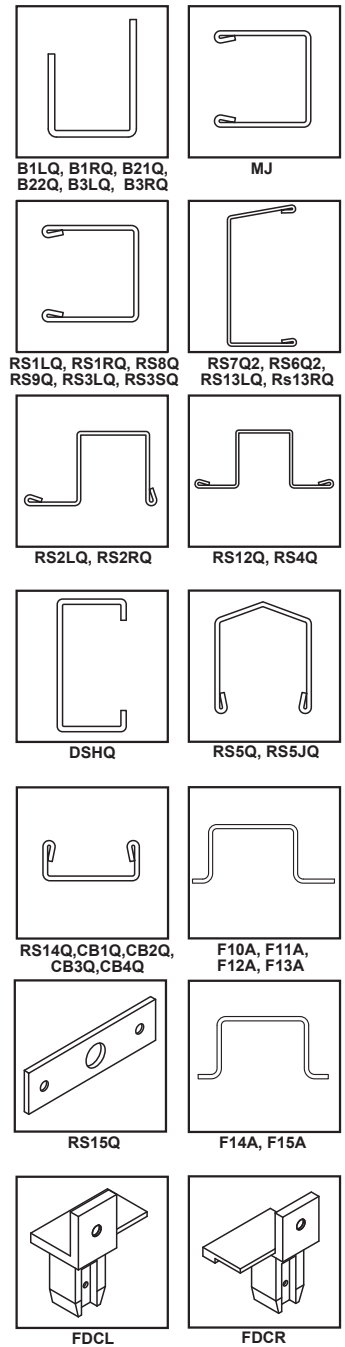 

(EN) FOUNDATION (ES) LA BASE (FR) FONDATION	
(EN)CODE (ES)CODE (FR)CODE	(EN)QTY (ES)QTY (FR)QTÉ
F10A	2
F11A	2
F12A	2
F13A	2
F14A	8
F15A	3
S1	34

