



OWNER'S MANUAL  
MANUEL DU PROPRIÉTAIRE  
MANUAL DEL PROPIETARIO

MODEL • MODÈLE • MODELO

<b>MICROWAVE</b> Owner's Manual.....	<b>1 - 12</b>
<b>MICRO ONDE</b> Manuel du propriétaire.....	<b>13 - 24</b>
<b>MICROONDA</b> Manual del propietario.....	<b>25 - 36</b>



MODEL • MODÈLE • MODELO

- DMW07A4WDB**
- DMW07A4BDB**
- DMW09A2WDB**
- DMW09A2BDB**
- DMW09A2BSSDB**

# Welcome

Welcome to the Danby family. We are proud of our quality products and we believe in dependable service. We suggest that you read this owner's manual before plugging in your new appliance as it contains important operation information, safety information, troubleshooting and maintenance tips to ensure the reliability and longevity of your appliance.

Visit [www.Danby.com](http://www.Danby.com) to access self service tools, FAQs and much more. For additional assistance call **1-800-263-2629**.

**Note the information below; you will need this information to obtain service under warranty. You must provide the original purchase receipt to validate your warranty and receive service.**

**Model Number:** \_\_\_\_\_

**Serial Number:** \_\_\_\_\_

**Date of Purchase:** \_\_\_\_\_

## Need Help?

Before you call for service, here are a few things you can do to help us serve you better.

**Read this owner's manual:**

It contains instructions to help you use and maintain your appliance properly.

**If you receive a damaged appliance:**

Immediately contact the retailer or builder that sold you the appliance.

**Save time and money:**

Check the troubleshooting section at the end of this manual before calling. This section will help you solve common problems that may occur.



1-800-26- Danby  
(1-800-263-2629)



## **Important Safety Information**

### **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**

#### **RADIO FREQUENCY INTERFERENCE**

This equipment generates and uses ISM frequencies and if not installed and used properly in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type-tested and found to comply with limits for ISM Equipment pursuant to Part 18 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation.

However, there is no guarantee that interference will not occur in particular installations. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the interference can be corrected by one or more of the following methods:

- Reorient the receiving antenna of radio or television.
- Move the microwave oven away from the receiver.
- Plug the microwave into a different outlet so that microwave and receiver are on different branch circuits.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification of this appliance. It is the responsibility of the user to correct such interference.

#### **AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

- Do not attempt to operate the appliance with the door open as this can result in harmful exposure to microwave energy. Do not tamper with or attempt to defeat the safety locks.
- Do not place any object between the front face and the door or allow soil or cleaner residue to accumulate on the sealing surfaces.
- Do not operate the appliance if it is damaged. The door must close properly and there must be no damage to the hinges, latches, door, door seals or sealing surfaces.

#### **GROUNDING INSTRUCTIONS**

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electrical current.

This appliance is equipped with a cord that has a grounding wire with a grounding plug. The power cord must be plugged into an outlet that is properly grounded. If the outlet is a standard 2-prong wall outlet, it is your responsibility to have it replaced with a properly grounded 3-prong wall outlet. The serial rating plate indicates the voltage and frequency the appliance is designed for.

**WARNING** - Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

#### **DO NOT USE AN EXTENSION CORD**

Do not connect your appliance to extension cords or together with another appliance in the same wall outlet. Do not splice the power cord. Do not under any circumstances cut or remove the third ground prong from the power cord.

If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person in order to avoid hazard.

#### **SAFETY REQUIREMENTS**

Ensure that component parts are replaced with like components and that servicing is done by factory authorized service personnel, to minimize the risk of possible ignition due to incorrect parts or improper service.

Children should be supervised to ensure that they do not play with the appliance.

Do not cover or block any ventilation openings in this appliance.

**SAVE THESE INSTRUCTIONS!**



## **Important Safety Information**

### **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**

#### **SAFETY REQUIREMENTS**

Use this appliance only for its intended use as described in this manual. This appliance is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

Do not store or use this appliance outdoors. Do not use this appliance near water.

Do not overcook food. Carefully watch the appliance when it is in use.

Remove wire twist-ties before placing items in the appliance.

Do not use the appliance for storage purposes. Do not leave items inside the appliance when not in use.

Do not heat oil or fat for deep frying as it is difficult to control the temperature of oil in a microwave.

Pierce foods with thick skins such as potatoes, squash and apples before cooking.

Some items such as whole eggs or sealed containers have the possibility of exploding when heated and should not be placed in this appliance.

Cooking utensils may become hot because of heat transferred from heated food. Pot holders may be required.

Only use thermometers which are specifically designed for use in microwaves.

Do not operate any heating or cooking appliance beneath this appliance.

Ensure that the glass tray and rollers are in the correct position before use to avoid possible spills.

Do not operate this appliance when it is empty as this will increase the heat around the magnetron and can damage the appliance or cause a fire.

If items inside the appliance should ignite, keep the door closed, turn the appliance off and disconnect the power cord.

#### **SAFETY - SUPERHEATED LIQUID**

Liquids are able to be overheated beyond the boiling point without appearing to be boiling due to the surface tension of the liquid. Visible bubbling will not always be present when the liquid is removed from the appliance. This could result in very hot liquids suddenly boiling over when a utensil or other item such as a tea bag is inserted into the liquid.

To reduce the risk of injury:

- Do not overheat liquids. Do not heat any liquid for more than 2 minutes per cup.
- Stir liquids before and halfway through heating.
- Do not use straight-sided containers with narrow necks as this can cause a build up of steam.
- Superheated liquid can begin to spontaneously boil when removed from the microwave. After heating, allow the liquid to stand in the microwave for 30 seconds before removing.
- Use extreme care when inserting a utensil or other item into hot liquids.

The contents of milk bottles and baby food jars should be stirred or shaken and the temperature checked before serving in order to avoid burns.

Do not defrost frozen beverages, especially carbonated beverages, in this appliance as they could explode.

Hot foods and steam can cause burns. Be careful when opening any container that has been heated in the appliance. Direct the opening away from hands and face to avoid burns.

#### **SAFETY - ARCING**

Arcing refers to sparks inside the microwave while it is in operation. Arcing is caused by:

- Metal or foil inside the appliance.
- Recycled paper towels being used inside the appliance, as these can contain small pieces of metal.

If arcing is present, stop operation and remove any metal or paper towels from the appliance.

**SAVE THESE INSTRUCTIONS!**

## INSTALLATION INSTRUCTIONS

### INSTALLATION

- Remove all packing materials from the inside and outside of the appliance.
- Check the appliance for damage before using, such as a misaligned or bent door, damaged door seals, broken or loose door hinges or latches, or dents inside the cavity or on the door. If there is any damage to the appliance, do not use it, return it to its point of purchase or contact consumer care.
- The appliance must be placed on a flat, stable surface that is able to hold its weight and the heaviest food likely to be placed in the appliance.
- Do not use this appliance where heat, moisture or high humidity are generated.
- Do not clean this appliance with or use near combustible materials.
- Allow 20 cm of space above the appliance, 10 cm at the back of the appliance and 5 cm on both sides for proper air flow around the appliance. Do not block any ventilation openings on the appliance.
- Do not operate the appliance without the glass tray, roller support and shaft in their correct positions.

## OPERATING INSTRUCTIONS

### COOKING TECHNIQUES

To achieve the best results when cooking in this appliance, follow the suggestions below.

#### STIRRING

Stir foods while cooking to distribute heat evenly. Food at the outside of the dish absorbs more energy and will heat more quickly so stir from the outside of the dish toward the center.

#### ARRANGEMENT

Arrange unevenly shaped foods thicker, meatier parts toward the outside of the turntable so they receive more heat. To prevent overcooking, place delicate items toward the center of the turntable.

#### SHIELDING

Delicate foods can be shielded with narrow strips of aluminum foil to prevent overcooking. Use only small amounts of foil as this can cause arcing and damage to the appliance.

#### TURNING

Turns foods over midway through cooking to expose all parts to the microwave energy. This is important with large items and meat.

#### STANDING

Foods cooked in a microwave build up internal heat and continue to cook for a few minutes after heating stops. Let foods stand to complete cooking, especially meats and liquids. All liquids should be allowed to stand for a few minutes after cooking and should be shaken or stirred before consuming.

#### ADDING MOISTURE

Microwave energy is attracted to water molecules. Food that is uneven in moisture content should be covered and allowed to stand after cooking to allow the heat to disperse evenly. Add a small amount of water to dry food to help it cook.

## OPERATING INSTRUCTIONS

### COOKING UTENSILS GUIDE

Certain utensils are inappropriate for use in a microwave. See below for more information on which utensils are recommended, which should only have limited use and which are not recommended.

#### RECOMMENDED

**Microwave Browning Dish:** Used to brown the exterior of small food items. Follow the directions provided with the browning dish.

**Microwavable Plastic Wrap:** Used to retain steam. Leave a small opening to avoid a build up of steam. Do not place directly on food.

**Glass and Ceramic Bowls and Dishes:** Use for heating or cooking.

**Paper Plates and Cups:** Use for short term heating at low temperatures. Do not use recycled paper as they can contain metal and could ignite.

**Paper Towels and Napkins:** Use for short term heating and covering. They can absorb excess moisture and prevent splattering. Do not use recycled paper towels as they can contain metal and could ignite.

**Wax Paper:** Use as a cover to prevent splattering.

**Thermometers:** Only use those that are labeled "microwave safe" and follow all directions. Check the food in several places. Conventional thermometers can be used once the food has been removed from the microwave.

#### LIMITED USE

**Aluminum Foil:** Use narrow strips to prevent overcooking of exposed areas. Using too much foil can cause arcing and damage the appliance. Keep a distance of at least 1 inch (2.6 cm) between the foil and the inside of the appliance.

**Ceramic, Porcelain and Stoneware:** Only use if they are labeled "microwave safe".

**Plastic:** Only use if labeled "microwave safe".

#### NOT RECOMMENDED

**Glass Jars and Bottles:** Regular glass is too thin to be used in a microwave. It can shatter and cause damage or injury.

**Paper Bags:** These are a fire hazard and could ignite. The only exception is popcorn bags, which are designed for microwave use.

**Styrofoam Plates and Cups:** These can melt and leave an unhealthy residue on food.

**Plastic Storage and Food Containers:** These can melt and ignite.


**Metal Utensils:** These can cause arcing and damage to the appliance. Remove all metal before operation.

**Note:** To check if a dish is safe for use in the microwave, place the empty dish in the appliance and microwave on high for 30 seconds. If the dish becomes very hot, it should not be used.

# OPERATING INSTRUCTIONS

## FEATURES


1. Door Safety Lock System
2. Oven Window
3. Roller Ring
4. Shaft
5. Door Release Button
6. Control Panel
7. Mica Sheet (Do Not Remove)
8. Glass Tray

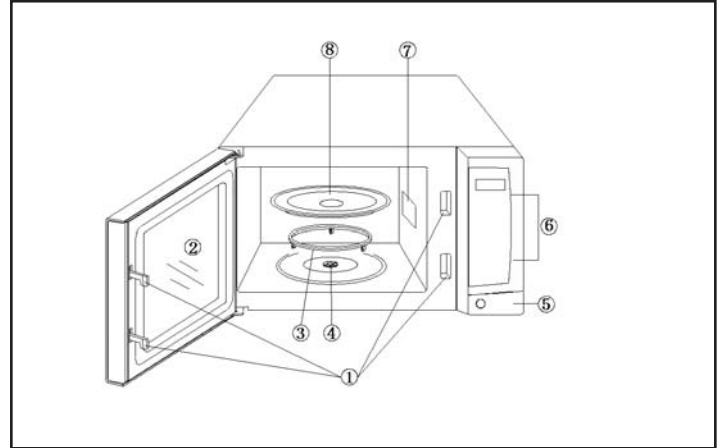

## CONTROL PANEL

**Note:** The shape of the control panel may be slightly different based on the model number. Functionality is exactly the same.

1. **Display:** Shows cooking time, power level and clock time.
2. **Auto Cook Menus:** Used to set auto cook programs.
3. **Clock Button:** Used to set the current time.
4. **Power/Hold Button:** Used to select the power level. Press and hold this button for 3 seconds to enter mute mode.
5. **Time Cook:** Used to set cook time at 100% power level.
6. **Timer:** Used to set the timer function.
7. **Speed Defrost:** Used to set the defrost function based on time entered.
8. **Defrost by Weight:** Used to set the defrost function based on weight.
9. **Cook by Weight:** Used to set the cook time based on weight.
10. **Start/Stop:** Used to start or pause a cooking program.
11. **Add 30 Seconds Button:** Used to add 30 seconds to the cooking time.
12. **Reset Button:** Used to clear all previous settings. Press and hold this button for 3 seconds to set the child lock function.

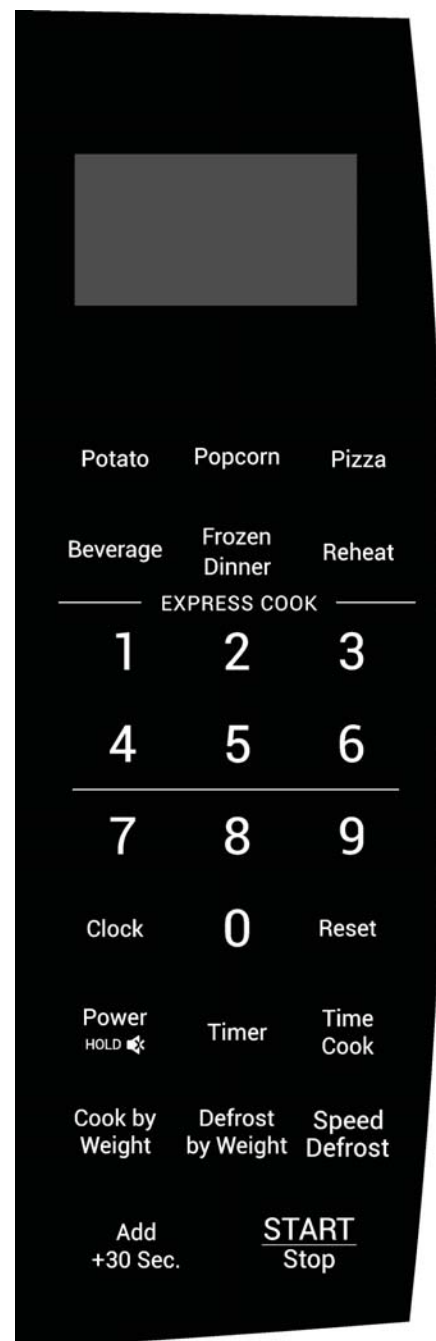

# OPERATING INSTRUCTIONS

## FIRST TIME USE

When the appliance is plugged in for the first time, the display will show "1:01".

When setting the cook timer, the appliance will return to standby mode if there is no input within 25 seconds.

During operation:

- Press the Start/Stop button to pause the functioning.
- Press the Start/Stop button again to resume functioning.
- Press the Reset button to cancel the cooking program.

The appliance will beep at the end of a cooking program and will continue to beep every 2 minutes until a button is pressed or the door is opened.

## SETTING THE CLOCK

The clock can be set as a 12 hour clock or a 24 hour clock.

To set the current time:

1. Press the Clock button once to choose a 12 hour clock. Press the Clock button again to choose a 24 hour clock.
2. Use the number pad to enter the current time.
3. Press the Clock button to confirm.

During operation, press the Clock button to see the current time.

## TIMER FUNCTION

To set the timer function:

1. Press the Timer button, "TIME" will show on the display and ":" will flash.
2. Use the number pad to enter the desired time to run the microwave.
3. Press the Start/Stop button to begin operation.

## MICROWAVE COOKING

To set a cooking power and time:

1. Press the Power/Hold button repeatedly until the desired cooking level is set, as per the below chart. If 100% cooking power is desired, only press the Power/Hold button once.

Press Power/Hold Button	Cooking Power
Once	100% (P-100)
Twice	90% (P-90)
3 Times	80% (P-80)
4 Times	70% (P-70)
5 Times	60% (P-60)
6 Times	50% (P-50)
7 Times	40% (P-40)
8 Times	30% (P-30)
9 Times	20% (P-20)
10 Times	10% (P-10)
11 Times	0% (P-00)

2. Use the number pad to enter the desired cooking time.
3. Press the Start/Stop button to begin operation.

## ADD 30 SECONDS FUNCTION

When the appliance is not in operation, pressing the Add 30 SEC button will run the appliance for 30 seconds at 100% power level. This button can be pressed multiple times, each press will add a further 30 seconds to the cooking time.

## EXPRESS COOK

When the appliance is not in operation, press the number pad from 1 to 6 and the appliance will run between 1 and 6 minutes at 100% cooking power.



## OPERATING INSTRUCTIONS

### AUTO COOK

The Auto Cook buttons can be used to set automatic cooking functions for the below food types.

### POPCORN

1. Press the Popcorn button. This will automatically set the cook time for a 3.5 oz. bag of popcorn.
2. Press the Start/Stop button to begin operation.

To change the preset time:

1. Press the Popcorn button twice. "ENTER TIME" will appear on the display.
2. Use the number pad to enter the desired cook time. This new time setting will be used every time the Popcorn button is pressed. If the appliance loses power, this time will need to be reprogrammed.
3. Press the Start/Stop button to begin operation.

### POTATO

For a 4 - 6 oz. serving of potatoes:

1. Press the Potato button.
2. Press the Start/Stop button to begin operation.

### PIZZA

To reheat a slice of pizza:

1. Press the Pizza button once.
2. Press the Start/Stop button to begin operation.

To heat a whole frozen pizza:

1. Press the Pizza button twice.
2. Press the Start/Stop button to begin operation.

### BEVERAGE

For a 5 - 7 oz. serving size:

1. Press the Beverage button.
2. Use the number pad from 1 - 4 to enter the number of cups.
3. Press the Start/Stop button to begin operation.

For a 9 - 11 oz. serving size:

1. Press the Beverage button twice.
2. Use the number pad from 1 - 4 to enter the number of cups.
3. Press the Start/Stop button to begin operation.

Do not overheat liquids. Do not heat any liquid for more than 2 minutes per cup. After heating, allow the liquid to stand in the microwave for 30 seconds before removing from the appliance.

### FROZEN DINNER

For one or two small 7 - 9 oz. dinners:

1. Press the Frozen Dinner button.
2. Use the number pad to indicate whether 1 or 2 dinners will be cooked.
3. Press the Start/Stop button to begin operation.

For one or two large 10 - 12 oz. dinners:

1. Press the Frozen Dinner button twice.
2. Use the number pad to indicate whether 1 or 2 dinners will be cooked.
3. Press the Start/Stop button to begin operation.

### REHEAT

1. Press the Reheat button.
2. Press the Start/Stop button to begin operation.

## OPERATING INSTRUCTIONS

### COOK BY WEIGHT

1. Press the Cook By Weight button.
2. Press number 1, 2 or 3 to indicate what type of meat will be cooked, as per the below chart. Meat must be defrosted and at refrigerated temperature.

Code	Type	Maximum Weight
1	Beef	6 lbs.
2	Mutton	6 lbs.
3	Pork	5 lbs. 4 oz.

3. Use the number pad to enter the weight of the meat that will be cooked. Weight must be in pounds and ounces.

During operation the appliance will pause and beep to indicate that the meat should be turned over. Press the Start/Stop button to resume operation. Let meat stand a few minutes before carving.

### DEFROST BY WEIGHT

The defrosting time and power level are adjusted automatically once the weight is entered.

1. Press the Defrost By Weight button.
2. Use the number pad to enter the weight of the food that will be defrosted. Weight must be in pounds and ounces. Maximum weight is 6 lbs.
3. Press the Start/Stop button to confirm.

During operation the appliance will pause and beep to indicate that the food should be turned over or stirred. Press the Start/Stop button to resume operation.

### SPEED DEFROST

1. Press the Speed Defrost button.
2. Use the number pads to enter the desired defrosting time.
3. Press the Start/Stop button to confirm.

During operation the appliance will pause and beep to indicate that the food should be turned over or stirred. Press the Start/Stop button to resume operation.

### MUTE FUNCTION

Press and hold the Power/Hold button for 3 seconds to enter mute mode, which will silence all sound from the appliance.

While in mute mode, press and hold the Power/Hold button for 3 seconds to unmute the appliance.

### SETTING THE CHILD LOCK

To set the child lock, while the unit is in standby mode, press and hold the Reset button for 3 seconds. The appliance will beep to indicate that the child lock is activated. While locked, the appliance cannot be used.

To cancel the child lock, press and hold the Reset button for 3 seconds. The appliance will beep to indicate that the child lock has been deactivated.

## CARE AND MAINTENANCE

### CLEANING

Turn off and unplug the appliance before performing any cleaning.

The inside of the appliance should be cleaned with a warm, damp cloth and mild detergents. Do not allow food splatters to build up on the inside of the appliance as this can affect the efficiency of the microwave and if sufficiently dirty, can ignite and cause fire.

The outside of the appliance should be cleaned with a warm, damp cloth. To avoid damage to internal components, do not allow any water to drip into the ventilation openings.

Clean the door and window on both sides, the door seals and the adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaners.

Do not allow the control panel to become wet. If necessary, clean the control panel with a damp cloth and then wipe dry.

The glass tray can be removed and cleaned in warm water and mild detergent or can be placed in a dishwasher.

The roller ring and oven floor should be cleaned regularly to avoid excessive noise or spilling. The roller ring can be cleaned in warm water and mild detergent or can be placed in a dishwasher. Ensure that the roller ring and glass tray are replaced in the proper position to avoid noise or spilling.

### MAINTENANCE

To remove odors from the microwave:

1. Combine a cup of water with the juice and skin of one lemon in a microwavable bowl.
2. Microwave on full power for 5 minutes.
3. Wipe the inside of the appliance and glass tray and roller ring thoroughly with a warm, damp cloth.

### MICA SHEET

Inside the appliance there is a cardboard mica sheet protecting the magnetron. Do not remove this from the appliance as exposing the magnetron to food splatters can cause arcing or fire. If it becomes dirty, the mica sheet can be cleaned with a warm cloth.

### DISPOSAL

This product should not be treated as ordinary household waste, it should be transported to the appropriate collection point for the recycling of electrical components. For information on local waste collection points, contact your local waste disposal agency or government office.

## TROUBLESHOOTING

**Danby Consumer Care: 1-800-263-2629**

**Hours of operation:**

Monday to Thursday 8:30 am - 6:00 pm Eastern Standard Time

Friday 8:30 am - 4:00 pm Eastern Standard Time

Information in this manual is subject to change without notice.

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>
<b>No power</b>	<ul style="list-style-type: none"><li>• A fuse may be blown or the circuit breaker tripped</li><li>• Plug not fully inserted into the wall outlet</li><li>• Door is open</li></ul>
<b>Arcing or sparking during operation</b>	<ul style="list-style-type: none"><li>• Metallic items were left in the appliance during operation</li><li>• The appliance is being operated while empty</li><li>• Spilled food has built up inside the appliance or on the mica sheet</li></ul>
<b>Unevenly cooked food</b>	<ul style="list-style-type: none"><li>• Food was not completely defrosted before cooking</li><li>• Cooking time or power level were insufficient</li><li>• Food was not turned or stirred during cooking</li></ul>
<b>Overcooked food</b>	<ul style="list-style-type: none"><li>• The power level or cooking time were too high</li></ul>
<b>Undercooked food</b>	<ul style="list-style-type: none"><li>• Food was not completely defrosted before cooking</li><li>• Cooking time or power level were insufficient</li><li>• Food was not turned or stirred during cooking</li><li>• Ventilation openings are blocked</li></ul>
<b>Poor Defrosting</b>	<ul style="list-style-type: none"><li>• Defrosting time or power level were insufficient</li><li>• Food was not turned or stirred during defrosting</li></ul>

## LIMITED "CARRY IN" WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workmanship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

This warranty is available only to the person to whom the unit was originally sold by Danby Products Limited (Canada) or Danby Products Inc. (U.S.A.) (hereafter "Danby") or by an authorized distributor of Danby, and is non-transferable.

### TERMS OF WARRANTY

Plastic parts are warranted for thirty (30) days from the date of purchase, with no extensions provided.

**First 12 months** During the first **twelve (12) months**, any functional parts of this product found to be defective, will be repaired or replaced, at warrantor's option, at no charge to the original purchaser.

**To obtain service** Contact the dealer where the unit was purchased, or contact the nearest authorized Danby service depot, where service must be performed by a qualified service technician. If service is performed on the unit by anyone other than an authorized service depot, all obligations of Danby under this warranty shall be void.

It is the responsibility of the purchaser to transport the appliance to the nearest authorized service depot.

Transportation charges to and from the service location are not protected by this warranty and are the responsibility of the purchaser.

Nothing within this warranty shall imply that Danby will be responsible or liable for any spoilage or damage to food or other contents of this appliance, whether due to any defect of the appliance, or its use, whether proper or improper.

### EXCLUSIONS

Save as herein provided, by Danby, there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by Danby or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, **Danby shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and hold harmless Danby from any claim for damages to persons or property caused by the unit.**

### GENERAL PROVISIONS

No warranty or insurance herein contained or set out shall apply when damage or repair is caused by any of the following:

- 1) Power failure.
- 2) Damage in transit or when moving the appliance.
- 3) Improper power supply such as low voltage, defective house wiring or inadequate fuses.
- 4) Accident, alteration, abuse or misuse of the appliance such as inadequate air circulation in the room or abnormal operating conditions (ie. extremely high or low room temperature).
- 5) Use for commercial or industrial purposes (ie. If the appliance is not installed in a domestic residence).
- 6) Fire, water damage, theft, war, riot, hostility, acts of God such as hurricanes, floods etc.
- 7) Service calls resulting in customer education.
- 8) Improper Installation (ie. Building-in of a free standing appliance or using an appliance outdoors that is not approved for outdoor application, including but not limited to: garages, patios, porches or anywhere that is not properly insulated or climate controlled).

Proof of purchase date will be required for warranty claims; retain bills of sale. In the event that warranty service is required, present the proof of purchase to our authorized service depot.

**Warranty Service**  
Carry In

Danby Products Limited  
PO Box 1778, Guelph, Ontario, Canada N1H 6Z9  
Telephone: (519) 837-0920 FAX: (519) 837-0449

**1-800-263-2629**  
04/17

Danby Products Inc.  
PO Box 669, Findlay, Ohio, U.S.A. 45840  
Telephone: (419) 425-8627 FAX: (419) 425-8629

# Bienvenue

Bienvenue à la famille Danby. Nous sommes fiers de la qualité de nos produits et nous croyons en le service fiable. Nous vous suggérons de lire ce manuel d'utilisation avant de brancher votre nouvel appareil car il contient des informations importantes sur l'utilisation, la sécurité, le dépannage et la maintenance, afin d'assurer la fiabilité et la longévité de votre appareil.

Visitez [www.Danby.com](http://www.Danby.com) pour accéder aux outils d'autoservice, aux FAQ et bien plus encore. Pour obtenir de l'aide supplémentaire, composez **1-800-263-2629**.

**Notez les informations ci-dessous; Vous aurez besoin de cette information pour obtenir un service sous garantie.**  
**Vous devez fournir le reçu d'achat original pour valider votre garantie et recevoir le service.**

**Numéro de modèle:** \_\_\_\_\_

**Numéro de serie:** \_\_\_\_\_

**Date d'achat:** \_\_\_\_\_

## Besoin d'assistance?

Avant d'appeler pour service, voici quelques choses que vous pouvez faire pour nous aider à mieux vous servir.

### **Lire ce manuel du propriétaire:**

Il contient des instructions pour vous aider à utiliser et à maintenir votre appareil correctement.

### **Si vous recevez un appareil endommagé:**

Contactez immédiatement le revendeur ou l'entrepreneur qui vous a vendu l'appareil.

### **Gagnez du temps et de l'argent:**

Avant d'appeler pour service, consultez la section de dépannage à la fin de ce manuel. Cette section vous aidera à résoudre les problèmes courants pouvant survenir.



1-800-26- Danby  
(1-800-263-2629)



## Consignes de sécurité importantes

### LIRE ET SUIVRE TOUTES LES INSTRUCTIONS DE SÉCURITÉ

#### RADIO FREQUENCY INTERFERENCE

This equipment generates and uses ISM frequencies and if not installed and used properly in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type-tested and found to comply with limits for ISM Equipment pursuant to Part 18 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation.

However, there is no guarantee that interference will not occur in particular installations. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the interference can be corrected by one or more of the following methods:

- Reorient the receiving antenna of radio or television.
- Move the microwave oven away from the receiver.
- Plug the microwave into a different outlet so that microwave and receiver are on different branch circuits.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification of this appliance. It is the responsibility of the user to correct such interference.

#### AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate the appliance with the door open as this can result in harmful exposure to microwave energy. Do not tamper with or attempt to defeat the safety locks.
- Do not place any object between the front face and the door or allow soil or cleaner residue to accumulate on the sealing surfaces.
- Do not operate the appliance if it is damaged. The door must close properly and there must be no damage to the hinges, latches, door, door seals or sealing surfaces.

#### INSTRUCTIONS DE MISE À LA TERRE

Cet appareil doit être mis à la terre. En cas de court-circuit, la mise à la terre réduit les risques de décharge électrique en fournissant un échappatoire au courant électrique.

Cet appareil est équipé d'un cordon doté d'un fil de mise à la terre avec une fiche de mise à la terre. Le cordon d'alimentation doit être branché sur une prise correctement mise à la terre. Si la sortie est une prise murale à 2 broches standard, il est de votre responsabilité de la remplacer par une prise murale à 3 broches correctement mise à la terre. La plaque signalétique en série indique la tension et la fréquence auxquelles l'appareil est conçu.

**AVERTISSEMENT** - Une fiche de mise à la terre mal branchée peut entraîner un risque d'incendie, de choc électrique ou de blessures aux personnes qui utilisent l'appareil. Si vous n'êtes pas certain que l'appareil est correctement mis à la terre, consultez un préposé du service qualifié.

#### N'UTILISER JAMAIS DE FIL DE RALLONGE

Ne connectez pas votre appareil aux rallonges ou avec un autre appareil dans la même prise murale. Ne pas épisser le cordon d'alimentation. Ne coupez ou retirez en aucun cas la troisième broche du cordon d'alimentation.

Si le cordon d'alimentation est endommagé, il doit être remplacé par le fabricant, son agent de service ou une personne qualifiée similaire afin d'éviter tout risque.

#### EXIGENCES DE SÉCURITÉ

Assurez-vous que les composants sont remplacés par des composants similaires et que l'entretien est effectué par le personnel de service autorisé en usine, afin de minimiser le risque d'allumage possible en raison de pièces incorrectes ou d'un mauvais service.

Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.

Ne pas couvrir ni bloquer les ouvertures de ventilation dans cet appareil.

**GARDER CES INSTRUCTIONS!**



## Consignes de sécurité importantes

### LIRE ET SUIVRE TOUTES LES INSTRUCTIONS DE SÉCURITÉ

#### EXIGENCES DE SÉCURITÉ

Use this appliance only for its intended use as described in this manual. This appliance is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

Do not store or use this appliance outdoors. Do not use this appliance near water.

Do not overcook food. Carefully watch the appliance when it is in use.

Remove wire twist-ties before placing items in the appliance.

Do not use the appliance for storage purposes. Do not leave items inside the appliance when not in use.

Do not heat oil or fat for deep frying as it is difficult to control the temperature of oil in a microwave.

Pierce foods with thick skins such as potatoes, squash and apples before cooking.

Some items such as whole eggs or sealed containers have the possibility of exploding when heated and should not be placed in this appliance.

Cooking utensils may become hot because of heat transferred from heated food. Pot holders may be required.

Only use thermometers which are specifically designed for use in microwaves.

Do not operate any heating or cooking appliance beneath this appliance.

Ensure that the glass tray and rollers are in the correct position before use to avoid possible spills.

Do not operate this appliance when it is empty as this will increase the heat around the magnetron and can damage the appliance or cause a fire.

If items inside the appliance should ignite, keep the door closed, turn the appliance off and disconnect the power cord.

#### SAFETY - SUPERHEATED LIQUID

Liquids are able to be overheated beyond the boiling point without appearing to be boiling due to the surface tension of the liquid. Visible bubbling will not always be present when the liquid is removed from the appliance. This could result in very hot liquids suddenly boiling over when a utensil or other item such as a tea bag is inserted into the liquid.

To reduce the risk of injury:

- Do not overheat liquids. Do not heat any liquid for more than 2 minutes per cup.
- Stir liquids before and halfway through heating.
- Do not use straight-sided containers with narrow necks as this can cause a build up of steam.
- Superheated liquid can begin to spontaneously boil when removed from the microwave. After heating, allow the liquid to stand in the microwave for 30 seconds before removing.
- Use extreme care when inserting a utensil or other item into hot liquids.

The contents of milk bottles and baby food jars should be stirred or shaken and the temperature checked before serving in order to avoid burns.

Do not defrost frozen beverages, especially carbonated beverages, in this appliance as they could explode.

Hot foods and steam can cause burns. Be careful when opening any container that has been heated in the appliance. Direct the opening away from hands and face to avoid burns.

#### SAFETY - ARCING

Arcing refers to sparks inside the microwave while it is in operation. Arcing is caused by:

- Metal or foil inside the appliance.
- Recycled paper towels being used inside the appliance, as these can contain small pieces of metal.

If arcing is present, stop operation and remove any metal or paper towels from the appliance.

**GARDER CES INSTRUCTIONS!**



## INSTRUCTIONS D'INSTALLATION

### INSTALLATION

- Remove all packing materials from the inside and outside of the appliance.
- Check the appliance for damage before using, such as a misaligned or bent door, damaged door seals, broken or loose door hinges or latches, or dents inside the cavity or on the door. If there is any damage to the appliance, do not use it, return it to its point of purchase or contact consumer care.
- The appliance must be placed on a flat, stable surface that is able to hold its weight and the heaviest food likely to be placed in the appliance.
- Do not use this appliance where heat, moisture or high humidity are generated.
- Do not clean this appliance with or use near combustible materials.
- Allow 20 cm of space above the appliance, 10 cm at the back of the appliance and 5 cm on both sides for proper air flow around the appliance. Do not block any ventilation openings on the appliance.
- Do not operate the appliance without the glass tray, roller support and shaft in their correct positions.

## CONSIGNES D'UTILISATION

### COOKING TECHNIQUES

To achieve the best results when cooking in this appliance, follow the suggestions below.

#### STIRRING

Stir foods while cooking to distribute heat evenly. Food at the outside of the dish absorbs more energy and will heat more quickly so stir from the outside of the dish toward the center.

#### ARRANGEMENT

Arrange unevenly shaped foods thicker, meatier parts toward the outside of the turntable so they receive more heat. To prevent overcooking, place delicate items toward the center of the turntable.

#### SHIELDING

Delicate foods can be shielded with narrow strips of aluminum foil to prevent overcooking. Use only small amounts of foil as this can cause arcing and damage to the appliance.

#### TURNING

Turns foods over midway through cooking to expose all parts to the microwave energy. This is important with large items and meat.

#### STANDING

Foods cooked in a microwave build up internal heat and continue to cook for a few minutes after heating stops. Let foods stand to complete cooking, especially meats and liquids. All liquids should be allowed to stand for a few minutes after cooking and should be shaken or stirred before consuming.

#### ADDING MOISTURE

Microwave energy is attracted to water molecules. Food that is uneven in moisture content should be covered and allowed to stand after cooking to allow the heat to disperse evenly. Add a small amount of water to dry food to help it cook.

## CONSIGNES D'UTILISATION

### COOKING UTENSILS GUIDE

Certain utensils are inappropriate for use in a microwave. See below for more information on which utensils are recommended, which should only have limited use and which are not recommended.

#### RECOMMENDED

**Microwave Browning Dish:** Used to brown the exterior of small food items. Follow the directions provided with the browning dish.

**Microwavable Plastic Wrap:** Used to retain steam. Leave a small opening to avoid a build up of steam. Do not place directly on food.

**Glass and Ceramic Bowls and Dishes:** Use for heating or cooking.

**Paper Plates and Cups:** Use for short term heating at low temperatures. Do not use recycled paper as they can contain metal and could ignite.

**Paper Towels and Napkins:** Use for short term heating and covering. They can absorb excess moisture and prevent splattering. Do not use recycled paper towels as they can contain metal and could ignite.

**Wax Paper:** Use as a cover to prevent splattering.

**Thermometers:** Only use those that are labeled "microwave safe" and follow all directions. Check the food in several places. Conventional thermometers can be used once the food has been removed from the microwave.

#### LIMITED USE

**Aluminum Foil:** Use narrow strips to prevent overcooking of exposed areas. Using too much foil can cause arcing and damage the appliance. Keep a distance of at least 1 inch (2.6 cm) between the foil and the inside of the appliance.

**Ceramic, Porcelain and Stoneware:** Only use if they are labeled "microwave safe".

**Plastic:** Only use if labeled "microwave safe".

### NOT RECOMMENDED

**Glass Jars and Bottles:** Regular glass is too thin to be used in a microwave. It can shatter and cause damage or injury.

**Paper Bags:** These are a fire hazard and could ignite. The only exception is popcorn bags, which are designed for microwave use.

**Styrofoam Plates and Cups:** These can melt and leave an unhealthy residue on food.

**Plastic Storage and Food Containers:** These can melt and ignite.

**Metal Utensils:** These can cause arcing and damage to the appliance. Remove all metal before operation.

**Note:** To check if a dish is safe for use in the microwave, place the empty dish in the appliance and microwave on high for 30 seconds. If the dish becomes very hot, it should not be used.

**FEATURES**

**CONTROL PANEL**

**SPACE RESERVED FOR FEATURES IMAGE AND DESCRIPTION**

**SPACE RESERVED FOR CONTROL PANEL IMAGE AND DESCRIPTION**

## CONSIGNES D'UTILISATION

### FIRST TIME USE

When the appliance is plugged in for the first time, the display will show "1:01".

When setting the cook timer, the appliance will return to standby mode if there is no input within 25 seconds.

During operation:

- Press the Start/Stop button to pause the functioning.
- Press the Start/Stop button again to resume functioning.
- Press the Reset button to cancel the cooking program.

The appliance will beep at the end of a cooking program and will continue to beep every 2 minutes until a button is pressed or the door is opened.

### SETTING THE CLOCK

The clock can be set as a 12 hour clock or a 24 hour clock.

To set the current time:

1. Press the Clock button once to choose a 12 hour clock. Press the Clock button again to choose a 24 hour clock.
2. Use the number pad to enter the current time.
3. Press the Clock button to confirm.

During operation, press the Clock button to see the current time.

### TIMER FUNCTION

To set the timer function:

1. Press the Timer button, "TIME" will show on the display and ":" will flash.
2. Use the number pad to enter the desired time to run the microwave.
3. Press the Start/Stop button to begin operation.

### MICROWAVE COOKING

To set a cooking power and time:

1. Press the Power/Hold button repeatedly until the desired cooking level is set, as per the below chart. If 100% cooking power is desired, only press the Power/Hold button once.

Press Power/Hold Button	Cooking Power
Once	100% (P-100)
Twice	90% (P-90)
3 Times	80% (P-80)
4 Times	70% (P-70)
5 Times	60% (P-60)
6 Times	50% (P-50)
7 Times	40% (P-40)
8 Times	30% (P-30)
9 Times	20% (P-20)
10 Times	10% (P-10)
11 Times	0% (P-00)

2. Use the number pad to enter the desired cooking time.
3. Press the Start/Stop button to begin operation.

### ADD 30 SECONDS FUNCTION

When the appliance is not in operation, pressing the Add 30 SEC button will run the appliance for 30 seconds at 100% power level. This button can be pressed multiple times, each press will add a further 30 seconds to the cooking time.

### EXPRESS COOK

When the appliance is not in operation, press the number pad from 1 to 6 and the appliance will run between 1 and 6 minutes at 100% cooking power.

## CONSIGNES D'UTILISATION

### AUTO COOK

The Auto Cook buttons can be used to set automatic cooking functions for the below food types.

### POPCORN

1. Press the Popcorn button. This will automatically set the cook time for a 3.5 oz. bag of popcorn.
2. Press the Start/Stop button to begin operation.

To change the preset time:

1. Press the Popcorn button twice. "ENTER TIME" will appear on the display.
2. Use the number pad to enter the desired cook time. This new time setting will be used every time the Popcorn button is pressed. If the appliance loses power, this time will need to be reprogrammed.
3. Press the Start/Stop button to begin operation.

### POTATO

For a 4 - 6 oz. serving of potatoes:

1. Press the Potato button.
2. Press the Start/Stop button to begin operation.

### PIZZA

To reheat a slice of pizza:

1. Press the Pizza button once.
2. Press the Start/Stop button to begin operation.

To heat a whole frozen pizza:

1. Press the Pizza button twice.
2. Press the Start/Stop button to begin operation.

### BEVERAGE

For a 5 - 7 oz. serving size:

1. Press the Beverage button.
2. Use the number pad from 1 - 4 to enter the number of cups.
3. Press the Start/Stop button to begin operation.

For a 9 - 11 oz. serving size:

1. Press the Beverage button twice.
2. Use the number pad from 1 - 4 to enter the number of cups.
3. Press the Start/Stop button to begin operation.

Do not overheat liquids. Do not heat any liquid for more than 2 minutes per cup. After heating, allow the liquid to stand in the microwave for 30 seconds before removing from the appliance.

### FROZEN DINNER

For one or two small 7 - 9 oz. dinners:

1. Press the Frozen Dinner button.
2. Use the number pad to indicate whether 1 or 2 dinners will be cooked.
3. Press the Start/Stop button to begin operation.

For one or two large 10 - 12 oz. dinners:

1. Press the Frozen Dinner button twice.
2. Use the number pad to indicate whether 1 or 2 dinners will be cooked.
3. Press the Start/Stop button to begin operation.

### REHEAT

1. Press the Reheat button.
2. Press the Start/Stop button to begin operation.

## CONSIGNES D'UTILISATION

### COOK BY WEIGHT

1. Press the Cook By Weight button.
2. Press number 1, 2 or 3 to indicate what type of meat will be cooked, as per the below chart. Meat must be defrosted and at refrigerated temperature.

Code	Type	Maximum Weight
1	Beef	6 lbs.
2	Mutton	6 lbs.
3	Pork	5 lbs. 4 oz.

3. Use the number pad to enter the weight of the meat that will be cooked. Weight must be in pounds and ounces.

During operation the appliance will pause and beep to indicate that the meat should be turned over. Press the Start/Stop button to resume operation. Let meat stand a few minutes before carving.

### DEFROST BY WEIGHT

The defrosting time and power level are adjusted automatically once the weight is entered.

1. Press the Defrost By Weight button.
2. Use the number pad to enter the weight of the food that will be defrosted. Weight must be in pounds and ounces. Maximum weight is 6 lbs.
3. Press the Start/Stop button to confirm.

During operation the appliance will pause and beep to indicate that the food should be turned over or stirred. Press the Start/Stop button to resume operation.

### SPEED DEFROST

1. Press the Speed Defrost button.
2. Use the number pads to enter the desired defrosting time.
3. Press the Start/Stop button to confirm.

During operation the appliance will pause and beep to indicate that the food should be turned over or stirred. Press the Start/Stop button to resume operation.

### MUTE FUNCTION

Press and hold the Power/Hold button for 3 seconds to enter mute mode, which will silence all sound from the appliance.

While in mute mode, press and hold the Power/Hold button for 3 seconds to unmute the appliance.

### SETTING THE CHILD LOCK

To set the child lock, while the unit is in standby mode, press and hold the Reset button for 3 seconds. The appliance will beep to indicate that the child lock is activated. While locked, the appliance cannot be used.

To cancel the child lock, press and hold the Reset button for 3 seconds. The appliance will beep to indicate that the child lock has been deactivated.

### CLEANING

Turn off and unplug the appliance before performing any cleaning.

The inside of the appliance should be cleaned with a warm, damp cloth and mild detergents. Do not allow food splatters to build up on the inside of the appliance as this can affect the efficiency of the microwave and if sufficiently dirty, can ignite and cause fire.

The outside of the appliance should be cleaned with a warm, damp cloth. To avoid damage to internal components, do not allow any water to drip into the ventilation openings.

Clean the door and window on both sides, the door seals and the adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaners.

Do not allow the control panel to become wet. If necessary, clean the control panel with a damp cloth and then wipe dry.

The glass tray can be removed and cleaned in warm water and mild detergent or can be placed in a dishwasher.

The roller ring and oven floor should be cleaned regularly to avoid excessive noise or spilling. The roller ring can be cleaned in warm water and mild detergent or can be placed in a dishwasher. Ensure that the roller ring and glass tray are replaced in the proper position to avoid noise or spilling.

### MAINTENANCE

To remove odors from the microwave:

1. Combine a cup of water with the juice and skin of one lemon in a microwavable bowl.
2. Microwave on full power for 5 minutes.
3. Wipe the inside of the appliance and glass tray and roller ring thoroughly with a warm, damp cloth.

### MICA SHEET

Inside the appliance there is a cardboard mica sheet protecting the magnetron. Do not remove this from the appliance as exposing the magnetron to food splatters can cause arcing or fire. If it becomes dirty, the mica sheet can be cleaned with a warm cloth.

### DISPOSAL

This product should not be treated as ordinary household waste, it should be transported to the appropriate collection point for the recycling of electrical components. For information on local waste collection points, contact your local waste disposal agency or government office.

## DÉPANNAGE

**Danby soins du consommateur: 1-800-263-2629**

**Heures d'ouverture:**

Lundi à Jeudi 8 h 30 à 18 h, heure normale de l'Est

Vendredi de 8 h 30 à 16 h, heure normale de l'Est

Les informations contenues dans ce manuel sont sujettes à modification sans préavis.

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>
<b>No power</b>	<ul style="list-style-type: none"><li>• A fuse may be blown or the circuit breaker tripped</li><li>• Plug not fully inserted into the wall outlet</li><li>• Door is open</li></ul>
<b>Arcing or sparking during operation</b>	<ul style="list-style-type: none"><li>• Metallic items were left in the appliance during operation</li><li>• The appliance is being operated while empty</li><li>• Spilled food has built up inside the appliance or on the mica sheet</li></ul>
<b>Unevenly cooked food</b>	<ul style="list-style-type: none"><li>• Food was not completely defrosted before cooking</li><li>• Cooking time or power level were insufficient</li><li>• Food was not turned or stirred during cooking</li></ul>
<b>Overcooked food</b>	<ul style="list-style-type: none"><li>• The power level or cooking time were too high</li></ul>
<b>Undercooked food</b>	<ul style="list-style-type: none"><li>• Food was not completely defrosted before cooking</li><li>• Cooking time or power level were insufficient</li><li>• Food was not turned or stirred during cooking</li><li>• Ventilation openings are blocked</li></ul>
<b>Poor Defrosting</b>	<ul style="list-style-type: none"><li>• Defrosting time or power level were insufficient</li><li>• Food was not turned or stirred during defrosting</li></ul>



## GARANTIE LIMITÉE "EN ATELIER"

Cet appareil de qualité est garanti exempt de tout vice de matière première et de fabrication, s'il est utilisé dans les conditions normales recommandées par le fabricant.

Cette garantie n'est offerte qu'à l'acheteur initial de l'appareil vendu par Danby Products Limited (Canada) ou Danby Products Inc. (E.-U.A.) (ci-après « Danby ») ou par l'un des ses distributeurs agréés et elle ne peut être transférée.

### CONDITIONS

Les pièces en plastique sont garanties pendant trente (30) jours seulement à partir de la date de l'achat, sans aucune prolongation prévue.

**Premiers 12 mois** Pendant les premiers **douze (12) mois**, toutes les pièces fonctionnelles de ce produit qui s'avèrent défectueuses seront réparées ou remplacées, selon le choix du garant, sans frais à l'acheteur initial.

**Pour obtenir un service** Contactez le revendeur où l'appareil a été acheté ou contactez le dépôt de service Danby autorisé le plus proche, où le service doit être effectué par un technicien de service qualifié. Si le service est effectué sur l'appareil par une personne autre qu'un dépôt de service autorisé, toutes les obligations de Danby en vertu de cette garantie seront annulées.

Il est de la responsabilité de l'acheteur de transporter l'appareil vers le dépôt de service agréé le plus proche.

Les frais de transport entre votre domicile et le lieu de l'entretien ne sont pas couverts par la présente garantie et doivent être acquittés par l'acheteur.

Aucune partie de la garantie ne prévoit implicitement que le fabricant sera tenu responsable des dommages subis par les aliments ou d'autres types de contenu, qu'ils soient causés par la défectuosité de l'appareil ou par son usage adéquat ou inadéquat.

### EXCLUSIONS

En vertu de la présente, il n'existe aucune autre garantie, condition ou représentation, qu'elle soit exprimée ou tacite, de façon manifeste ou intentionnelle, par Danby ou ses distributeurs agréés. De même, sont exclues toutes les autres garanties, conditions ou représentations, y compris les garanties, conditions ou représentations en vertu de toute loi régissant la vente de produits ou de toute autre législation ou règlement semblables. **En vertu de la présente, Danby ne peut être tenue responsable en cas de blessures corporelles ou des dégâts matériels, y compris à l'appareil, quelle qu'en soit les causes. Danby ne peut pas être tenue responsable des dommages indirects dus au fonctionnement défectueux de l'appareil. En achetant l'appareil, l'acheteur accepte de mettre à couvert et de dégager Danby de toute responsabilité en cas de réclamation pour toute blessure corporelle ou tout dégât matériel causé par cet appareil.**

### CONDITIONS GÉNÉRALES

La garantie ou assurance ci-dessus ne s'applique pas si les dégâts ou réparations sont dus aux cas suivants:

- 1) Panne de courant.
- 2) Dommage subis pendant le transport ou le déplacement de l'appareil.
- 3) Alimentation électrique incorrecte (tension faible, câblage défectueux, fusibles incorrects).
- 4) Accident, modification, emploi abusif ou incorrect de l'appareil tel qu'une circulation d'air inadéquate dans la pièce ou des conditions de fonctionnement anormales (température extrêmement élevée ou basse).
- 5) Utilisation dans un but commercial ou industriel (à savoir, si l'appareil n'est pas installé dans un domicile résidentiel).
- 6) Incendie, dommages causés par l'eau, vol, guerre, émeute, hostilités, cas de force majeure (ouragan, inondation, etc.).
- 7) Visites d'un technicien pour expliquer le fonctionnement de l'appareil au propriétaire.
- 8) Installation inappropriée (par exemple, encastrement d'un appareil autoportant, ou utilisation extérieure d'un appareil non conçu à cet effet, y compris, mais sans s'y limiter: les garages, les patios, les porches ou ailleurs qui ne sont pas correctement isolés ou climatisés).

La preuve de la date d'achat sera requise pour les réclamations de garantie; Conserver les factures de vente. Dans le cas où un service de garantie est requis, présentez la preuve d'achat à notre dépôt de service agréé.

### Service sous garantie

En Atelier

Danby Products Limited  
PO Box 1778, Guelph, Ontario, Canada N1H 6Z9  
Téléphone : (519) 837-0920 Télécopieur: (519) 837-0449

**1-800-263-2629**  
04/17

Danby Products Inc.  
PO Box 669, Findlay, Ohio, U.S.A. 45840  
Téléphone: (419) 425-8627 Télécopieur: (419) 425-8629

# Bienvenido

Bienvenido a la familia Danby. Estamos orgullosos de nuestros productos de calidad y nos deleite en servicio confiable. Sugerimos que lea este manual del propietario antes de conectar el nuevo aparato ya que contiene información importante sobre la operación, información de seguridad, solución de problemas y consejos de mantenimiento para garantizar la fiabilidad y longevidad de su electrodoméstico.

Visite **www.Danby.com** para acceder a herramientas de autoservicio, preguntas frecuentes y mucho más. Para asistencia adicional, llame al **1-800-263-2629**.

**Tenga en cuenta la información siguiente; Necesitará esta información para obtener un servicio bajo garantía.**

**Debe proporcionar el recibo de compra original para validar su garantía y recibir servicio.**

**Número de modelo:** \_\_\_\_\_

**Número de serie:** \_\_\_\_\_

**Fecha de compra:** \_\_\_\_\_

## Necesitas ayuda?

Antes de llamar al servicio, aquí hay algunas cosas que puede hacer para ayudarnos a servirle mejor.

### **Lea este manual del propietario:**

Contiene instrucciones para ayudarlo a usar y mantener su aparato correctamente.

### **Si recibe un aparato dañado:**

Inmediatamente póngase en contacto con el minorista o el constructor que le vendió el aparato.

### **Ahorre tiempo y dinero:**

Consulte la sección de solución de problemas al final de este manual antes de llamar. Esta sección le ayudará a resolver problemas comunes que pueden ocurrir.



1-800-26- Danby  
(1-800-263-2629)



## Importantes Instrucciones de Seguridad

### LEA Y SIGA TODAS LAS INSTRUCCIONES DE SEGURIDAD

#### RADIO FREQUENCY INTERFERENCE

This equipment generates and uses ISM frequencies and if not installed and used properly in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type-tested and found to comply with limits for ISM Equipment pursuant to Part 18 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation.

However, there is no guarantee that interference will not occur in particular installations. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the interference can be corrected by one or more of the following methods:

- Reorient the receiving antenna of radio or television.
- Move the microwave oven away from the receiver.
- Plug the microwave into a different outlet so that microwave and receiver are on different branch circuits.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification of this appliance. It is the responsibility of the user to correct such interference.

#### AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate the appliance with the door open as this can result in harmful exposure to microwave energy. Do not tamper with or attempt to defeat the safety locks.
- Do not place any object between the front face and the door or allow soil or cleaner residue to accumulate on the sealing surfaces.
- Do not operate the appliance if it is damaged. The door must close properly and there must be no damage to the hinges, latches, door, door seals or sealing surfaces.

#### LA CONECCIÓN A TIERRA

Este artefacto debe ser conectado a tierra. En caso de un corto circuito eléctrico, la conexión a tierra reduce el riesgo de una descarga eléctrica proporcionando un cable de retorno para la corriente eléctrica.

Este aparato está equipado con un cable que tiene un cable de tierra con un enchufe de conexión a tierra. El cable de alimentación debe estar enchufado en un tomacorriente que esté debidamente conectado a tierra. Si el tomacorriente es un tomacorriente estándar de 2 clavijas, es su responsabilidad reemplazarlo por un tomacorriente de 3 clavijas con conexión a tierra adecuada. La placa de características en serie indica el voltaje y la frecuencia para la que está diseñado el artefacto.

**ADVERTENCIA** - El uso inadecuado del enchufe de conexión a tierra puede resultar en un riesgo de choque eléctrico. Consulte con un electricista o persona de reparaciones competente si no comprende bien las instrucciones de conexión a tierra o si existe alguna duda sobre si el aparato está conectado a tierra correctamente.

#### NO UTILICE CABLES DE EXTENSIÓN

No conecte el aparato a los cables de extensión ni con otro aparato en la misma toma de corriente. No empalme el cable de alimentación. No corte ni quite en ningún caso la tercera clavija de tierra del cable de alimentación.

Si el cable de alimentación está dañado, debe ser reemplazado por el fabricante, su agente de servicio o persona calificada similar para evitar riesgos.

#### REQUERIMIENTOS DE SEGURIDAD

Asegúrese de que los componentes se reemplazarán por componentes similares y que el mantenimiento se hará por personal de servicio autorizado de fábrica, para minimizar el riesgo de encendido debido a piezas incorrectas o servicio inadecuado.

Los niños deben ser supervisados para asegurar que no jueguen con el electrodoméstico.

No cubra ni bloquee las aberturas de ventilación de este aparato.

**¡GUARDE ESTAS INSTRUCCIONES!**



## Importantes Instrucciones de Seguridad

### LEA Y SIGA TODAS LAS INSTRUCCIONES DE SEGURIDAD

#### SAFETY REQUIREMENTS

Use this appliance only for its intended use as described in this manual. This appliance is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

Do not store or use this appliance outdoors. Do not use this appliance near water.

Do not overcook food. Carefully watch the appliance when it is in use.

Remove wire twist-ties before placing items in the appliance.

Do not use the appliance for storage purposes. Do not leave items inside the appliance when not in use.

Do not heat oil or fat for deep frying as it is difficult to control the temperature of oil in a microwave.

Pierce foods with thick skins such as potatoes, squash and apples before cooking.

Some items such as whole eggs or sealed containers have the possibility of exploding when heated and should not be placed in this appliance.

Cooking utensils may become hot because of heat transferred from heated food. Pot holders may be required.

Only use thermometers which are specifically designed for use in microwaves.

Do not operate any heating or cooking appliance beneath this appliance.

Ensure that the glass tray and rollers are in the correct position before use to avoid possible spills.

Do not operate this appliance when it is empty as this will increase the heat around the magnetron and can damage the appliance or cause a fire.

If items inside the appliance should ignite, keep the door closed, turn the appliance off and disconnect the power cord.

#### SAFETY - SUPERHEATED LIQUID

Liquids are able to be overheated beyond the boiling point without appearing to be boiling due to the surface tension of the liquid. Visible bubbling will not always be present when the liquid is removed from the appliance. This could result in very hot liquids suddenly boiling over when a utensil or other item such as a tea bag is inserted into the liquid.

To reduce the risk of injury:

- Do not overheat liquids. Do not heat any liquid for more than 2 minutes per cup.
- Stir liquids before and halfway through heating.
- Do not use straight-sided containers with narrow necks as this can cause a build up of steam.
- Superheated liquid can begin to spontaneously boil when removed from the microwave. After heating, allow the liquid to stand in the microwave for 30 seconds before removing.
- Use extreme care when inserting a utensil or other item into hot liquids.

The contents of milk bottles and baby food jars should be stirred or shaken and the temperature checked before serving in order to avoid burns.

Do not defrost frozen beverages, especially carbonated beverages, in this appliance as they could explode.

Hot foods and steam can cause burns. Be careful when opening any container that has been heated in the appliance. Direct the opening away from hands and face to avoid burns.

#### SAFETY - ARCING

Arcing refers to sparks inside the microwave while it is in operation. Arcing is caused by:

- Metal or foil inside the appliance.
- Recycled paper towels being used inside the appliance, as these can contain small pieces of metal.

If arcing is present, stop operation and remove any metal or paper towels from the appliance.

**¡GUARDE ESTAS INSTRUCCIONES!**

## INSTRUCCIONES DE INSTALACIÓN

### INSTALLATION

- Remove all packing materials from the inside and outside of the appliance.
- Check the appliance for damage before using, such as a misaligned or bent door, damaged door seals, broken or loose door hinges or latches, or dents inside the cavity or on the door. If there is any damage to the appliance, do not use it, return it to its point of purchase or contact consumer care.
- The appliance must be placed on a flat, stable surface that is able to hold its weight and the heaviest food likely to be placed in the appliance.
- Do not use this appliance where heat, moisture or high humidity are generated.
- Do not clean this appliance with or use near combustible materials.
- Allow 20 cm of space above the appliance, 10 cm at the back of the appliance and 5 cm on both sides for proper air flow around the appliance. Do not block any ventilation openings on the appliance.
- Do not operate the appliance without the glass tray, roller support and shaft in their correct positions.

## INSTRUCCIONES OPERADORAS

### COOKING TECHNIQUES

To achieve the best results when cooking in this appliance, follow the suggestions below.

#### STIRRING

Stir foods while cooking to distribute heat evenly. Food at the outside of the dish absorbs more energy and will heat more quickly so stir from the outside of the dish toward the center.

#### ARRANGEMENT

Arrange unevenly shaped foods thicker, meatier parts toward the outside of the turntable so they receive more heat. To prevent overcooking, place delicate items toward the center of the turntable.

#### SHIELDING

Delicate foods can be shielded with narrow strips of aluminum foil to prevent overcooking. Use only small amounts of foil as this can cause arcing and damage to the appliance.

#### TURNING

Turns foods over midway through cooking to expose all parts to the microwave energy. This is important with large items and meat.

#### STANDING

Foods cooked in a microwave build up internal heat and continue to cook for a few minutes after heating stops. Let foods stand to complete cooking, especially meats and liquids. All liquids should be allowed to stand for a few minutes after cooking and should be shaken or stirred before consuming.

#### ADDING MOISTURE

Microwave energy is attracted to water molecules. Food that is uneven in moisture content should be covered and allowed to stand after cooking to allow the heat to disperse evenly. Add a small amount of water to dry food to help it cook.

## INSTRUCCIONES OPERADORAS

### COOKING UTENSILS GUIDE

Certain utensils are inappropriate for use in a microwave. See below for more information on which utensils are recommended, which should only have limited use and which are not recommended.

#### RECOMMENDED

**Microwave Browning Dish:** Used to brown the exterior of small food items. Follow the directions provided with the browning dish.

**Microwavable Plastic Wrap:** Used to retain steam. Leave a small opening to avoid a build up of steam. Do not place directly on food.

**Glass and Ceramic Bowls and Dishes:** Use for heating or cooking.

**Paper Plates and Cups:** Use for short term heating at low temperatures. Do not use recycled paper as they can contain metal and could ignite.

**Paper Towels and Napkins:** Use for short term heating and covering. They can absorb excess moisture and prevent splattering. Do not use recycled paper towels as they can contain metal and could ignite.

**Wax Paper:** Use as a cover to prevent splattering.

**Thermometers:** Only use those that are labeled "microwave safe" and follow all directions. Check the food in several places. Conventional thermometers can be used once the food has been removed from the microwave.

#### LIMITED USE

**Aluminum Foil:** Use narrow strips to prevent overcooking of exposed areas. Using too much foil can cause arcing and damage the appliance. Keep a distance of at least 1 inch (2.6 cm) between the foil and the inside of the appliance.

**Ceramic, Porcelain and Stoneware:** Only use if they are labeled "microwave safe".

**Plastic:** Only use if labeled "microwave safe".

#### NOT RECOMMENDED

**Glass Jars and Bottles:** Regular glass is too thin to be used in a microwave. It can shatter and cause damage or injury.

**Paper Bags:** These are a fire hazard and could ignite. The only exception is popcorn bags, which are designed for microwave use.

**Styrofoam Plates and Cups:** These can melt and leave an unhealthy residue on food.

**Plastic Storage and Food Containers:** These can melt and ignite.

**Metal Utensils:** These can cause arcing and damage to the appliance. Remove all metal before operation.

**Note:** To check if a dish is safe for use in the microwave, place the empty dish in the appliance and microwave on high for 30 seconds. If the dish becomes very hot, it should not be used.

**FEATURES**

**CONTROL PANEL**

**SPACE RESERVED FOR FEATURES IMAGE AND DESCRIPTION**

**SPACE RESERVED FOR CONTROL PANEL IMAGE AND DESCRIPTION**

## INSTRUCCIONES OPERADORAS

### FIRST TIME USE

When the appliance is plugged in for the first time, the display will show "1:01".

When setting the cook timer, the appliance will return to standby mode if there is no input within 25 seconds.

During operation:

- Press the Start/Stop button to pause the functioning.
- Press the Start/Stop button again to resume functioning.
- Press the Reset button to cancel the cooking program.

The appliance will beep at the end of a cooking program and will continue to beep every 2 minutes until a button is pressed or the door is opened.

### SETTING THE CLOCK

The clock can be set as a 12 hour clock or a 24 hour clock.

To set the current time:

1. Press the Clock button once to choose a 12 hour clock. Press the Clock button again to choose a 24 hour clock.
2. Use the number pad to enter the current time.
3. Press the Clock button to confirm.

During operation, press the Clock button to see the current time.

### TIMER FUNCTION

To set the timer function:

1. Press the Timer button, "TIME" will show on the display and ":" will flash.
2. Use the number pad to enter the desired time to run the microwave.
3. Press the Start/Stop button to begin operation.

### MICROWAVE COOKING

To set a cooking power and time:

1. Press the Power/Hold button repeatedly until the desired cooking level is set, as per the below chart. If 100% cooking power is desired, only press the Power/Hold button once.

Press Power/Hold Button	Cooking Power
Once	100% (P-100)
Twice	90% (P-90)
3 Times	80% (P-80)
4 Times	70% (P-70)
5 Times	60% (P-60)
6 Times	50% (P-50)
7 Times	40% (P-40)
8 Times	30% (P-30)
9 Times	20% (P-20)
10 Times	10% (P-10)
11 Times	0% (P-00)

2. Use the number pad to enter the desired cooking time.
3. Press the Start/Stop button to begin operation.

### ADD 30 SECONDS FUNCTION

When the appliance is not in operation, pressing the Add 30 SEC button will run the appliance for 30 seconds at 100% power level. This button can be pressed multiple times, each press will add a further 30 seconds to the cooking time.

### EXPRESS COOK

When the appliance is not in operation, press the number pad from 1 to 6 and the appliance will run between 1 and 6 minutes at 100% cooking power.



## INSTRUCCIONES OPERADORAS

### AUTO COOK

The Auto Cook buttons can be used to set automatic cooking functions for the below food types.

### POPCORN

1. Press the Popcorn button. This will automatically set the cook time for a 3.5 oz. bag of popcorn.
2. Press the Start/Stop button to begin operation.

To change the preset time:

1. Press the Popcorn button twice. "ENTER TIME" will appear on the display.
2. Use the number pad to enter the desired cook time. This new time setting will be used every time the Popcorn button is pressed. If the appliance loses power, this time will need to be reprogrammed.
3. Press the Start/Stop button to begin operation.

### POTATO

For a 4 - 6 oz. serving of potatoes:

1. Press the Potato button.
2. Press the Start/Stop button to begin operation.

### PIZZA

To reheat a slice of pizza:

1. Press the Pizza button once.
2. Press the Start/Stop button to begin operation.

To heat a whole frozen pizza:

1. Press the Pizza button twice.
2. Press the Start/Stop button to begin operation.

### BEVERAGE

For a 5 - 7 oz. serving size:

1. Press the Beverage button.
2. Use the number pad from 1 - 4 to enter the number of cups.
3. Press the Start/Stop button to begin operation.

For a 9 - 11 oz. serving size:

1. Press the Beverage button twice.
2. Use the number pad from 1 - 4 to enter the number of cups.
3. Press the Start/Stop button to begin operation.

Do not overheat liquids. Do not heat any liquid for more than 2 minutes per cup. After heating, allow the liquid to stand in the microwave for 30 seconds before removing from the appliance.

### FROZEN DINNER

For one or two small 7 - 9 oz. dinners:

1. Press the Frozen Dinner button.
2. Use the number pad to indicate whether 1 or 2 dinners will be cooked.
3. Press the Start/Stop button to begin operation.

For one or two large 10 - 12 oz. dinners:

1. Press the Frozen Dinner button twice.
2. Use the number pad to indicate whether 1 or 2 dinners will be cooked.
3. Press the Start/Stop button to begin operation.

### REHEAT

1. Press the Reheat button.
2. Press the Start/Stop button to begin operation.

## INSTRUCCIONES OPERADORAS

### COOK BY WEIGHT

1. Press the Cook By Weight button.
2. Press number 1, 2 or 3 to indicate what type of meat will be cooked, as per the below chart. Meat must be defrosted and at refrigerated temperature.

Code	Type	Maximum Weight
1	Beef	6 lbs.
2	Mutton	6 lbs.
3	Pork	5 lbs. 4 oz.

3. Use the number pad to enter the weight of the meat that will be cooked. Weight must be in pounds and ounces.

During operation the appliance will pause and beep to indicate that the meat should be turned over. Press the Start/Stop button to resume operation. Let meat stand a few minutes before carving.

### DEFROST BY WEIGHT

The defrosting time and power level are adjusted automatically once the weight is entered.

1. Press the Defrost By Weight button.
2. Use the number pad to enter the weight of the food that will be defrosted. Weight must be in pounds and ounces. Maximum weight is 6 lbs.
3. Press the Start/Stop button to confirm.

During operation the appliance will pause and beep to indicate that the food should be turned over or stirred. Press the Start/Stop button to resume operation.

### SPEED DEFROST

1. Press the Speed Defrost button.
2. Use the number pads to enter the desired defrosting time.
3. Press the Start/Stop button to confirm.

During operation the appliance will pause and beep to indicate that the food should be turned over or stirred. Press the Start/Stop button to resume operation.

### MUTE FUNCTION

Press and hold the Power/Hold button for 3 seconds to enter mute mode, which will silence all sound from the appliance.

While in mute mode, press and hold the Power/Hold button for 3 seconds to unmute the appliance.

### SETTING THE CHILD LOCK

To set the child lock, while the unit is in standby mode, press and hold the Reset button for 3 seconds. The appliance will beep to indicate that the child lock is activated. While locked, the appliance cannot be used.

To cancel the child lock, press and hold the Reset button for 3 seconds. The appliance will beep to indicate that the child lock has been deactivated.

## **CUIDADO Y MANTENIMIENTO**

### **CLEANING**

Turn off and unplug the appliance before performing any cleaning.

The inside of the appliance should be cleaned with a warm, damp cloth and mild detergents. Do not allow food splatters to build up on the inside of the appliance as this can affect the efficiency of the microwave and if sufficiently dirty, can ignite and cause fire.

The outside of the appliance should be cleaned with a warm, damp cloth. To avoid damage to internal components, do not allow any water to drip into the ventilation openings.

Clean the door and window on both sides, the door seals and the adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaners.

Do not allow the control panel to become wet. If necessary, clean the control panel with a damp cloth and then wipe dry.

The glass tray can be removed and cleaned in warm water and mild detergent or can be placed in a dishwasher.

The roller ring and oven floor should be cleaned regularly to avoid excessive noise or spilling. The roller ring can be cleaned in warm water and mild detergent or can be placed in a dishwasher. Ensure that the roller ring and glass tray are replaced in the proper position to avoid noise or spilling.

### **MAINTENANCE**

To remove odors from the microwave:

1. Combine a cup of water with the juice and skin of one lemon in a microwavable bowl.
2. Microwave on full power for 5 minutes.
3. Wipe the inside of the appliance and glass tray and roller ring thoroughly with a warm, damp cloth.

### **MICA SHEET**

Inside the appliance there is a cardboard mica sheet protecting the magnetron. Do not remove this from the appliance as exposing the magnetron to food splatters can cause arcing or fire. If it becomes dirty, the mica sheet can be cleaned with a warm cloth.

### **DISPOSAL**

This product should not be treated as ordinary household waste, it should be transported to the appropriate collection point for the recycling of electrical components. For information on local waste collection points, contact your local waste disposal agency or government office.

## SOLUCIÓN SUGERIDA

**Danby cuidado del consumidor: 1-800-263-2629**

**Horas de operación:**

Lunes a Jueves 8:30 am - 6:00 pm Hora estándar del este

Viernes 8:30 am - 4:00 pm Hora estándar del este

La información de este manual está sujeta a cambios sin previo aviso.

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>
<b>No power</b>	<ul style="list-style-type: none"><li>• A fuse may be blown or the circuit breaker tripped</li><li>• Plug not fully inserted into the wall outlet</li><li>• Door is open</li></ul>
<b>Arcing or sparking during operation</b>	<ul style="list-style-type: none"><li>• Metallic items were left in the appliance during operation</li><li>• The appliance is being operated while empty</li><li>• Spilled food has built up inside the appliance or on the mica sheet</li></ul>
<b>Unevenly cooked food</b>	<ul style="list-style-type: none"><li>• Food was not completely defrosted before cooking</li><li>• Cooking time or power level were insufficient</li><li>• Food was not turned or stirred during cooking</li></ul>
<b>Overcooked food</b>	<ul style="list-style-type: none"><li>• The power level or cooking time were too high</li></ul>
<b>Undercooked food</b>	<ul style="list-style-type: none"><li>• Food was not completely defrosted before cooking</li><li>• Cooking time or power level were insufficient</li><li>• Food was not turned or stirred during cooking</li><li>• Ventilation openings are blocked</li></ul>
<b>Poor Defrosting</b>	<ul style="list-style-type: none"><li>• Defrosting time or power level were insufficient</li><li>• Food was not turned or stirred during defrosting</li></ul>

## GARANTÍA LIMITADA "ACARREADO SOLAMENTE"

Este producto de calidad está garantizado contra defectos de fabricación, incluyendo partes y mano de obra, siempre y cuando la unidad se utilice bajo las condiciones normales de funcionamiento para las que fue diseñado.

Esta garantía está solamente disponible para la persona que haya comprado originalmente esta unidad directamente de Danby Products Limited (Canada) o Danby Products Inc. (U.S.A.) (en adelante "Danby") o uno de sus distribuidores autorizados, y no es transferible.

### CONDICIONES DE LA GARANTÍA

Las piezas plásticas, se autorizan por treinta (30) días solamente a partir de la fecha de la compra, sin las extensiones proporcionadas.

**Primeros 12 meses** Durante los primeros **doce (12) meses**, cualquier parte en buen estado de este producto que resulte defectuosa, incluyendo cualquier sistema sellado, será reparado o reemplazado, a opción del fabricante, sin cargo para el comprador original.

**Para obtener servicio** Póngase en contacto con el distribuidor donde adquirió el electrodoméstico o póngase en contacto con el centro de servicio autorizado más cercano de Danby, donde el servicio debe ser realizado por un técnico cualificado. Si el servicio es realizado por cualquier persona que no sea un depósito de servicio autorizado, todas las obligaciones de Danby bajo esta garantía serán nulas.

Es responsabilidad del comprador transportar el aparato al centro de servicio autorizado más cercano.

Los cargos de transporte desde y hacia el lugar de servicio no están protegidos por esta garantía y son responsabilidad del comprador.

Nada dentro de esta garantía implica que Danby será responsable por cualquier daño que hayan sufrido los alimentos u otros contenidos de este aparato, ya sea debido a un defecto del aparato, o su uso, adecuado o inadecuado.

### EXCLUSIONES

Salvo lo aquí indicado por Danby, no existen otras garantías, condiciones o representaciones, explícitas o implícitas, concretas o intencionales por parte de Danby o sus distribuidores autorizados y todas las demás garantías, condiciones o representaciones, incluyendo cualquier garantía, condiciones o representaciones bajo cualquier Acta de Venta de Productos o legislación o estatuto similar, quedan de esta forma expresamente excluidas. **Salvo lo aquí indicado, Danby no serán responsables por ningún daño a personas o bienes, incluyendo la propia unidad, sin importar su causa, o de ningún daño indirecto causado por el desperfecto de la unidad, y al comprar esta unidad, el comprador acepta por la presente, indemnizar y proteger a Danby contra cualquier reclamo por daños a personas o bienes causados por la unidad.**

### CONDICIONES GENERALES

No se considerará ninguna de estas garantías o seguros cuando el daño o la necesidad de reparación sea el producto de los siguientes casos:

- 1) Falla del suministro eléctrico.
- 2) Daños en tránsito o durante el transporte de la unidad.
- 3) Alimentación incorrecta, como bajo voltaje, instalación eléctrica defectuosa o fusibles inadecuados.
- 4) Accidente, modificación, abuso o uso incorrecto del artefacto, tal como insuficiente ventilación del ambiente o condiciones de operación anormales (temperatura ambiente extremadamente alta o baja).
- 5) Utilización comercial o industrial (v.g., si el electrodoméstico no está instalado en una vivienda particular).
- 6) Incendio, daños por agua, robo, guerra, disturbios, hostilidades, actos de fuerza mayor como huracanes, inundaciones, etc.
- 7) Pedidos de servicio debido a desinformación del usuario.
- 8) Instalación inadecuada (v.g., instalación de un electrodoméstico independiente o uso de un aparato al aire libre que no esté aprobado para aplicaciones en exteriores, incluyendo pero no limitado a: garajes, patios, porches o cualquier lugar que no esté bien aislado o controlado por el clima).

Se requerirá una prueba de la fecha de compra para reclamaciones de garantía; conservar las facturas de venta. En el caso de que se requiera servicio de garantía, presente el comprobante de compra a nuestro depósito de servicio autorizado.

**Servicio de Garantía**  
Acarreado Solamente

Danby Products Limited  
PO Box 1778, Guelph, Ontario, Canada N1H 6Z9  
Telephone: (519) 837-0920 FAX: (519) 837-0449

**1-800-263-2629**  
04/17

Danby Products Inc.  
PO Box 669, Findlay, Ohio, U.S.A. 45840  
Telephone: (419) 425-8627 FAX: (419) 425-8629







---

**MODEL • MODÈLE • MODELO**

**DMW07A4WDB**

**DMW07A4BDB**

**DMW09A2WDB**

**DMW09A2BDB**

**DMW09A2BSSDB**